

Hotgate Type 14623 Gate for Pasture Fence Net Instruction Manual


[Home](#) » [Hotgate](#) » Hotgate Type 14623 Gate for Pasture Fence Net Instruction Manual 

Contents


- [1 Hotgate Type 14623 Gate for Pasture Fence Net](#)
- [2 DIMENSION](#)
- [3 INSTALLATION INSTRUCTION](#)
- [4 Documents / Resources](#)

Hot Gate

Hotgate Type 14623 Gate for Pasture Fence Net

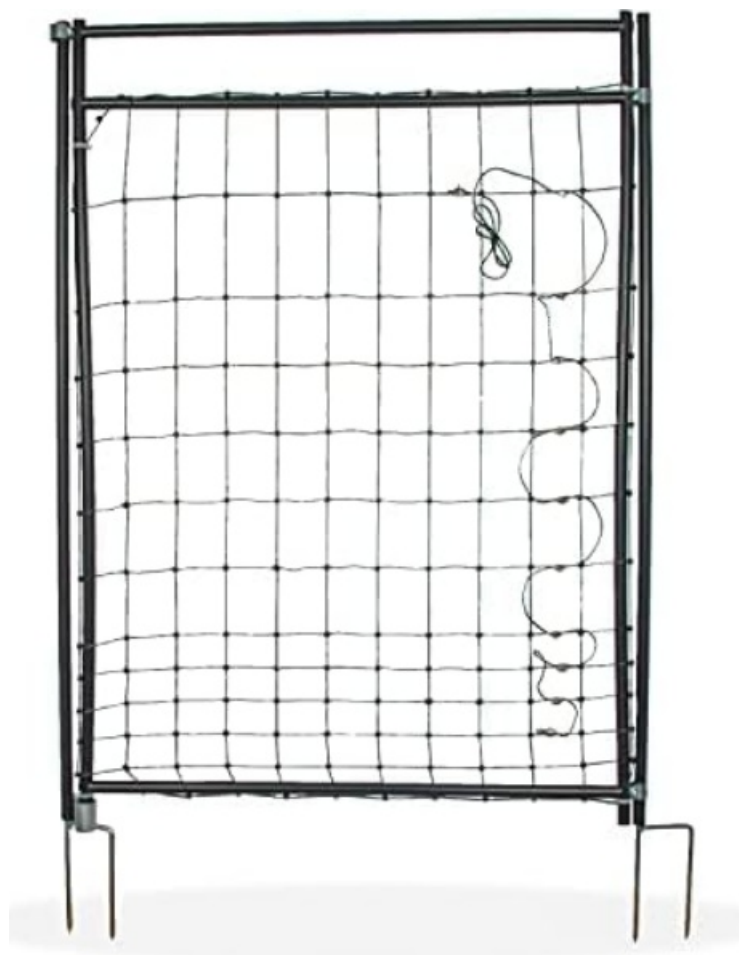


DIMENSION

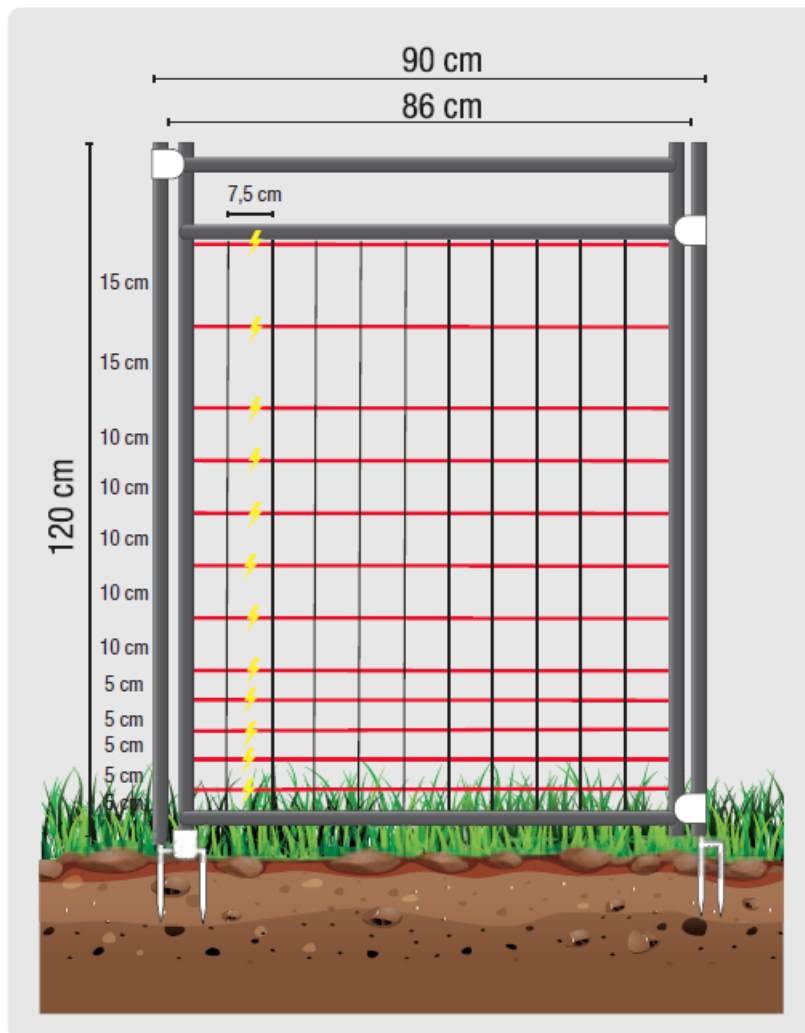


INSTALLATION INSTRUCTION


1. Overview of delivery / position of parts

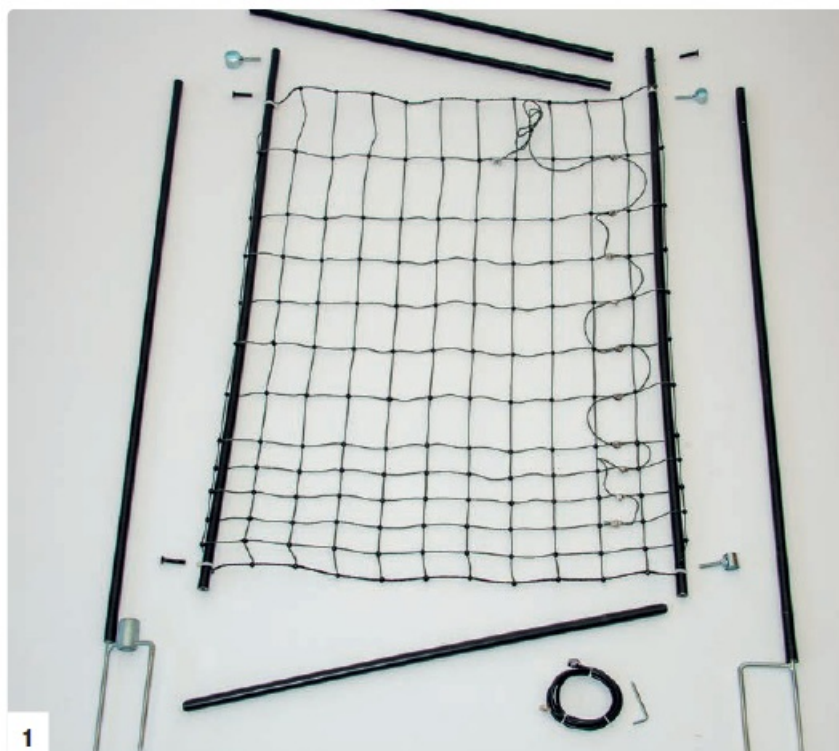


2. Threading the crossbar

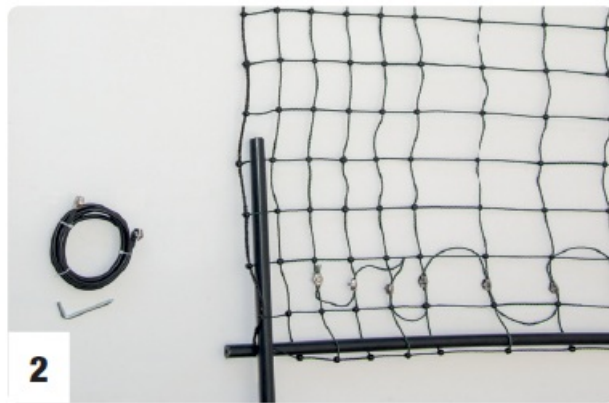

3. Fastening the crossbar with a hinge part

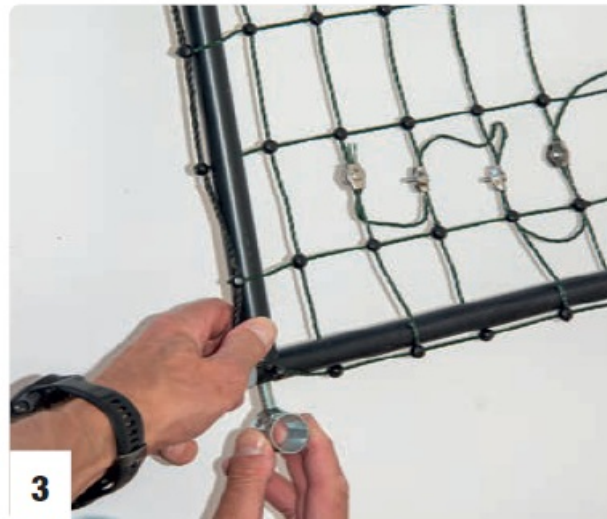


4. Correctly positioned hinge part

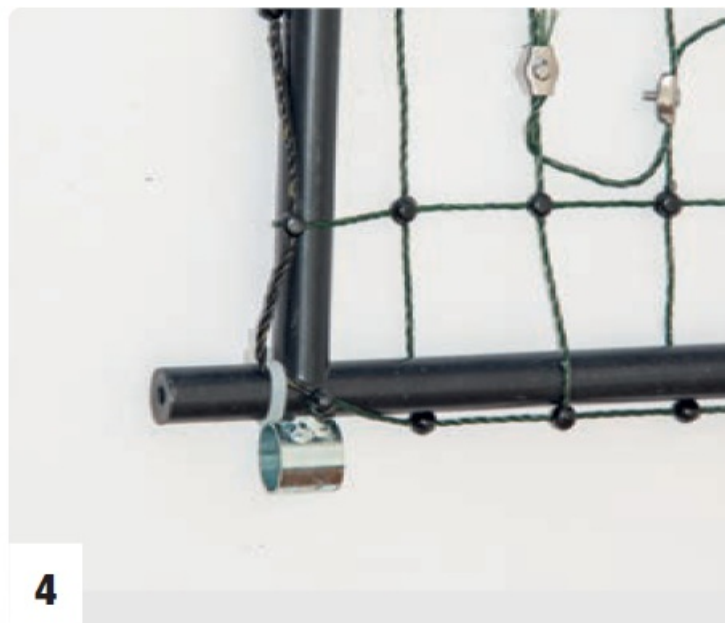

5. Fastening the crossbar with a screw



6. Overview of fully assembled gate

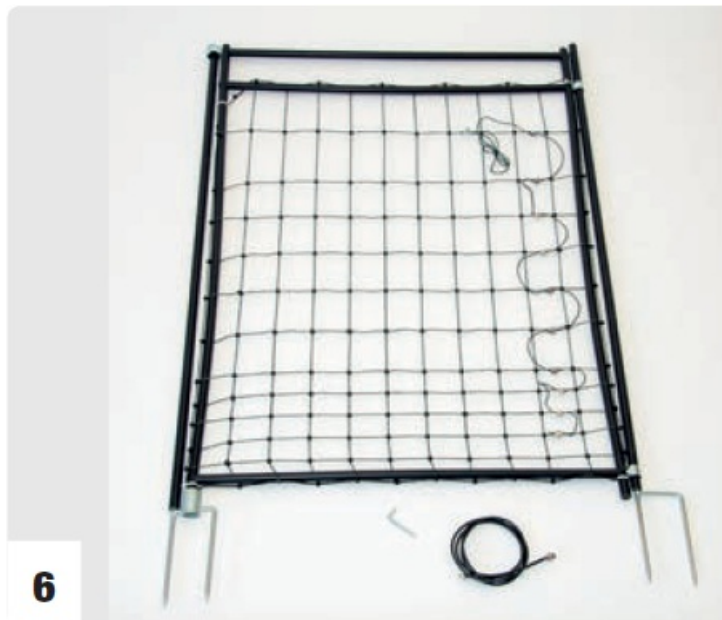

7. Setting up the gate in the field




8. Pushing the gate post into the ground around which the gate pivots



9. Hooking the gate into the gate post



10. Positioning of the stop post

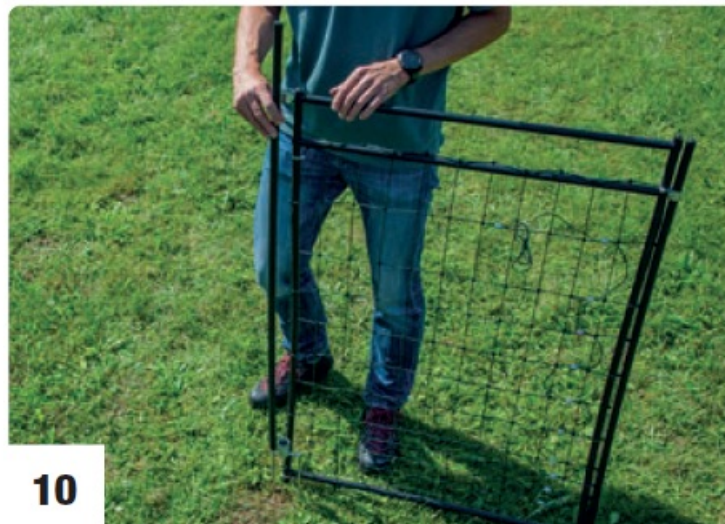

11. Place the end/beginning post of the net against the gate and connect the posts



12. Attach the net connection clamp outside the passage area



13. Connecting the electrified cross-connection in the gate to the net at the gate post/swivel point




14. Connecting the underground cable to the nets on the left and right of the gate



15. Burying the underground cable. Attention: Lay the underground cable in a protective tube



16. Open the gate by lifting it slightly by approx. 5 cm

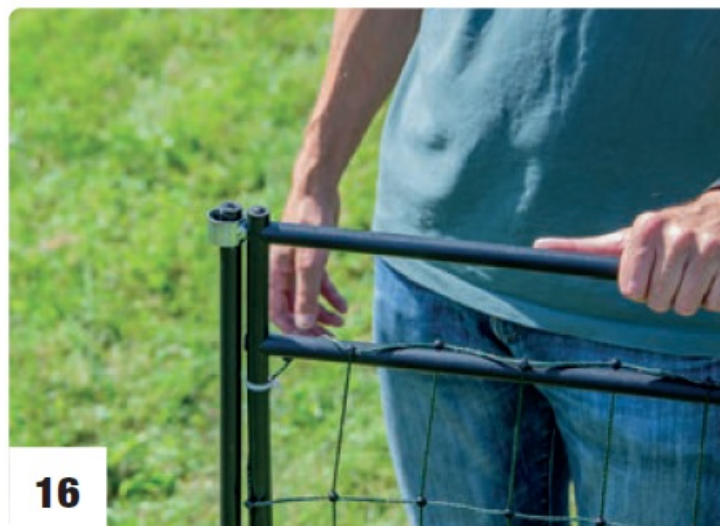

17. Open and close the gate at the upper insulated crossbar



18. Finished gate



Documents / Resources

	<p>Hotgate Type 14623 Gate for Pasture Fence Net [pdf] Instruction Manual Type 14623 Gate for Pasture Fence Net, Type 14623, Gate for Pasture Fence Net, Pasture Fence Net, Fence Net</p>
---	--