




HOTT C105 CD Player User Manual

[Home](#) » [HOTT](#) » HOTT C105 CD Player User Manual 

HOTT C105 CD Player User Manual

 


Contents


- [1 Accessories](#)
- [2 Start Step](#)
- [3 Introduction of touch button](#)
- [4 Bluetooth Function Introduction](#)
- [5 FM transmitter mode introduction](#)
- [6 Back of product](#)
- [7 Charging](#)
- [8 Parameters](#)
- [9 Common trouble shooting solutions](#)
- [10 Caution](#)
- [11 Warranty Card](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)

Accessories


- CD player

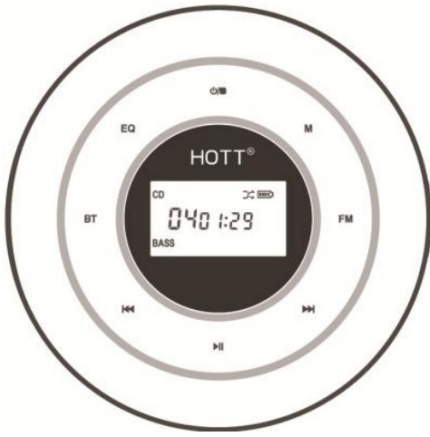


- Operation manual

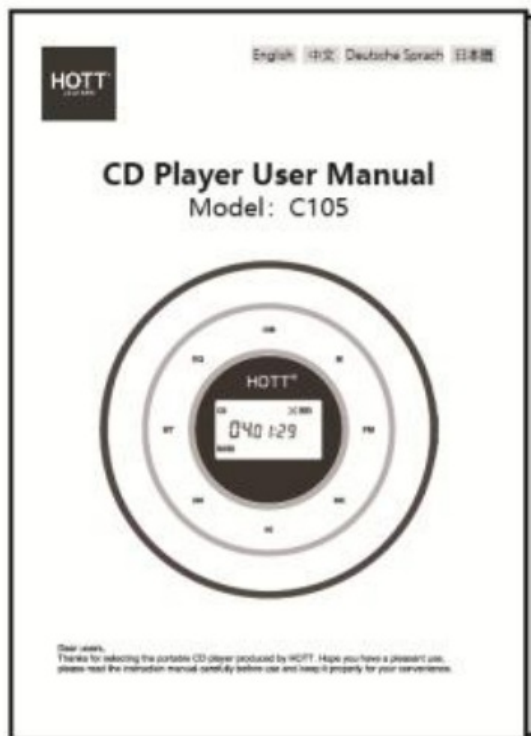 


- power cable

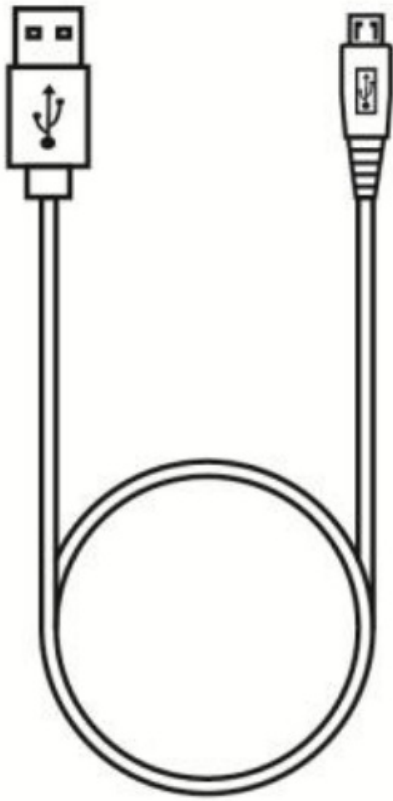 


- Audio cable

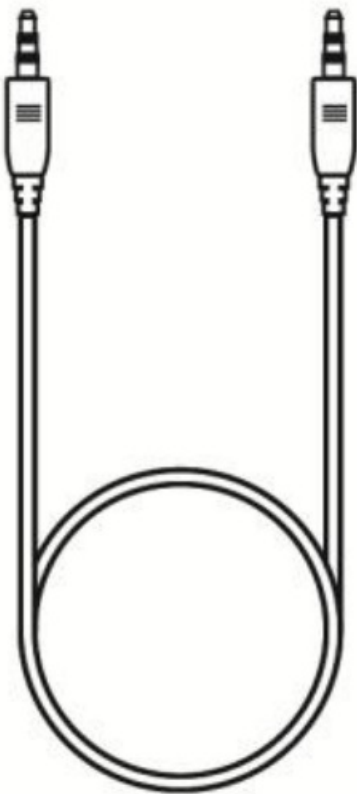 


- Earphone

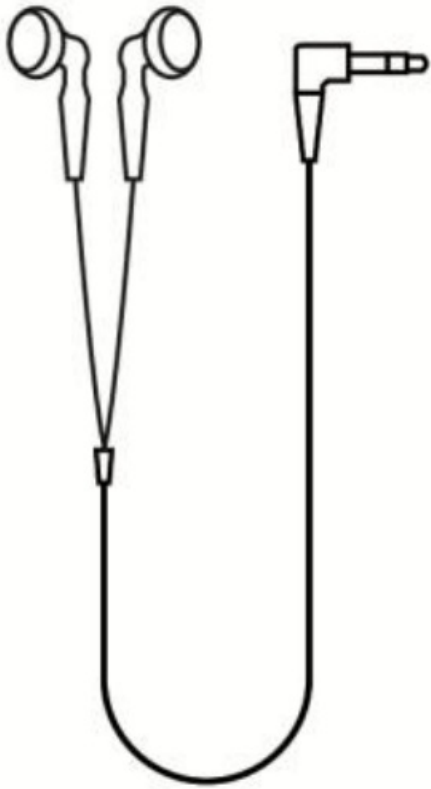 

Start Step

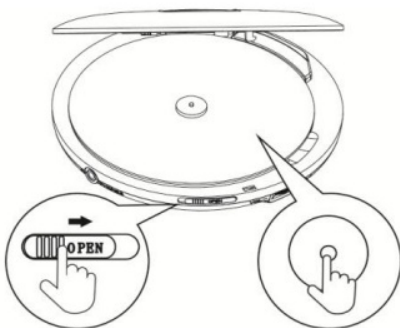 


① Open the lid

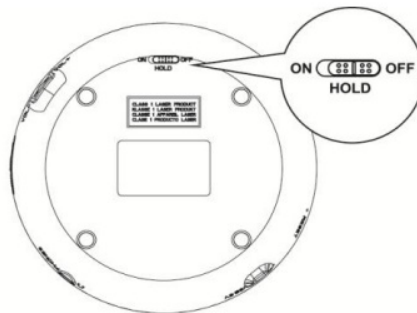 


② Place the CD to the rotator and close the lid

 ③ Switch the HOLD button to OFF

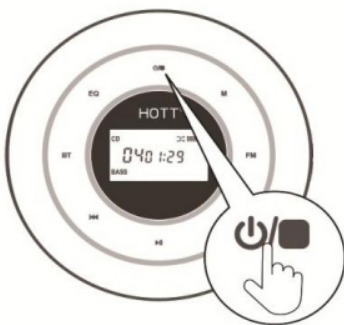

④ Hold the power button for 3 seconds

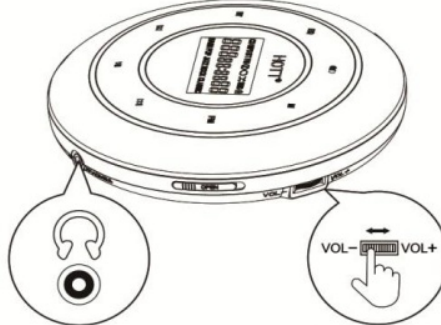 

⑤ Plug in earphones

⑥ Adjust Volume

 
Tip:








 

- When the HOLD button is in ON position, all functionality buttons are locked. When the HOLD button is in OFF

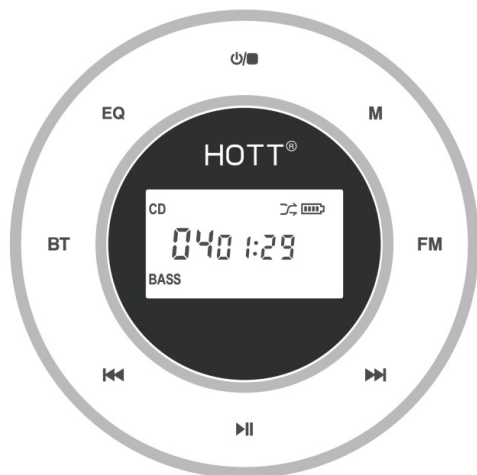position, CD Player can be used normally.

- The screen will turn off after 30 seconds of inactivity as a screen saver function. Press any button to reactivate.
- Please do not use discs with severe scratches, fingerprints, or dirt. It might cause failure to read and CD Player itself, or affect the service life of laser head.

Introduction of touch button




1. **ON/OFF**
Hold  3 seconds to turn on
Hold  3 seconds to turn off
2. **Pause/Play**
Press  to pause and resume
3. **Previous track/Rewind**
Press  one time to replay the current track
Press  twice to find the previous
Hold  to rewind
4. **Next Track/Fast Forward**
Press  to find the next track
Hold  to fast forward
5. **EQ Sound effect mode**
Press **EQ** to switch sound effect mode
EQ mode: BASS→ POP→ JAZZ→ ROCK→ CLASSIC
6. **M** Play mode
Press  to switch play mode


	Single track play
	All tracks play in order
	Shuffle play


Bluetooth Function Introduction

- Before connecting with Bluetooth, please turn on the Bluetooth device that needs to be connected, and turn off other devices that do not need to be connected to avoid interferences;
- In some cases some products may not be able to pair with this CD Player due to Bluetooth compatibility difference, please use the Audio Cable in the product accessories to connect. When a car stereo is not connecting, you can choose to use the FM transmitter to connect;
- When connecting a Bluetooth device, please unplug the headset, Bluetooth and headset cannot output audio at the same time;
- FM radio and Bluetooth cannot be used at the same time.


1. Bluetooth speaker/headset Connection:

 
1. When CD Player is on, hold **BT** to turn on Bluetooth;
2. When  is flickering, the device is ready to connect;

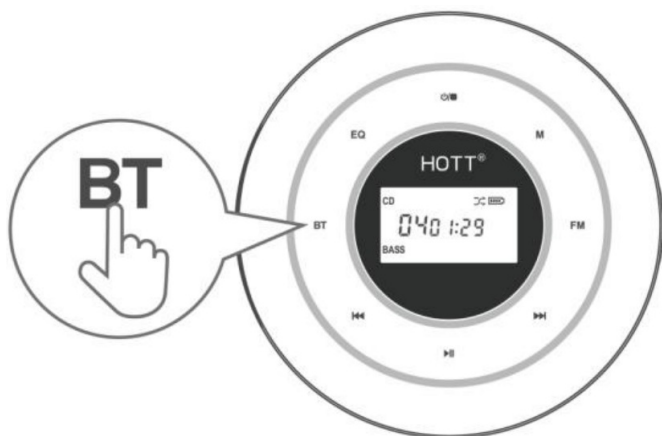

3. Turn on the Bluetooth speaker/headset to enter pairing mode.
4. Once connected,  will stop flickering, The connection process may take 20s~60s.

2. Car Bluetooth connection:

 
1. When CD Player is on, hold **BT** to turn on Bluetooth;
2. When  is flickering, the device is ready to connect;

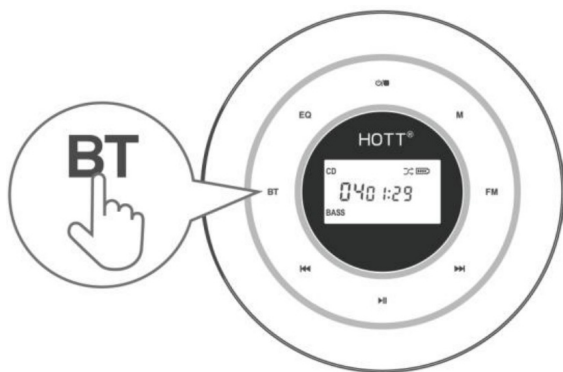


3. Turn on car Bluetooth, find the device "HOTT-CD" and match the connection automatically. Some car Bluetooth requires a PIN code (which is initially 000000 and can be changed later);

4. Once connected,  will stop flickering.

 3. Exit Bluetooth mode

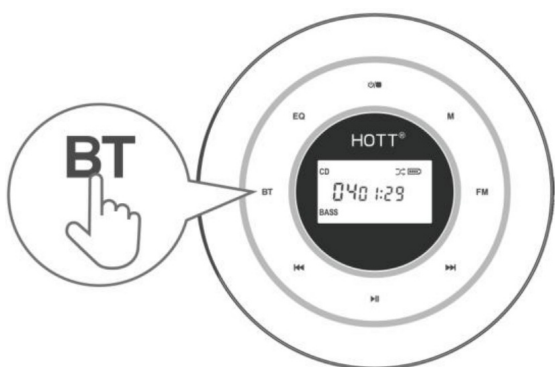



- Hold **BT** until the icon  disappears.

 FM transmitter mode introduction



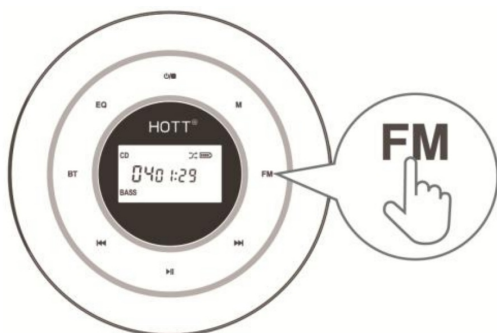

- The FM mode is only suitable for cars with FM function;
- CD Player supports 5 fixed frequency points F87.5 F88.1 F89.1 F90.5 F95.5;
- FM and Bluetooth cannot be used at the same time.

 
1. Car FM Connection



1. When CD Player is on, hold **FM** to turn on FM connection;
2. Hold  to switch frequency point F87.5 F88.1 F89.1 F90.5 F95.5;
3. Adjust the frequency of car tuner to the same frequency of the CD Player for connection; For example


adjust the frequency of both car equipment and CD Player to F90:5MHz and play music.

4. Press  to Pause/Play, press  to replay the current track, press  twice to find the previous track, Press  to find the next track. (Only supports track switching or pause and play on the CD Player itself, not on receiving device.)

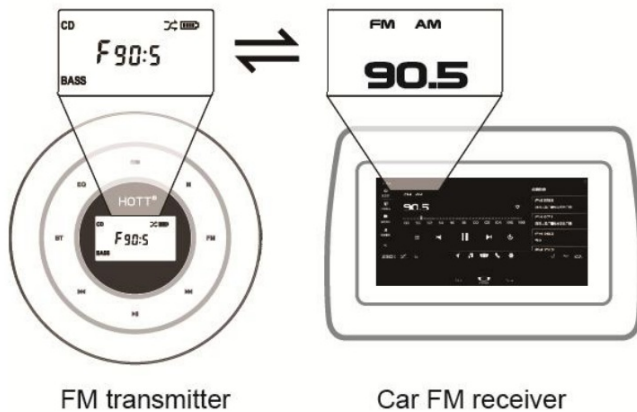


Tune the CD player and car stereo to the same frequency, for the car stereo to receive the input from the CD player.

 2. Exit FM mode

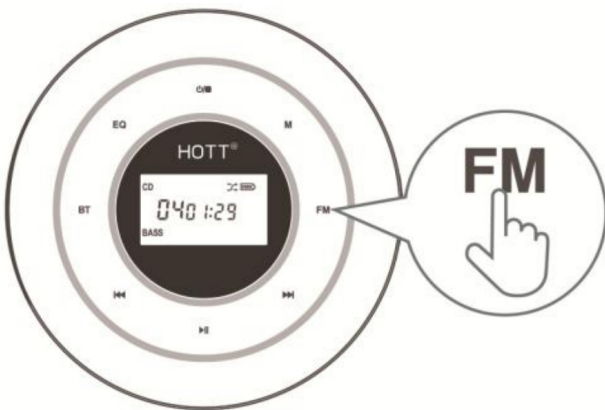

- When FM mode is on, hold to end **FM** connection mode.

 Back of product

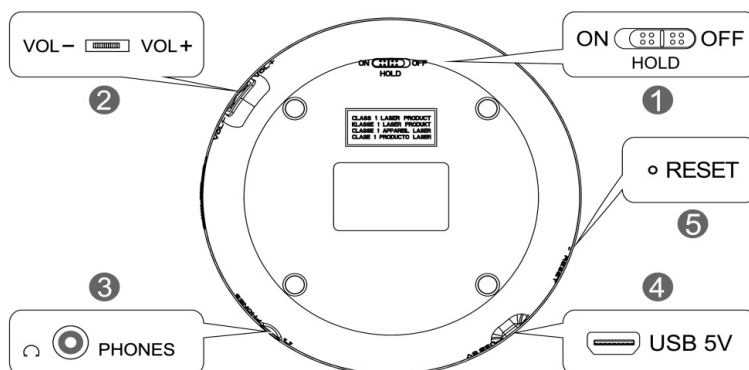


HOLD (ON/ OFF): Lock button switch

- **ON:** All buttons will be locked
- **OFF:** Unlock

Note: Before power on, you need to put the button to the “**OFF**” position.


- **VOL -/VOL+:** Adjust the volume
- **PHONES:** Earphone jack
- **USB 5V:** USB power supply
- **RESET:** Reset / shutdown

 Charging

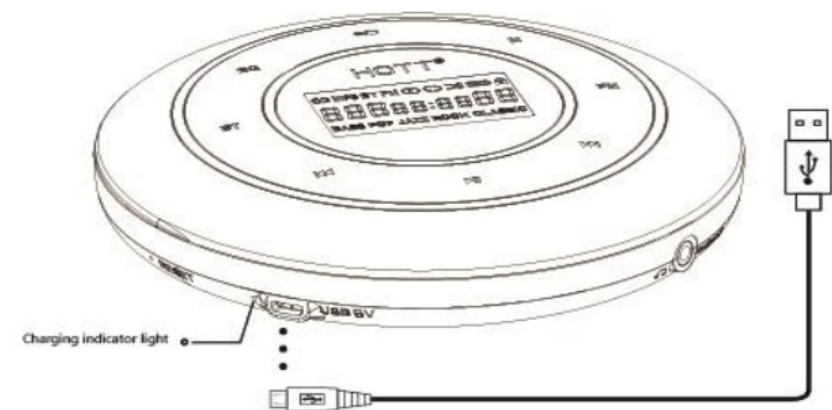

Attention

The power adaptor for the equipment the voltage and power should be 5V-1A by USB. An adaptor over 9V will damage the equipment.






1. When  is visible, the charge is low and a power source is needed for further use.
2. Adaptor with 5V – 1A is required. The USB provided works for charging. The light turns red when charging.

Parameters

Power	USB 5V-1A
Supported CD type	CD, MP3, CD-R, CD-RW
Supported music format	CD-DA, MP3, WMA
Lithium battery	3.7V 1800mAh
Charging length	4-5 hours
Play length	8-10 hours
Distance of Bluetooth	10meters
Size	φ 142X30.5mm

Common trouble shooting solutions



Trouble	Possible reason	Solution
Failure to turn on	Check if the HOLD is switched to ON	Switch HOLD to OFF for unlocking
	The equipment is low on power	Use the USB we provided to recharge the adaptor with the voltage and power of 5V1A)
Failure in recognizing the discs	Check if the CD is seriously scraped, scratched, or otherwise damaged	Change the disc
	Check if the format is compatible with the equipment	Change to a CD that is compatible with the equipment
Low volume	Check if the earphones are properly connected	Plug in earphones or change to other earphones
	Check the volume level	Adjust if needed by pressing VOL+
Failure to charge	Check that the USB interface and USB cable are in good condition	Change to other USB cable
Failure in connection with Bluetooth	Check to ensure that all equipment is available for pairing	Both equipment need to be available for pairing
	Distance exceeds the effective distance of Bluetooth connection	Get closer and reconnect
FM connection is weak or fails.	Check if the car equipment is set to the same frequency with the CD Player	Change to same frequency and try again
	There are distractors around	Switch direction
Buttons are not functional	Check if the button HOLD is switched to ON	Switch HOLD to OFF for unlocking

Stops or automatically turns off when playing	Check if the play mode is  ALL track s play in order	The CD Player will turn off automatically once the list is completed
Tracks get skipped when play	Check if the discs are dirty or damaged	Change the disc
Failure to turn off	Check if you have pressed  for over 3 seconds	Press RESET to restart
 on the screen	The equipment is locked	Switch HOLD to OFF for unlocking
Error on the screen	Device crashes or the disk reader is stuck	Press RESET to restart
OPEN on the screen	The lid is not well closed	Close the lid
UP on the screen	Operations have no effect	Press RESET to restart
DISC on the screen	The equipment fails to recognize the disc	Inspect and replace disc
  On the screen	The equipment is low on power	Use the provided chargers for recharging

Caution

Please read carefully and follow the notes for optimal use of the CD Player.

- Do not put heavy objects on top of the CD Player and protect it from impact.
- Do not place CD Player close to strong magnetic fields or electric fields.
- Do not expose battery to flame or extreme heat.
- Do not play at high volumes to protect hearing.
- Do not expose the CD Player to excessive dust or sand, moisture, rain, or mechanical shock.
- Do not use ethyl alcohol or benzene solvent to clean, instead, use slightly damp fabric.
- Do not use headphones or car player when driving, cycling, or using any motorized vehicle.
- Do not take apart, attempt repair or modify the equipment yourself. HOTT will not be responsible for damages resulting from these behaviors.
- Do not improperly discard the package, battery and the electronic equipment.

	Warning	
	Avoid using Headphone at high volume	
Hearing experts advice against Continuous. long and extended play		

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: — Reorient or relocate the receiving antenna. — Increase the separation between the equipment and receiver. — Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. — Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the **radiator your body**: Use only the supplied antenna.

FCC ID: YB2-C105

Warranty Card

Product Name _____

Product Type _____

Date _____

Seller _____

Name _____

Phone _____

Address _____

Above information is filled in by the user

Trouble description 1 _____


Solution 1 _____

Trouble description 2 _____

Solution 2 _____

Above information is filled in by the maintenance personnel

 HOTT®

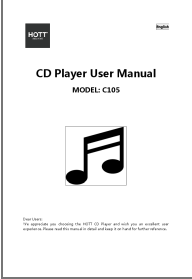 The image shows the front cover of the HOTT C105 CD Player User Manual. At the top left is the HOTT logo. Below it, the text 'CD Player User Manual' and 'MODEL: C105' is printed. In the center is a large graphic of a musical note. At the bottom, there is a small disclaimer: 'Dear Users: The information you are viewing on this HOTT CD Player user manual is available on our website. Please visit our website to download and keep it as a reference for future use.'	<p>HOTT C105 CD Player [pdf] User Manual C105, YB2-C105, YB2C105, C105 CD Player, C105, CD Player, Player</p>
---	--

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.