

 


Contents [[hide](#)]

- [1 HOTT C901 CD Player](#)
- [2 Safety Precautions](#)
- [3 Package Contents](#)
- [4 Buttons and Function Operations](#)
- [5 CD Recording Operation](#)
- [6 Bluetooth Transmitting Operation](#)
- [7 Charging instructions](#)
- [8 Specifications](#)
- [9 After-sales Information](#)
- [10 FCC Statement](#)
- [11 Frequently Asked Questions](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)

HOTT

HOTT C901 CD Player

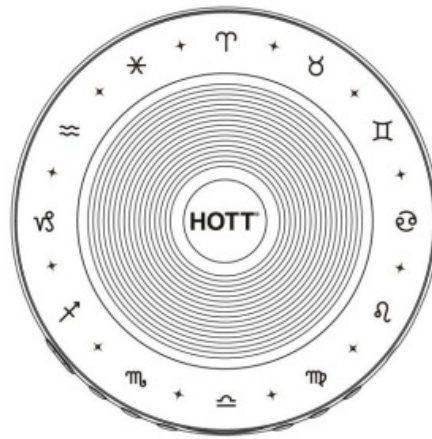

Dear user,

Thank you for choosing and using the CD player produced by our company. Please read this manual carefully and keep it properly for better user experience. We hope you enjoy it.

Safety Precautions

To use this CD player safely and correctly, please read and adhere to the following precautions:

 
- Do not subject the main unit to severe impacts;
- Avoid proximity to strong magnetic or electrical fields;
- Do not expose the batteries to heat or fire;
- Do not set the volume too high, for it will hurt your hearing;
- Keep the CD player away from moisture, rain, sand, heat sources, and chemicals such as benzene, diluents;
- For cleaning the CD player, use a slightly wet soft cloth to do it. Do not use alcohol, benzene solvent, or other chemical substances to do the cleaning;
- Do not operate the CD player or headphones while riding a bike/motorcycle or driving a car to prevent danger;
- Do not disassemble, repair, or modify the CD player on your own. Responsibilities of damage arising from improper operations should be borne by the user;
- Dispose of packaging, batteries, and old electronic products properly by sorting.
- Do not use discs with significant scratches, fingerprints, or dirt, as this may result in reading errors and CD player malfunctions or affect the service life of the laser head.

Warning

Excessive volume can damage hearing


To protect your hearing, please avoid prolonged use

Package Contents

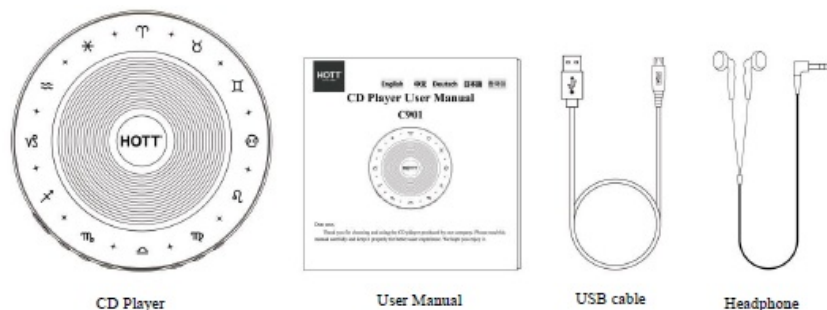

Buttons and Function Operations

 •

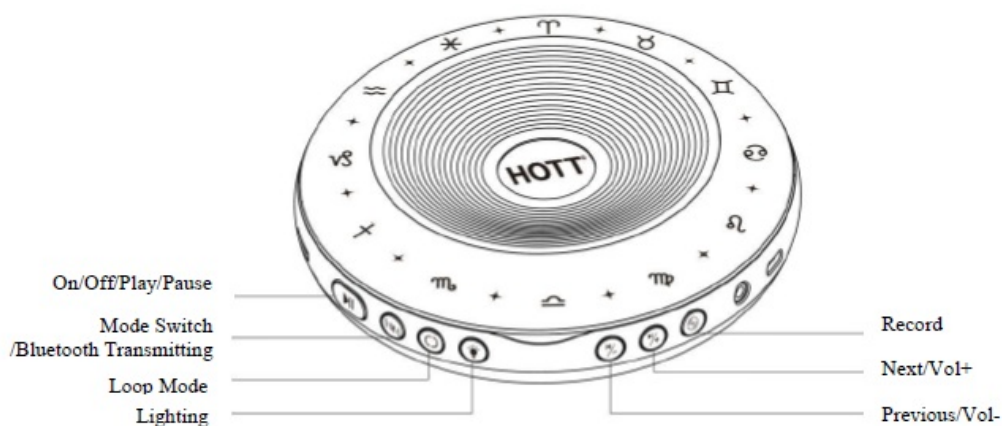

▶ On/Off/Pause/Play

Hold for 3s to turn on;

In play mode, press to pause, and press again to play.

After playing CD or TF in sequential mode, it will automatically shut down if there is no operation within 3 minutes.

• M Mode Switch/Bluetooth Transmitting

After powering on the device, briefly press it to switch the play mode: CD→TF;

Long press: to enable/disable Bluetooth Transmitting (while playing CD/TF)



Loop Mode

Press while playing: Play song on loop → All songs on loop.

Defaults to sequential playback after power up.

• Lighting

Press to switch to Dream Color lighting mode: Five modes;

Hold to turn off lighting; press to turn on the lighting when it's turned off;

Press twice to enter the game mode, the white light moves fast, press the white light to stop, press again to resume, hold to exit the game mode.

Previous/Volume-

Press while playing: to turn down the volume;

Long press: previous song.

Next/Volume+

Press while playing: to turn up the volume;


Long press: Next.

Record



Press while playing CD: to start CD recording (to TF).

CD Recording Operation

1. While playing a CD, briefly press  the button to start recording, saving the music from the disc to the TF card;

2. The LED screen will simultaneously display “88” character and the  icon;



3. To exit the CD recording, briefly press  the button again, and the icon  on the screen will disappear;




4. The music recorded can be switched to TF card play mode for listening.

Note:

1. This function only works when a TF card is inserted;

2. This function only supports recording during playing;

Bluetooth Transmitting Operation

1. While playing a disc/TF card, hold the **M** button to switch to Bluetooth Transmitting mode;
2. The icon  on the LED will flicker, indicating that the Bluetooth search mode is on;
3. Turn on the Bluetooth speaker or Bluetooth headphones, and put them into Bluetooth pairing mode;
4. After connection success, the Bluetooth icon  will stop flickering. The connection process may take 20-60 seconds.
5. Hold again **M** to turn off the Bluetooth Transmitting mode, and the icon  will disappear.



Charging instructions

Important notes:

The power adapter for this product is of USB 5V-1A supply voltage. Using an adapter with a voltage higher than 5V to charge this product can damage the internal chip of the device, rendering it unusable.

1. When the screen displays Lo, please recharge the CD player as soon as possible;
2. We recommend using a 5V-1A charging adapter and the provided USB cable to charge the CD player.

During charging while turned on, the indicator light will turn constant red. When fully charged (approx 3 hours), the indicator light will turn constant blue; during charging while turned off, the display shows the power level and flashes (10, 20, 30 ... 90) and shows (—) after fully charged.

Specifications

Product Name:	CD Player
Model:	C901

Power Input:	USB 5V-1A
Supported Disc Formats:	CD/MP3/CD-R/CD-RW
Supported Music Formats:	CD-DA/MP3/WMA
Disc Size:	12CM or 8CM
Bluetooth:	Supports Bluetooth transmitting
Bluetooth Version:	V5.3
Bluetooth Range:	10m
Built-in Lithium Battery:	3.7V/1800mAh
Charging Interface:	USB Type-C

Charging Duration:	About 3.5 hours
Battery Life:	6-7 hours (lighting on)
Lighting:	RGB color + rhythm
TF Card:	Supported, 1GB-128GB
TF card audio formats:	MP3/FLAC/WMA/WAV/AAC/APE
Product Dimensions:	Diameter 15.6*Height 4.3CM
Packaging/Weight:	595g/310g
Outer Packaging Dimensions:	L 19.4*W 19.4*H 5.7CM

After-sales Information

- Hongfutai E-tech (Shenzhen) Co., Ltd.

- Address: 201, Complex Building, Building F, ICC Industrial City, Hourui Community, Hangcheng Street, Bao'an District, Shenzhen
- Website: www.hottaudio.com
- E-mail: info@hottaudio.com
- Are you satisfied with the product? If you have any questions, please contact us via email.
- We will reply within 24 hours.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions


1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.


Frequently Asked Questions

Abnormality	Possible causes	Solution
Unable to power on the product	Low battery so that unable to power on the product	Charge the product using the provided USB cable (adapter output)
Unable to read discs	Check the disc for severe scratches, marks, cracks, fingerprints, or dirt	Replace the disc with a newer or cleaner one
	Check if the disc format is one of those supported by the CD player	Substitute a format supported by the CD player

No sound	Headphones are not plugged into the jack	Replug or replace the headphones
	Check if the volume of the CD player has	Turn up the volume by using the
Unable to charge	Poor quality of USB port or USB cable	Replace the USB cable
Unable to connect to Bluetooth devices	The device being paired is not in Bluetooth pairing mode	The CD player and the device paired should be in Bluetooth pairing mode
	The device being connected is beyond the	Get the device closer and reconnect


The play stops or the device shuts	Check if the play mode is  (All songs on loop)	If it's not set, the CD player will stop or shut down automatically
Some songs are skipped	Check if the disc is dirty or bears scratches	Replace the disc
OP is displayed	The top cover is not closed	Close the top cover
NO is displayed	The disc is not read or is absent	Load the disc again

Documents / Resources

	HOTT C901 CD Player [pdf] User Manual C901, C901 CD Player, CD Player
--	--

References

- [User Manual](#)



C901, C901 CD Player, CD Player,

HOTT HOTT

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.