



HOTT CD711 Portable CD Player User Manual

[Home](#) » [HOTT](#) » HOTT CD711 Portable CD Player User Manual 

HOTT CD711 Portable CD Player User Manual



Dear user:

 
Thank you for choosing a portable CD player from HOTT. We wish you a happy experience, please read this manual carefully before use and keep this manual in a safe place for your use.

Contents


- 1 Accessories
- 2 Start Step
- 3 Key Function Description
- 4 Bluetooth Functions
- 5 Function 1: Short press to select Play mode.
- 6 Function 2: Bluetooth mode
- 7 Back Function Introduction
- 8 Charging Instructions
- 9 Specifications and Parameters:
- 10 Safety Precautions:
- 11 Aftermarket Information :
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

Accessories


- CD Player

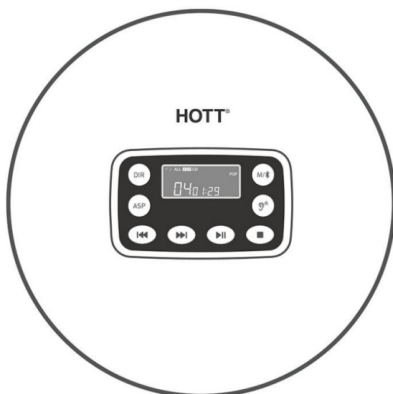


- Operation manual

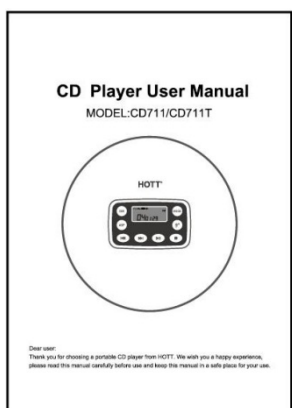 


- Power cable

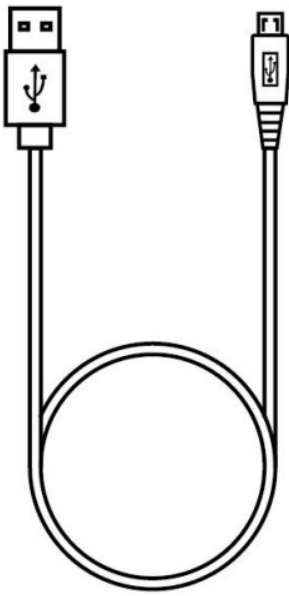 

- Audio cable


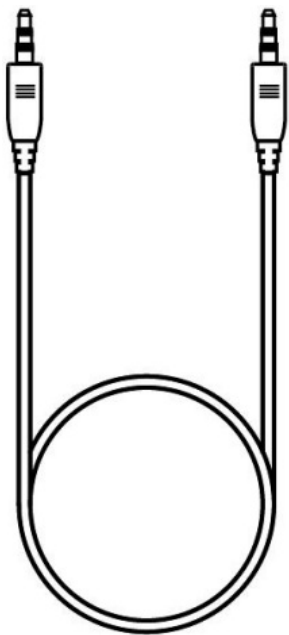 


- Earphone

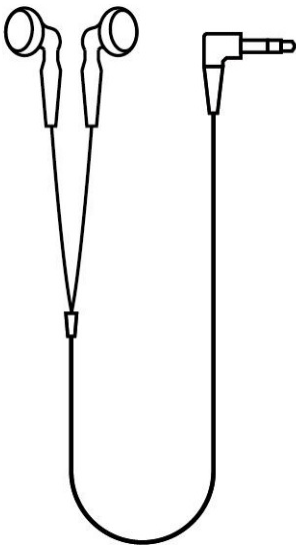 





  






Start Step

 
1. Set the HOLD button to the UNHOLD position








-  : Power on/play/pause
 - After power supply, press and hold for 3 seconds to turn on and play, while playing, short press to pause.
-  : Stop/shut down
 - Press once, ends playback; press twice switches the device off.
-  : Press once to replay the current song.
 - Short press twice to select previous song.
 - Long Press to fast backward.
-  : Short press to select the next song; long press to fast forward.
-  : Switch the anti-shock system on/off.
 - Open by default.
 - **CD:** 40 seconds.
 - **MP3 disc:** 120 seconds.
-  : Select the next album (Only for MP3 format).
-  : Select sound effect.
 - **You can choose five sound effects:** BBS (Bass), Pop, Jazz, Rock, Classic.
-  : Select Play mode
 -  1 Current track loop Playback.
 -  ALL All tracks will be looped.
 -  DIR All the files of the current album are played back repeatedly(Only MP3 DISC).
- **INTRO** The first 10 seconds of each title or file are played.
- **SHUF** All files or tracks are played back in random order.

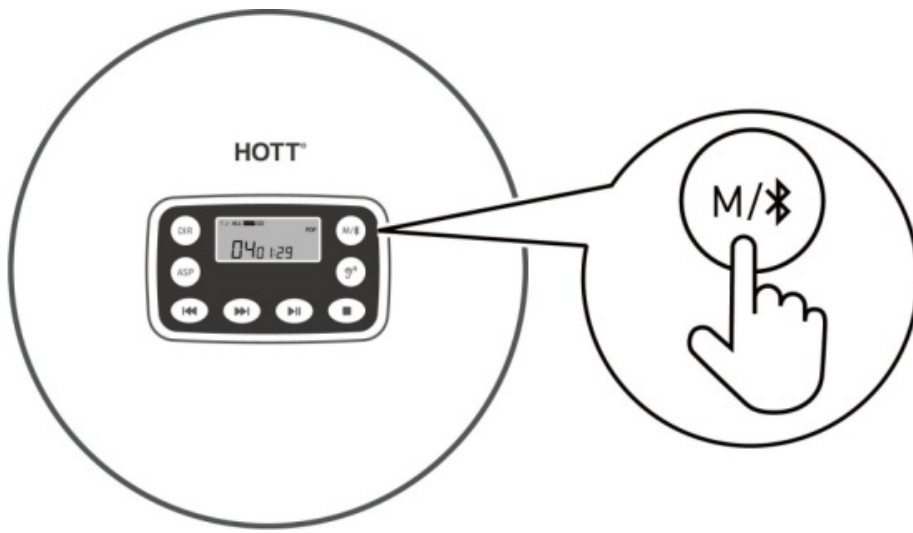 



Bluetooth Functions



Function 1: Short press  to select Play mode.

-  1 Current track loop Playback.
-  **ALL** All tracks will be looped.
-  **DIR** All the files of the current album are played back repeatedly (only MP3 DISC).
 - **INTRO** The first 10 seconds of each title or file are played.
 - **SHUF** All files or tracks are played back in random order.


Function 2: Bluetooth mode

1. Long press  to turn on the Bluetooth transmission, the icon  will flash in the LCD display. Then CD player will try to pairing with your Bluetooth device automatically.
2. When CD player had paired with your Bluetooth device, the icon  stop flash, you will hear the music from your Bluetooth device.
3. In Bluetooth mode, long press to disconnect the Bluetooth transmitter, the Bluetooth icon  disappears.

Notes

1. Before the CD player connects to the Bluetooth speaker/earphone, make sure that your Bluetooth speaker/earphone is not connected to other devices.
2. Pairing lead time would be around 15-50 seconds.
3. When playing in Bluetooth mode, please make sure the wire earphone is unplugged.
4. CD player only can be paired with one Bluetooth device at a time. If there is more than one Bluetooth device around the CD player, it may randomly pair one of them.
5. The paired device is automatically connected when it restarts.

 Back Function Introduction

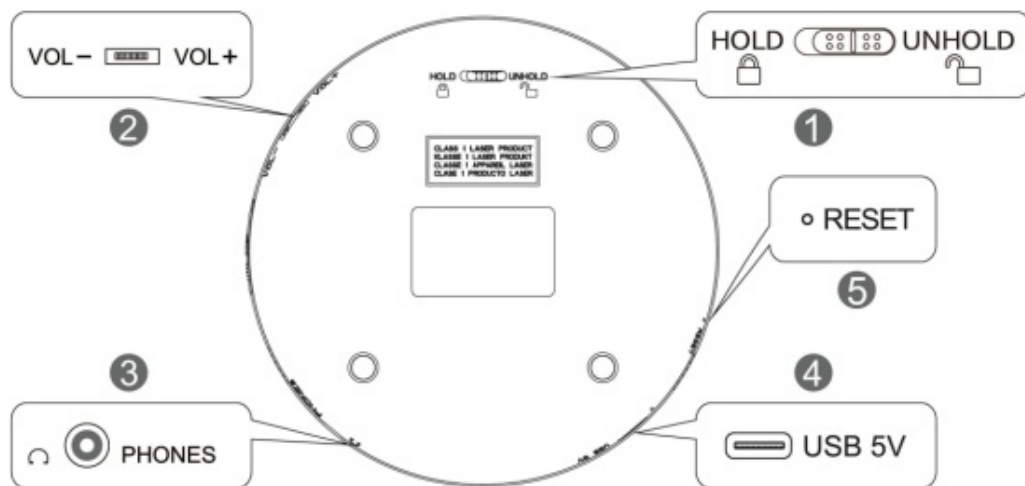

HOLD: Lock/Unlock the status (turn it to the **UNHOLD** position before turning on this product)

-HOLD: Lock – UNHOLD: Unlock


VOL-/VOL+: Adjust the volume

PHONES: Earphone jack

USB 5V: USB power supply


RESET: Reset / shutdown

 Charging Instructions

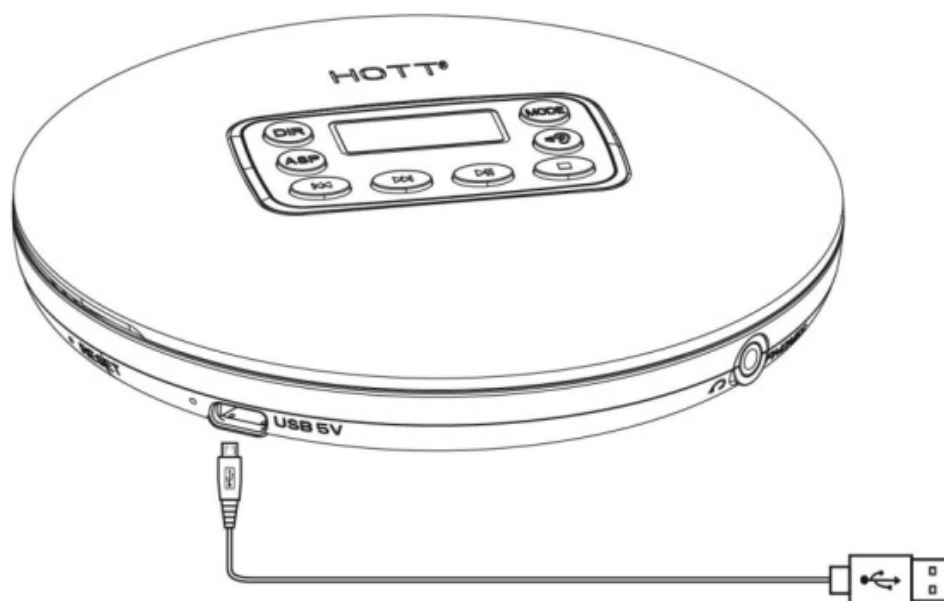

❖ Attention:

The power adaptor for the equipment: the voltage and power should be 5V-1A by USB.
An adaptor over 5V will damage the equipment.

1. When  is visible, the charge is low and a power source is needed for further use.
2. Adaptor with 5V – 1A is required. The USB provided works for charging.
The light turns red when charging.
The light turns blue when the charge is completed (after 2~3 hours).

Specifications and Parameters:

Power input: USB – 5V 1A

Supporting disc format: CD original disc, MP3 disc, CD-R, CD-RW;

Support music formats: CD-DA, MP3, WMA

Charging time: 2-3 hours

Play time: 6-8 hours



Overall dimensions: ϕ 142X29mm

Bluetooth transmit distance: 10 m

Safety Precautions:

Please read carefully and follow the notes for optimal use of the CD Player.

- Do not put heavy objects on top of the CD Player and protect it from impact.
- Do not place CD Player close to strong magnetic fields or electric fields.
- Do not expose battery to flame or extreme heat.
- Do not play at high volumes to protect hearing.
- Do not expose the CD Player to excessive dust or sand, moisture, rain, or mechanical shock.
- Do not use ethyl alcohol or benzene solvent to clean, instead, use slightly damp fabric.
- Do not use headphones or car player when driving, cycling, or using any motorized vehicle.
- Do not take apart, attempt repair or modify the equipment yourself. HOTT will not be responsible for damages resulting from these behaviors.
- Do not improperly discard the package, battery and the electronic equipment.

	Warning	
	Avoid using headphones at high volume	
Hearing experts advise against continuous, long and extended play		

Important reminder:

Cracked discs may cause the player to malfunction. Do not use it. For example, serious scratches on the signal surface of the disc, fingerprints and dirt may cause equipment malfunction or shorten the life of the laser head.

Aftermarket Information :

HONGFUTAI E-TECH(SHENSHE)CO.,LTD

ADD: Room 201, Building F, ICC Industrial City, Hourui Community, Hangcheng Street, Baoan District, Shenzhen, Guangdong, China

Web Address: www.hottaudio.com


E-mail: info@hottaudio.com

Are you satisfied with the product?if you have any auestion, please contact us by Email message.

We will reply all within 24 hours.



Documents / Resources

	<p>HOTT CD711 Portable CD Player [pdf] User Manual CD711, CD711T, CD711 Portable CD Player, CD711, Portable CD Player, CD Player, Player</p>
--	--

References

- [HOTT Portable CD player MP3 Player | HOTT – hottaudio](#)
- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.