



## HWTH Horizontal Hotwire Thermostat Instructions

[Home](#) » [Hotwire](#) » HWTH Horizontal Hotwire Thermostat Instructions 



Hotwire Thermostat  
Instructions  
Model Number: HWTH Horizontal



## Contents

### 1 Hotwire Thermostat

#### Instructions

### 2 Programming your Thermostat.

### 3 Installation and Wiring

### 4 Technical Information

### 5 Documents / Resources




#### 5.1 References

## Hotwire Thermostat Instructions



### LCD symbols

#### Icon Legend

	The buttons are locked
	Heating is turned on
	Frost protection activated
<b>AUTO</b>	Automatic mode, executes the programmed schedules
<b>Override</b>	Temporary temperature override
<b>Er</b>	The floor sensor is not being read by the thermostat

### Setting the clock and day of the week

This thermostat is fitted with a real time clock. It is essential that the clock time and day are set accurately if you require your programmed events to start on time. To set follow the steps below:

1. Touch the “Time” and the time will start flashing. Use the up and down arrows to set the time. By holding the arrow down the time will change faster.
2. Touch the “Day” and then press the + or – buttons to adjust. Sunday is day “1”

3. Press **DONE** to store and exit.

### Setting the Programme Schedules

This thermostat has the ability to programme each individual day of the week separately, or programme 7 days of the week at once.

### Programming your Thermostat.

This section will help you programme your thermostat automatically. If you want to simply turn it on and off when required skip this section.

1. Press Set Schedule The current Day will flash. Press "All Days" to set the same heating schedule for every day.  
Or press next to set each day differently.
2. Press **NEXT** and **Program 1** is displayed. This is the first programme function of the day.
3. The time is now flashing. Select the time you want the heating to come on in the morning. Then press next.
4. The temperature is now flashing. Set the temperature that you want the floor to heat to. Then press next.
5. The LCD screen will show programme 2 Program 2 and the time will be flashing. This is the time that the thermostat will switch off in the morning.
6. Press **NEXT** and the temperature will start flashing. This can be used to maintain a minimum temperature. In most cases this is not required and the temperature should be set to 5.
7. Press **NEXT** and the **Program 3** icon will display. The time is also flashing. Set the time at which you want the heating to come on in the afternoon or evening. **NOTE:** If you do not wish the heating to come in the afternoon, simply set the "off" time for only a couple of minutes after the "on" time.
8. Press **NEXT** and set the temperature required in the afternoon.
9. Press **NEXT** and the LCD screen will show programme **Program 4** This is the time that the thermostat will switch off in the afternoon / evening. Press **NEXT** and set the temperature. As per above we recommend 5.  
Then Press **DONE**


(\*). Hint: If you are programming each day differently the above will need to be repeated for each day.

**Default Programming is as follows.**

Programme	Start Time	Setpoint	Explanation
01	WAKE 07:00	22 °C	This is the time the heating will come on in the morning.
02	LEAVE 09:30	16 °C	This is the time the heating will switch off in the morning. It can also be used to set a minimum temperature for the day.
03	RETURN 16:30	22 °C	This is the time the heating will come on in the afternoon.
04	SLEEP 22:30	16 °C	This is the time the heating will switch off in the afternoon / evening. If you do not require the heating in the afternoon / evening, simply set this time to a couple of minutes after the "on" time.

## Installation and Wiring

Carefully separate the front half of the thermostat from the back plate by unscrewing the small screw at the bottom of the thermostat. Carefully unplug the ribbon connector which is plugged into the front half of the thermostat. Place the thermostat front half somewhere safe. Terminate the thermostat as shown in the diagrams below. Screw the thermostat back plate onto the flush box. Re-connect the thermostat ribbon cable and clip the two halves together.

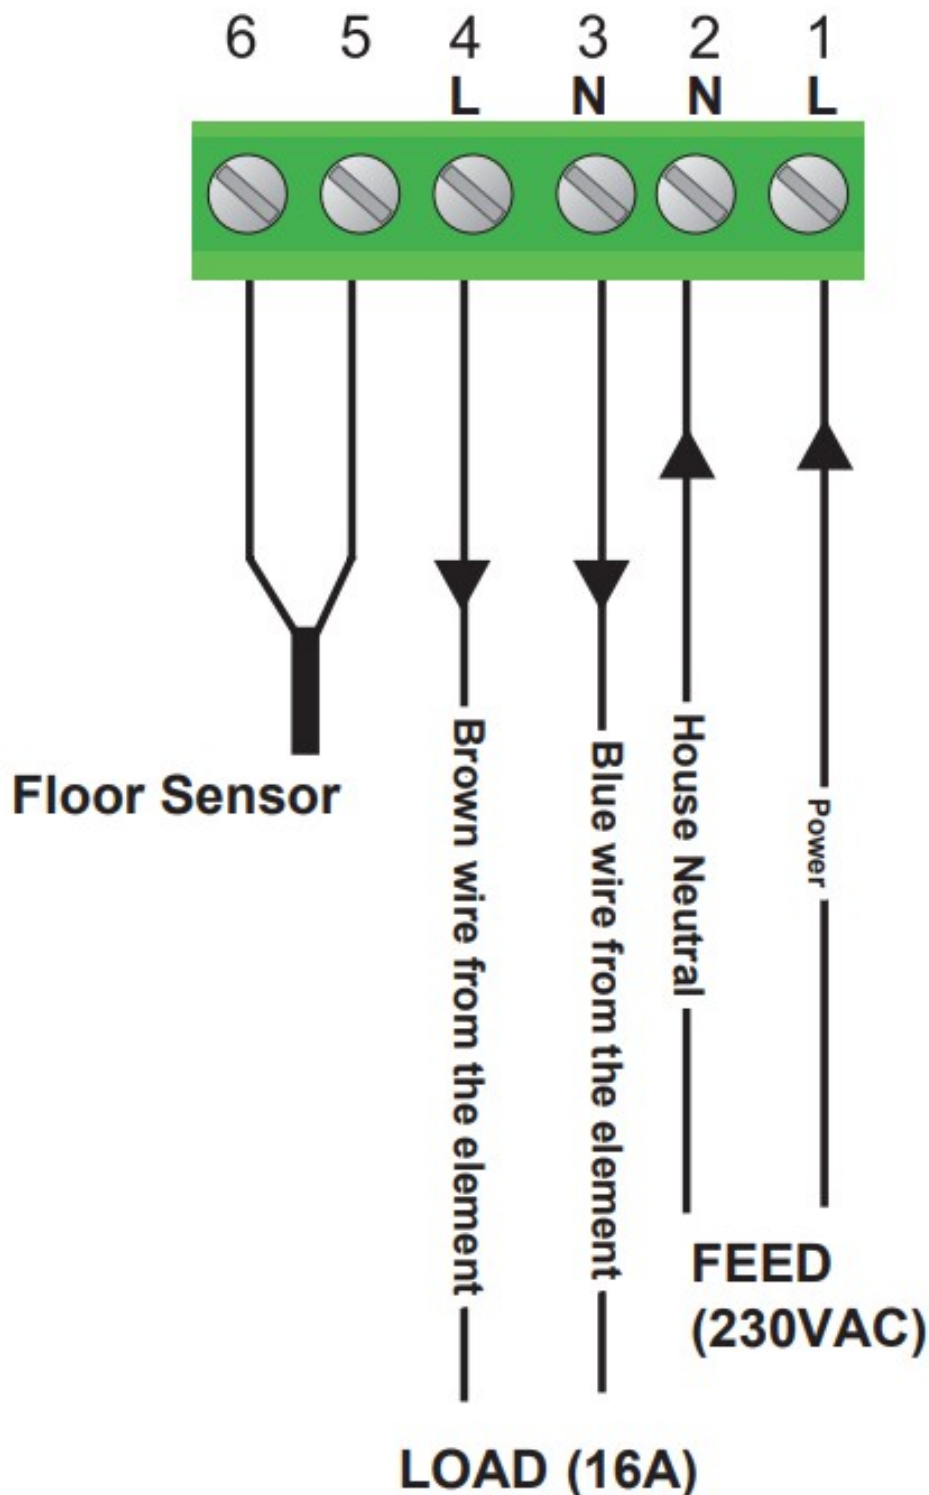

Connect green wire from the element to the house earth.



This product should be installed by a qualified electrician.

### Manual Mode

Press **HEATING MODE**

to select Auto/Manual mode. In Manual mode, the thermostat maintains a constant set temperature manually set by the user. A sun and flame symbol is displayed. To increase the temperature press the Degrees and then

increase or decrease by pressing the + or – buttons.


When off Moon is displayed. Or if you are going way select the suitcase and the heating will stay off until you return.

### Lock the Keypad

To lock the keypad press and hold the bottom left hand corner of the screen for 5 seconds. To unlock repeat.

### Reset to Factory Setting

The conduct a master reset to factory settings, press the power button to turn the thermostat off. Press and hold Menu for 5 seconds. Move to menu 17 then hold the down button for 5 seconds.

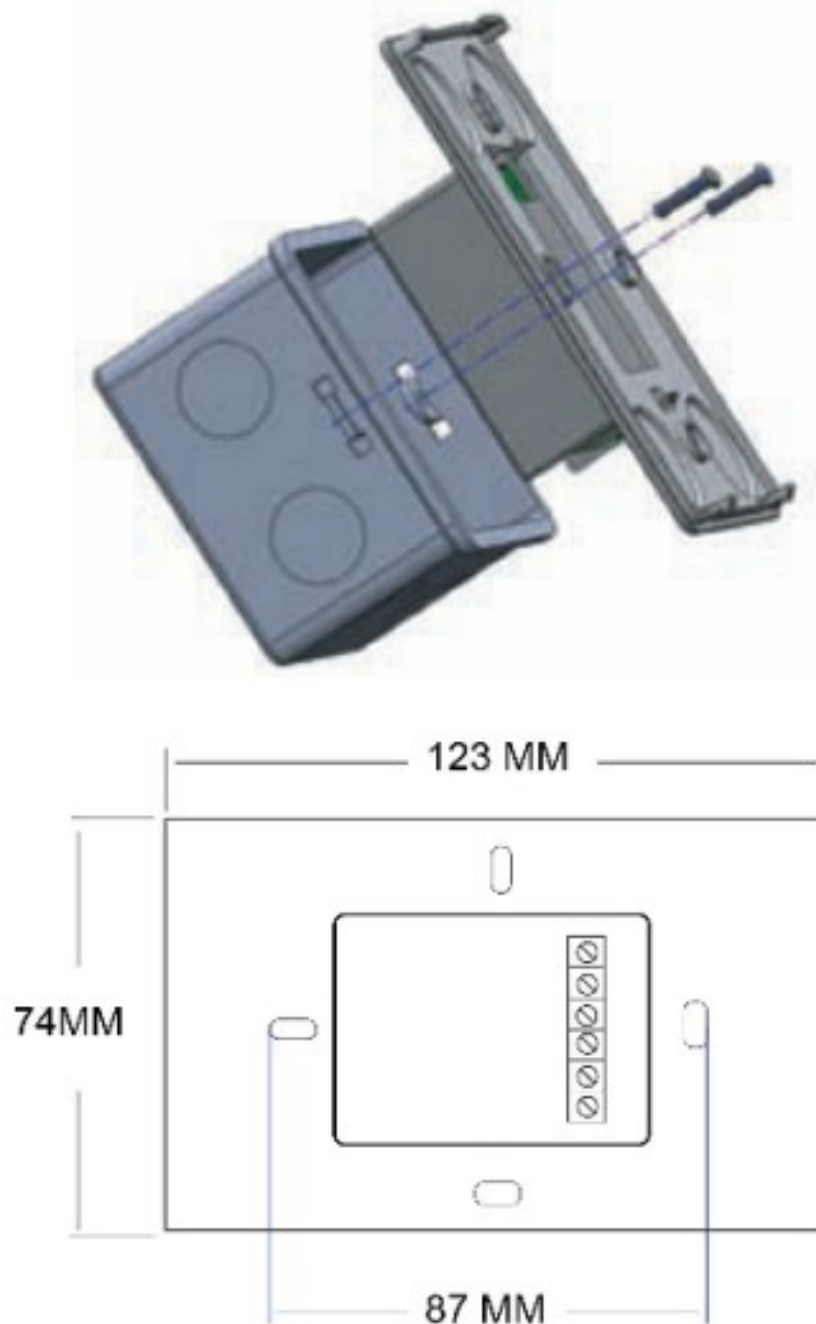

## Technical Information

### Configuration Menu

To enter into the setting menu please follow the steps below:

Step 1. Turn the thermostat off by pressing **POWER**

Step 2. Press **MENU** you will then see menu 01.

Step 3. Use the up and down arrows to adjust the sensor selection which is Menu 01(Air sensing;Air and Floor, or Floor only)

Step 4. Press **NEXT** to move to the next Menu and once you have all the menu options set,


Setp 5. Press **DONE** to accept and store.

Menu #	Feature	Explanation	Adjustment (Press up & down buttons to adjust)
01	Mode/Sensor Selection	This thermostat is a combination model which allows you to choose 3 different modes. A mode = Air Sensing Only (Has built in sensor) AF mode = Air & Floor sensing (Floor probe must be installed) F mode = Floor Sensing (Floor probe must be installed)	A / AF / F
02	Switching differential	The number of degrees difference before switching. The default is 1°C which means the thermostat will switch the heating on 0.5°C below the set temperature and will turn it off 0.5°C above the set temperature. With a 2°C differential the heating will switch on 1°C below the set temperature and will switch off 1°C above the set temperature.	1 Deg C, 2 Deg C... 10 Deg C ( 1 Deg C by default)
03	Air Temp Calibration	This is to recalibrate the air temp if required	-1 Deg C = decrease 1 °C , 1 Deg C = increase 1 Deg C
04	Floor Temp Calibration	This is to recalibrate the floor temperature if required	-1 Deg C = decrease 1 °C , 1 Deg C = increase 1 Deg C
05	Temperature Readout (AF mode only)	This gives you the option to show the Air Temp, Floor Temp or to show both Air & Floor at intervals	A = Show Air Temperature F = Show Floor Temperature  A-F = Show Floor and Air Temperature in 5 sec intervals
06	Maximum Floor Temp ( AF Mode only)	This is to protect the floor surface	20 Deg C – 40 Deg C (40 Deg C by default)
07	Temperature Format	This allows the temperature to be set to show Deg Celsius or Deg Fahrenheit	Deg C / Deg F
08	Clock Format	You can select the clock to show in either 12 or 24 hour time	24 (default), 12- hour or 24-hour clock format
09	Frost Protection	This is to avoid your room temp going below 5 DegC	On = activated, Off = deactivated
10	5+2 / 7 Day mode	This allows you to programme either 5 days at once, then the 2 days of the weekend separately, or a full 7 days at the same time or 7 days separately.	01 = 5 + 2 Day Programming 02 = 7 Day Programming
11	Auto/Manual mode selection	This allows you to choose Auto / Manual mode	00 = Auto mode 01 = Manual mode
12	Software version	This is for review only	V1.0
13	Minimum temperature limit	This gives you the option to change the minimum set temperature	5 °C~ 20 °C (5 °C by default)

14	Maximum temperature limit	This gives you the option to change the maximum set temperature	This gives you the option to change the maximum set temperature
15	Sensor type selection	This allows you to match your thermostat to different sensor	10 = NTC10K(by default), 100= NTC 100K,3=NTC3K
16	Not at use	Reserved for future use	
17	Reset	This allows you to reset your thermostat to factory default	Press and hold down button until you see RES on screen



## Documents / Resources

	<p><a href="#">Hotwire HWTH Horizontal Hotwire Thermostat</a> [pdf] Instructions</p> <p>HWTH Horizontal Hotwire Thermostat, HWTH, Horizontal Hotwire Thermostat, Hotwire Thermostat, Thermostat</p>
---	---

## References

-  [Affordable Floor Heating Products | Hotwire Products in Australia](#)
-  [Heating & Ventilation Solutions New Zealand | The Heating Company](#)

Manuals+.