


 **HOURLEEY**
CL-A60W-50 60-LED
Light-Up Present
Boxes



Hourleey CL-A60W-50 60-LED Light-Up Present Boxes User Guide

[Home](#) » [Support](#) » Hourleey CL-A60W-50 60-LED Light-Up Present Boxes User Guide 

Contents

- [1 Hourleey CL-A60W-50 60-LED Light-Up Present Boxes](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 References](#)



Hourleey CL-A60W-50 60-LED Light-Up Present Boxes



INTRODUCTION

With the Hourleey CL-A60W-50 60-LED Light-Up Present Boxes, a delightful collection of three colorful tinsel boxes that instantly brighten any indoor or outdoor environment, you can add festive magic to your holiday setup. Priced at **\$39.99**, this package, which was introduced by Hourleey, a reputable brand in seasonal décor, comes with three dazzling boxes of various sizes that are already illuminated with 60 vivid LED lights. Each box, which is made from sturdy metal frames and covered in soft white tinsel, emits a pleasant glow that makes it ideal for your yard, lawn, or under the Christmas tree. Throughout the season, safe and energy-efficient operation is guaranteed by the incorporated 24V DC low-voltage transformer. A 9.8-foot lead wire allows for easy and flexible setup. These illuminated present boxes add cheer, sparkle, and Christmas spirit to any brilliantly lit delivery, whether you're holding a holiday party or transforming your house into a winter wonderland.

SPECIFICATIONS

Product Name	Hourleey Set of 3 Christmas Lighted Gift Boxes
Model Number	CL-A60W-50
Brand	Hourleey
Material	Metal
Theme	Christmas
Box Sizes	Large: 7.5"x7.5"x7.1", Medium: 6.1"x6.1"x5.9", Small: 5.1"x5.1"x4.9"
Overall Dimensions (LxWxH)	7 x 7 x 7 inches (packaged dimension reference)
Lead Wire Length	9.8 feet
Number of Boxes	3 (varied sizes)
Lighting	60 pre-lit LED lights
Light Color	Warm white (also referred to as multicolor reflection in description)
Voltage	24V DC (low voltage with transformer)
Power Source	Plug-in (safer and brighter than battery-operated)
Weight	1.68 pounds
Use Location	Indoor & Outdoor (Home, Yard, Lawn, next to Xmas tree, etc.)
Decorative Features	Tinsel surface, reflective, dreamy light effect
Safety	Equipped with a low-voltage transformer for safe use
Price	\$39.99

WHAT'S IN THE BOX

- Present Boxes
- User Guide

FEATURES


- **Three pre-lit tinsel gift boxes:** in varying sizes are included in the set for a variety of decorative effects.

OUR LIGHTED GIFT BOX




TRANSFORMER POWERED | **BRIGHTER AND MORE STABLE** | **THICKER WIRES, LESS LIKELY TO BREAK**

OTHER LIGHTED GIFT BOX



BATTERY BOX POWERED | **NOT BRIGHT ENOUGH** | **THIN WIRES THAT BREAK EASILY**

- **60 LED Lights:** Warm, vibrant light is produced by pre-installed, energy-efficient LEDs.
- **Tinsel Design:** The LED lights' gleam and brilliance are accentuated by the metallic tinsel wrap.
- **Multi-Colour Lights:** These lights are ideal for holiday décor since they provide bright, festive illumination.
- **Low Voltage (24V DC):** A low-voltage transformer is included to provide both energy efficiency and safety.
- **Consistent brightness,** without the inconvenience of changing batteries is provided via plug-in power.
- **Indoor/Outdoor Use:** Adaptable enough to adorn patios, porches, lawns, and living spaces.
- **Sturdy Metal Frame:** In a variety of weather conditions, a sturdy frame construction keeps its shape and stability.
- **Lightweight (1.68 lbs):** When not in use, it is simple to move, position, and store because of its lightweight.
- **Small Storage:** Stackable and sized for convenient storage during the off-season.
- **Warm Glow Effect:** Produces a warm, welcoming atmosphere for holiday parties.
- **Decorative Ornament Appeal:** Enhances the holiday look by appearing to be wrapped presents.
- **Flexible Placement:** It may be placed far from the power source thanks to its 9.8-foot lead wire.
- **Family-safe:** It is suitable for children and pets thanks to cool-to-touch LEDs and a secure power adaptor.
- **Beautiful Dimensions:** The box sizes of large (7.5"), medium (6.1"), and small (5.1") produce an aesthetically balanced display.

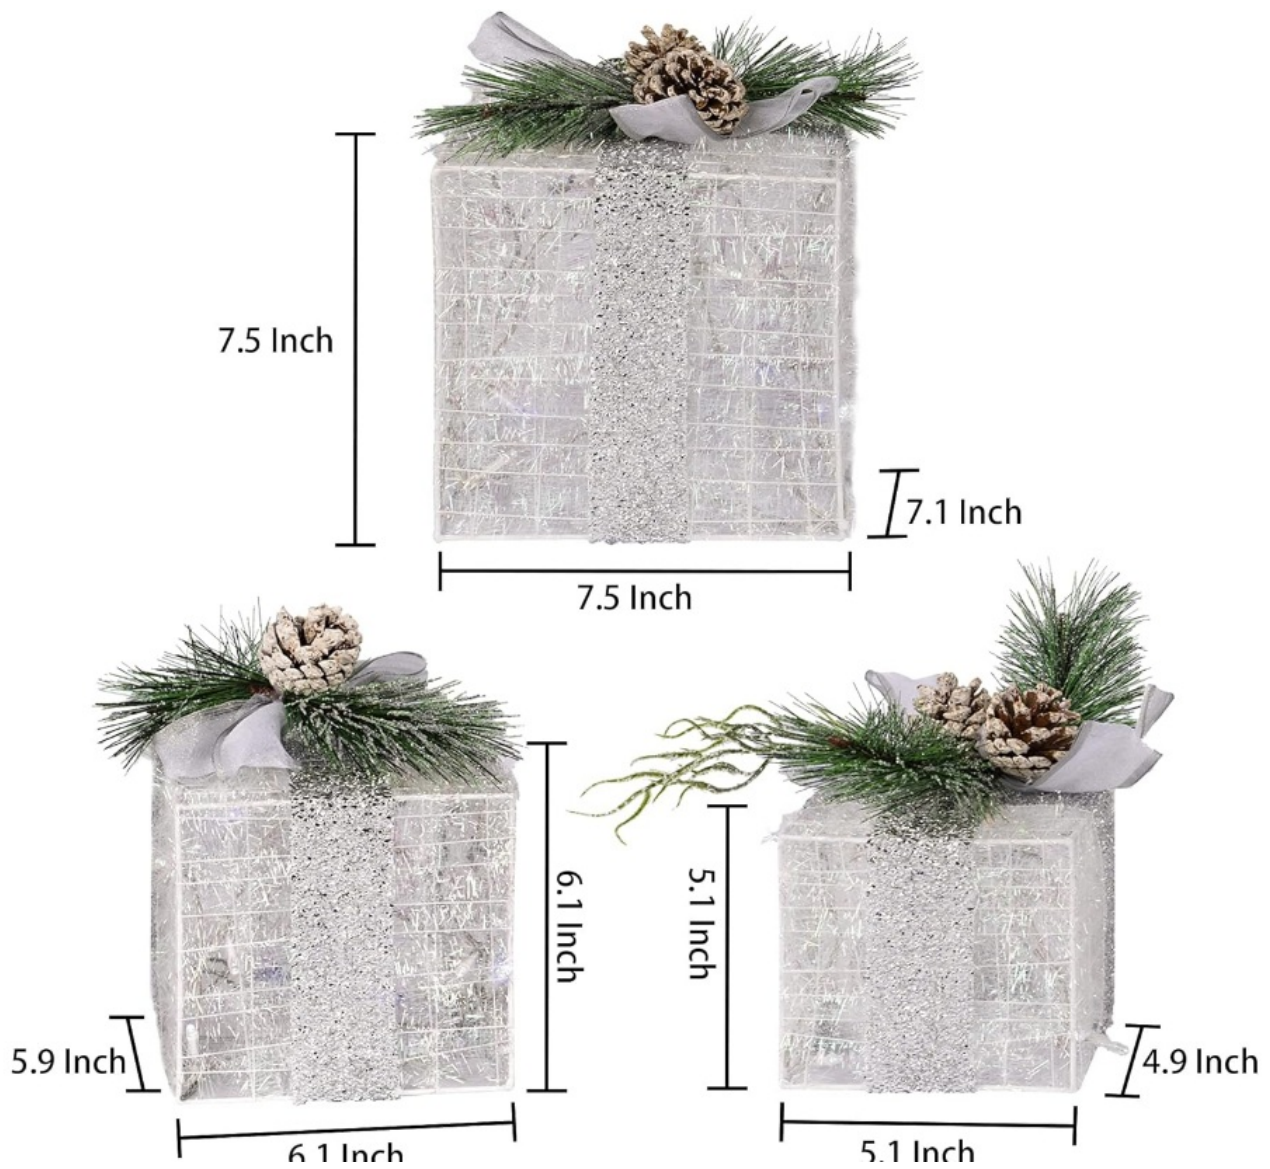

SETUP GUIDE

- **Unpack Carefully:** Gently take out the power adaptor and all three boxes from the package.
- **Untangle the Lead Wire:** Make sure the 9.8-foot lead wire is positioned to reach the display area you have in mind.
- **Verify LED Lights:** Make sure all 60 LEDs are operational by testing the lights prior to placement.
- **Assemble Display Order:** To achieve the desired effect, arrange the boxes in descending order of size, or in any other pattern.
- **Place on Stable Surface:** For optimal safety and visibility, use a level, dry surface.
- **Avoid Water-Prone Areas:** Although it is safe to use outdoors, keep it out of puddles and snow.
- **Connect Power adaptor:** After the boxes are in place, plug the adaptor into a power outlet.
- **Secure Wiring:** To prevent trip hazards and secure extra wire, use ties or clips.
- **Keep the Transformer Off the Ground:** To avoid moisture damage, raise the transformer a little if you want to use it outside.
- **Anchor Boxes:** If necessary, anchor boxes with weights or pegs in windy locations.
- **Align with the décor:** For a unified effect, place close to trees, wreaths, or inflatables.
- **Avoid Overloading Outlets:** Avoid daisy-chaining several sets of extension cables or plugging into overloaded ones.
- **Utilize Smart Timers:** Save energy by setting automatic on/off times.

- **Check Night Visibility:** To check visibility at night, move gently if there is an uneven or blocked reflection of light.
- **Take a Picture of Your Setup:** To duplicate the appearance in subsequent seasons, take a picture.



CARE & MAINTENANCE

- **Store Properly:** During off-season, store in a cool, dry location away from dampness and direct sunshine.
- **Wipe with Dry Cloth:** Use a gentle, dry cloth to remove any dust or debris from the tinsel.
- **Steer Clear of Harsh Chemicals:** Steer clear of cleaners that could erode metal or cause the tinsel to lose its lustre.
- **Detangle Lead Wire:** Before storing it, wrap and fasten the cable securely to avoid damage.
- **Preserve Box Shape:** To avoid warping or dents, do not place heavy objects on top of the box.
- **Examine Bulbs Every Year:** Before reusing any LEDs, check them for burnout or dimming.
- **Dry Before Storing:** To avoid rust or mould, make sure everything is totally dry before storing it outside.
- **Examine the Transformer:** Repair any frayed or broken plugs and wires.
- **Repack in Original Packaging:** To avoid damage, try to utilise the original box.
- **Avoid Crushing Tinsel:** For the upcoming season, gently realign any tinsel that has become flattened.
- **Avoid Overstretching the Cord:** Make sure the lead wire is securely fastened during use to avoid it pulling or

fraying.

- **Handle Carefully:** Despite being lightweight, hard handling may cause the frame to warp or the lights to come loose.
- **Keep Away From Pets:** Keep your pets away from tinsel and wires.
- **Label Storage Box:** Give it a clear label so that it will be easier to find next season.
- **Save Manual/Tags:** Save any user guides or tags for reference purposes during setup or warranty.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Lights not turning on	Plug not fully inserted	Ensure plug is properly connected
Only one box lights up	Loose wire connection inside box	Check connections, gently adjust wires
Dim lighting	Low voltage from outlet	Try another outlet or check transformer
Flickering lights	Loose LED or power fluctuation	Secure LEDs and check voltage stability
Lights won't stay on	Timer (external) interference	Remove or reset any timers or smart plugs
Metal frame bent on arrival	Shipping damage	Contact seller for replacement
Transformer gets warm	Normal with prolonged use	Ensure proper ventilation, unplug when hot
One color not working	Faulty LED section	Request LED replacement if under warranty
Lead wire too short	Placement issue	Use a certified outdoor extension cord
Lights not evenly distributed	Shifted during shipping	Gently rearrange lights across the frame

PROS & CONS

PROS

- Pre-lit with 60 bright and colorful LED lights
- Safe low-voltage operation with included transformer
- Three different box sizes for dynamic decoration
- Weather-resistant materials suitable for outdoor use
- Long 9.8 ft lead wire for flexible placement

CONS

- Lights are not battery-operated (plug required)
- May require securing in windy outdoor conditions
- Lights are not color-changeable
- Metal frame may bend if handled roughly
- No remote control or timer feature included

WARRANTY

Hourleey typically offers a **12-month limited warranty** on seasonal decor items, covering manufacturing defects and issues related to faulty LED lights or power adaptors. For warranty claims, buyers must retain the original receipt and contact the manufacturer directly through their official support channels. Always inspect the product upon arrival and report any visible damage within 7 days to ensure eligibility.

FREQUENTLY ASKED QUESTIONS

What is included in the Hourleey CL-A60W-50 60-LED Light-Up Present Boxes set?

The Hourleey CL-A60W-50 set includes three pre-lit tinsel gift boxes in different sizes, totaling 60 LED lights and a 9.8 ft lead wire for easy placement.

What are the dimensions of the Hourleey CL-A60W-50 gift boxes?

The set includes a large box (7.5 x 7.5x 7.1), a medium box (6.1x 6.1x 5.9), and a small box (5.1x 5.1x 4.9).

How many LED lights are used in the Hourleey CL-A60W-50 decoration set?

The Hourleey CL-A60W-50 comes with a total of 60 multi-color LED lights distributed among the three boxes.

Is the Hourleey CL-A60W-50 plug-in or battery-operated?

The Hourleey CL-A60W-50 model is plug-in and operates on low voltage (24V DC), providing brighter and more consistent lighting than battery-operated options.

How long is the power cord on the Hourleey CL-A60W-50 set?

The Hourleey CL-A60W-50 gift boxes come with a 9.8-foot lead wire for flexible setup and placement.

What should I do if one of the Hourleey CL-A60W-50 gift boxes stops lighting up?

Check the connection and ensure the plug is fully inserted. Inspect for any visible wire damage. If the problem persists, contact Hourleey customer service with your model number (CL-A60W-50).

What should I do if the Hourleey CL-A60W-50 plug feels warm after prolonged use?

A slightly warm plug is normal due to continuous operation. If it becomes hot to the touch, unplug immediately and inspect for any faults in the transformer or wires.

References

- [User Manual](#)

