



HOUSBAY TS3 White Noise Machine with Alarm Clock User Manual

[Home](#) » [HOUSBAY](#) » HOU SBAY TS3 White Noise Machine with Alarm Clock User Manual 

HOUSBAY TS3 White Noise Machine with Alarm Clock User Manual



Thank you for purchasing on HOUSBAY! Please read these instructions carefully and keep the user manual in safe place for future reference.

Contents

- 1 Instructional Video
- 2 Features
- 3 Package Include:
- 4 Power Specifications
- 5 Front View
- 6 Top View
- 7 Back View
- 8 Getting Started
- 9 Time Setting
- 10 Alarm Setting
- 11 Alarm Volume Setting
- 12 Alarm Pause & Snooze
- 13 Alarm On/Off
- 14 Sound Machine Setting
- 15 Picking Your Sounds
- 16 Bluetooth Connection Setting
- 17 Wireless Charging Function
- 18 USB Charging Function
- 19 Display Brightness Setting
- 20 Sleep Timer
- 21 Nightlight Setting
- 22 Battery & Memory Function
- 23 Support
- 24 FCC Requirement
- 25 Documents / Resources
 - 25.1 References
- 26 Related Posts

Instructional Video

Please scan the QR code here to access the instructional video of this product.



Features

- 21 Soothing Sounds
- 5 Alarm Sounds & 9 Minutes Snooze
- Wireless Charging + USB Charging Port
- Bluetooth for Streaming Music and Synchronizing Time from phone
- 10 Modes of Night Light
- 0-100% Brightness Control For Display
- 1-30 Level Adjustable Volume
- Sleep Timer

- Battery Backup (Only Memory function)
- 12/24H Mode

Package Include:


- 1* Sound Machine with Alarm Clock
- 1*1.5m DC Adapter
- 1% User Manual
- 1* CR2032 Battery

Power Specifications


AC 100-240V, 50/60Hz.

DC:9V12A

 Front View

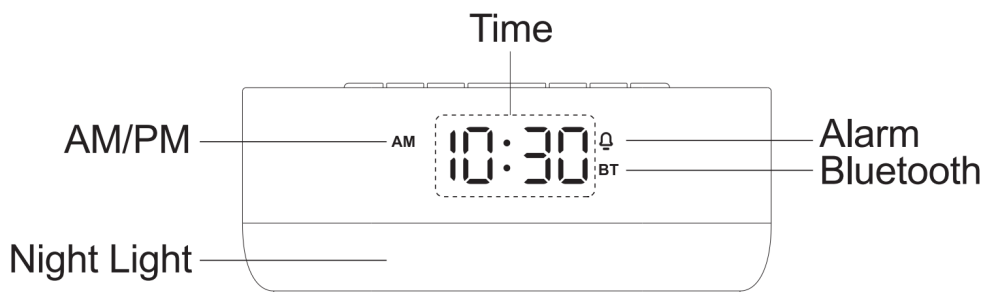


Top View

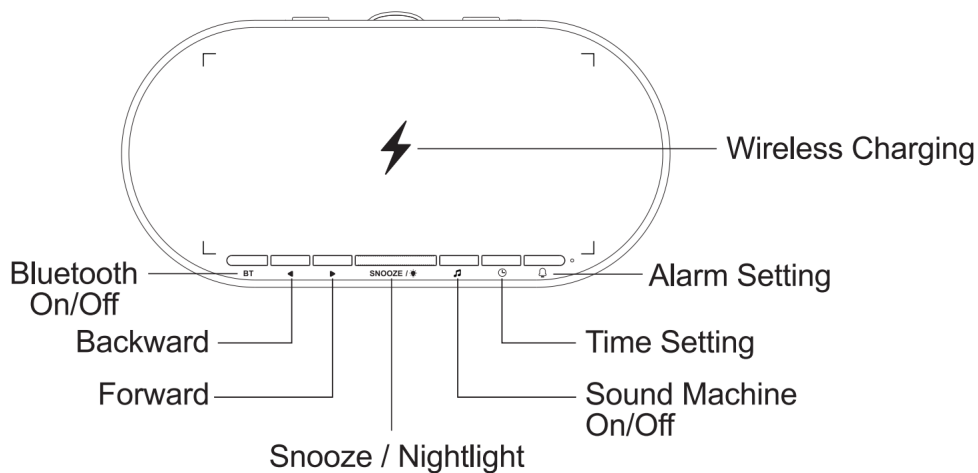 

Back View

 Night Light Brightness Control

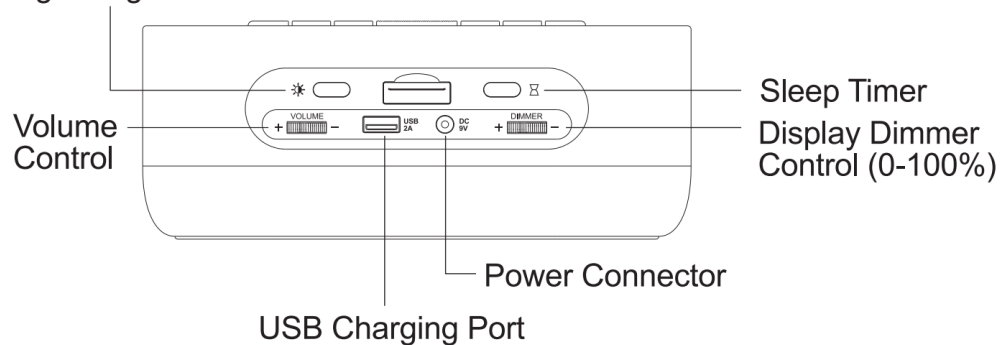

Getting Started

1. Plug the adapter into a standard household outlet, you will see 12:00 on the display and the clock is ready to be set.
2. Please remove the battery tab before use.

Notice:

- If the display is “blank” after plugging in, please check whether the DISPLAY DIMMER on the back is at the HIGH position.
- Under the battery power, the display will go blank and preset alarm will not go off.
- Once the battery is removed and with an interruption of power, the TIME and ALARM need to be reset when the power comes back.

 
Time Setting

1. Press the * ⌚ button to enter HOUR setting. The HOUR digits will flash on the display. Press “◀” or “▶” button to advance to the correct hour.

HOUR Flashes



2. Press the “⌚” button to confirm and enter MINUTE setting. When the MINUTE digits flash, press “◀” or “▶” button to advance to the correct minute.

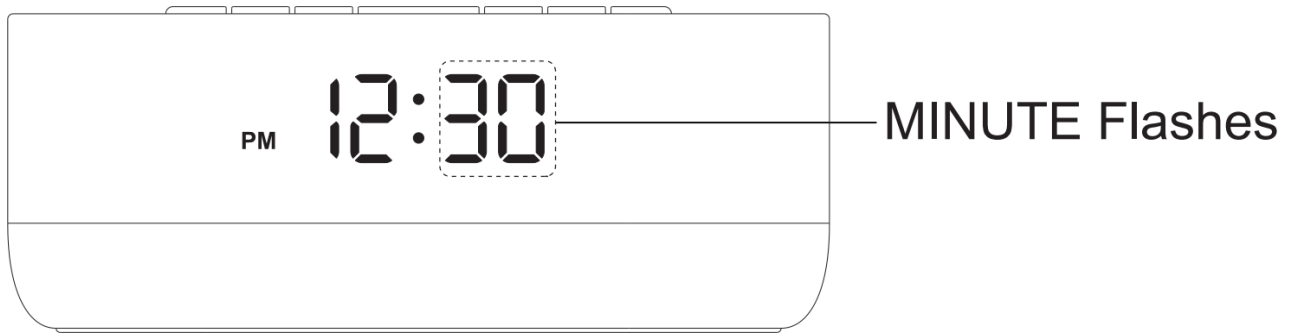


3. Press the “🕒” button to confirm and enter time format (12/24H) setting. Press “◀” or “▶” button to select time format. When using the 12-hour time format, AM/PM icon will appear on the display to suggest morning/afternoon time.
4. Press the “🕒” button to confirm and exit the time setting mode.

Notice:


The clock will exit automatically from the TIME setup mode if no action is taken within 5 seconds. (Action refers to pressing the desired button for setup)

Alarm Setting

 1. Press the “🕒” button to enter ALARM HOUR setting. The HOUR digits will flash on the display. Press the “◀” or “▶” buttons to advance to the desired hour.

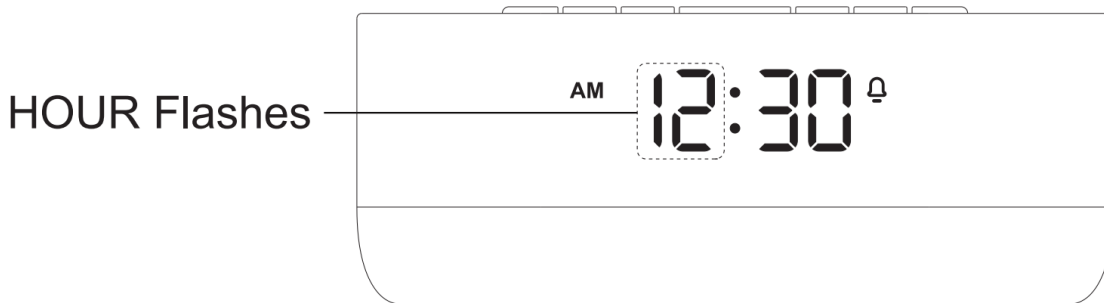

 2. Press the “🕒” button to confirm and enter ALARM MINUTE setting. The MINUTE digits will flash on the display. Press the “◀” or “▶” buttons to advance to the desired minute.

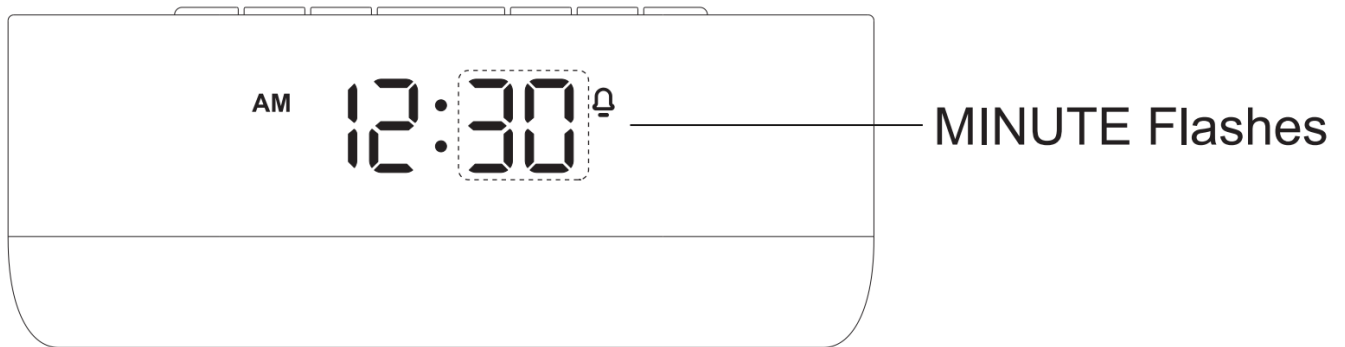

3. Press the “🔔” button to confirm and enter WAKE UP SOUND setting. The icon of alarm will flash on the display. Press the “◀” or “▶” buttons to choose 01) Beep sound, 02) Piano sound, 03) Bird chirping sound, 04) Lullaby sound or 05) Brook sound.



Icon of Alarm Flashes

 
4. Press the “🔔” buttons to confirm and exit the alarm setting mode.

Notice:

The clock will exit automatically from the ALARM setup mode if no action is taken within 5 seconds. (Action refers to pressing the desired button for setup)

Alarm Volume Setting

When entering the alarm setting, scroll the volume dial to select the volume level(0-30 adjustable).

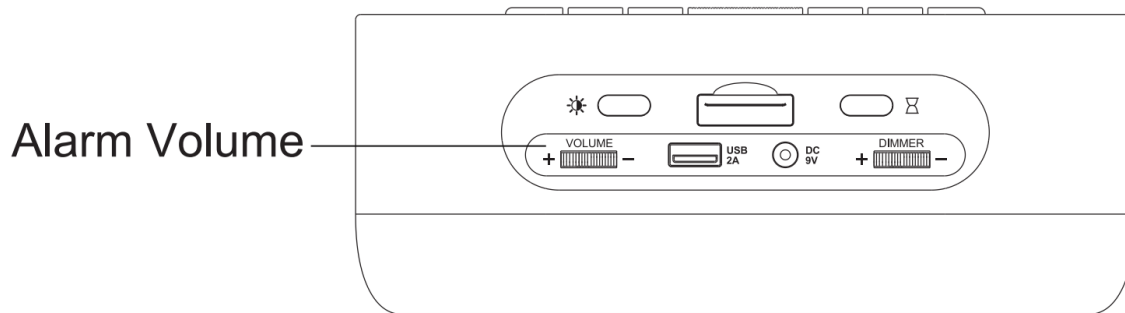

Alarm Pause & Snooze

When the alarm goes off, you have two options:

1. Press “🔔” button to stop the alarm when it’s ringing. Alarm will go off on the next day.
2. Press “SNOOZE /# 🌞” button to snooze, the indicator “g” will flash on the display. The alarm will go off again 9 minutes later.

Notice:

 
The alarm will automatically turn off after 60 minutes if no action is taken.

Alarm On/Off


1. When the alarm time is set, press and hold the “🕒” button for 2 seconds to turn on the alarm.
2. Press and hold the “🔔” button for 2 seconds to completely turn off alarm and the indicator “🔔” will disappear on the display. The alarm will NOT go off on the next day.

Sound Machine Setting

1. Press the “🎵” button, sound machine will be ON/OFF.

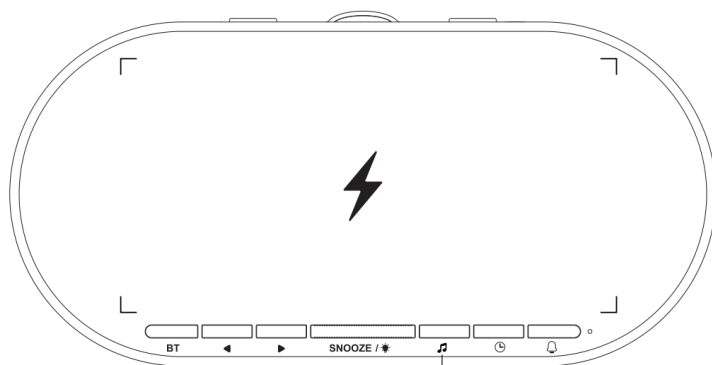

Sound Machine ON/OFF

Scroll the “+”  “-” dial to select the volume. (0-30 level adjustable)

Notice:

When the sound machine is on, the volume adjustment is only used for sound machine, the volume of the alarm will not be affected.


Picking Your Sounds

When sound machine is on, press the “◀” and “▶” button to switch among all the 21 sounds in sequence.

Here is the list of tracks			
01	Ocean Wave	12	White Noise 2
02	Soft Wave	13	White Noise 3
03	Lullaby	14	White Noise 4
04	Rain	15	White Noise 5
05	Thunder & Rain	16	Fan 1
06	Brook	17	Fan 2
07	Summer Night	18	Fan 3
08	Bird Chirping	19	Wind
09	Shush	20	Meditation
10	Campfire	21	Yoga Music
11	White Noise 1		

Bluetooth Connection Setting

 1. Press and hold the “BT” button for 2 seconds, BLUETOOTH will be ON/OFF. When Bluetooth is ON, the “BT” icon will flash on the display.

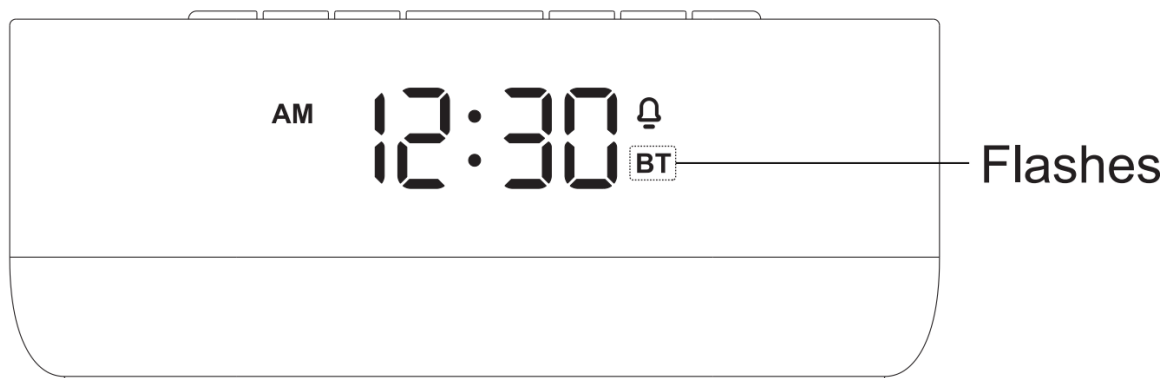


2. Turn on Bluetooth on your phone and connect with the device "HOUSBAYTS3". The " BT " icon will stop flashing on the display upon connecting successfully.
3. When music is playing, press the " ◀ " or " ▶ " button to change the music. Press the " BT " button to pause the music and press again to play.
4. Scroll the " + " ^{VOLUME} " - " dial to select the volume. (0-30 level adjustable)

Notice:

1. The Bluetooth will automatically turn off if fails to connect to the phone within 2 minutes.
2. If a call comes in, the Bluetooth will stop playing the music.
3. When the clock is connected to the phone via Bluetooth, it will auto-sync the phone time to the alarm clock. It may fail to auto-sync the time due to incompatible situations on different phone version.
4. When the Bluetooth is on, the volume adjustment is only used for the Bluetooth speaker, the volume of the alarm will not be affected.

Wireless Charging Function

 Place your phone on the center of the wireless charging pad, a changing icon in green color will appear to indicate the phone is charging

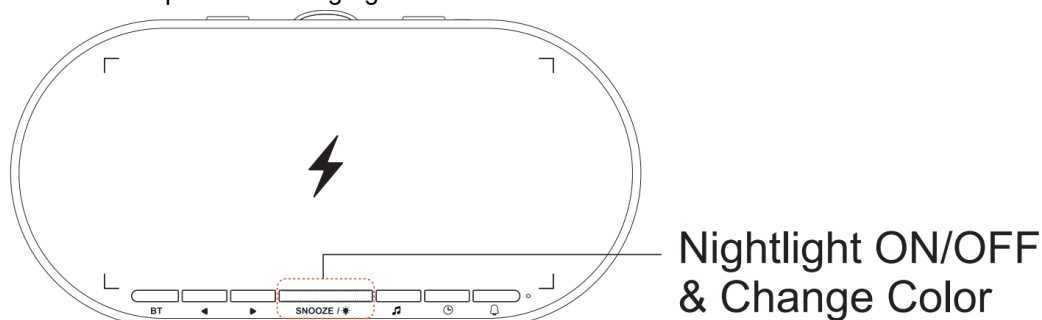

Note:

1. The charging icon in red color will alert you by flashing if there is a foreign object on it or the phone's not in the right place.
2. Remove any protective cases containing magnets, metal, or materials thicker than 0.12"(5mm)
3. Compatible products with wireless charging: iPhone 14 series, iPhone 13 series, 12/12 Pro/iPhone 11/11 Pro/11 Pro Max/XS Max/XS/ XR/ X/8/ 8 Plus, Samsung Galaxy Note 9/ Note8 /S8/ S8 Plus/ 87/ S7 Edge/ S6 Edge Plus/ S9/ S10/ S10 Plus/S10E, LG V30, Nexus 7/6/5, and other enabled wireless charging phones and devices.

USB Charging Function

The unit is added with one USB output interface for other devices.

Output: 2A

 
Display Brightness Setting

Scroll the DISPLAY DIMMER dial at the back of the machine to adjust the display brightness. (It can be adjusted from 0 to 100%)

Sleep Timer

You can use sleep timer to turn off nightlight and sound machine automatically when the preset sleep timer comes.


1. Press repeatedly the “⌚” button to select the sleep timer ranging from 60, 120, 180 minutes to OFF. The sleep timer will be seen on display.

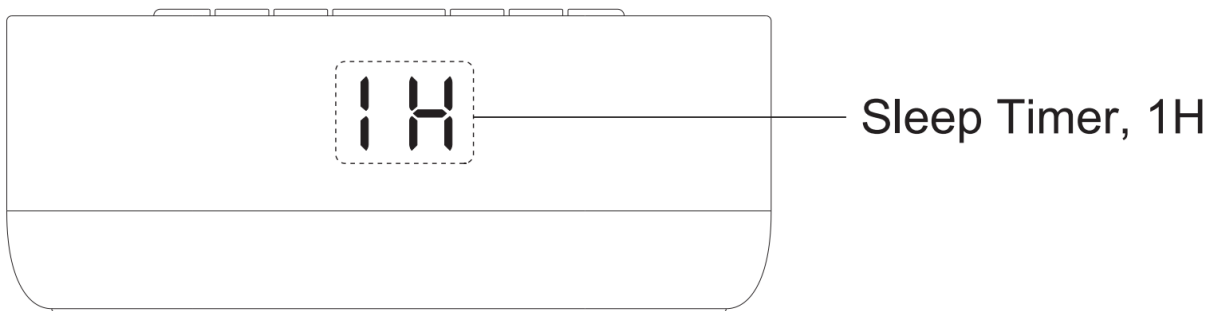

2. When the sleep timer is set, please wait for 5 seconds to exit from the setup. The “⌚” indicator will be seen on the display.
3. Press repeatedly the “⌚” button to select “OFF” option, or press and hold the “⌚” button for 2 seconds to turn off sleep timer.
4. When sleep timer is on, press “⌚” button to see the sleep timer remained.

Nightlight Setting

 1. Press the “SNOOZE /#” button to turn on the night light. Then press the “SNOOZE /#” button to change the color of the nightlight.

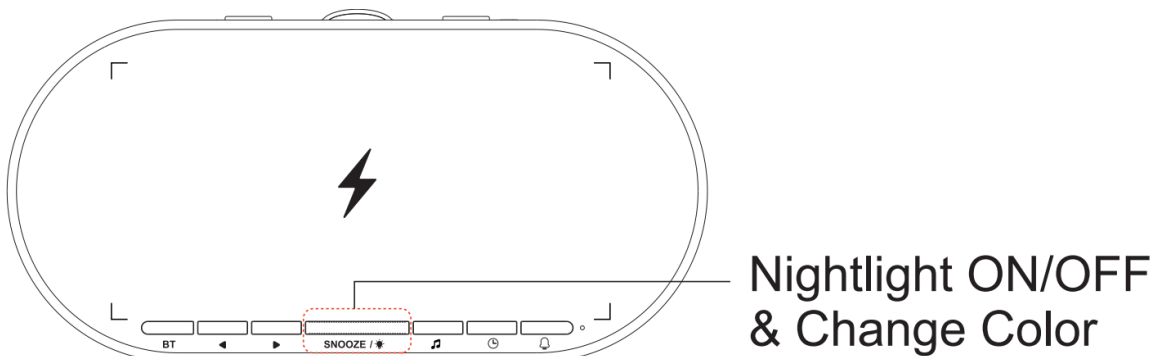

2. Press and hold the “SNOOZE /#” button for 2 seconds, the nightlight will be turned off.

Battery & Memory Function

1. Install 1* CR2032 battery into Battery Compartment for memory function. (Battery is built in already)
2. Memory Function is for saving TIME/ALARM settings only.

Notice:

Under the battery power, the display will go blank and preset alarm will not go off. Battery power is for saving TIME/ALARM settings only.

Support

The sound machine with alarm clock comes with one year warranty. If you have any issue with this machine, please contact us at Support@keviec.com. We will address your issue within 24 hours.

If a faulty product is found when setting up please Email us at Support@keviec.com

TIPS: The clock works and lasts a few hours if its battery powered ONLY, please keep it plugged in always!

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

TIPS:

1. Battery backup is for saving TIME/ALARM settings only, the display will go blank and preset alarm will not go off under the battery power.

HOUSBAY

Documents / Resources

	HOUSBAY TS3 White Noise Machine with Alarm Clock [pdf] User Manual 2A4TD-TS3, 2A4TDTS3, TS3, TS3 White Noise Machine with Alarm Clock, White Noise Machine with Alarm Clock, Noise Machine with Alarm Clock, Machine with Alarm Clock, Alarm Clock, Clock
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.