

HOWARD H1 Kiosk Standalone Walk User Guide

Home » HOWARD » HOWARD H1 Kiosk Standalone Walk User Guide 🖫

Contents

- 1 HOWARD H1 Kiosk Standalone Walk
- **2 Product Usage Instructions**
- 3 Cash Payment Disclaimer
- **4 Required Information**
- **5 Insert Card to Process Payment**
- **6 CASH PAYMENT INSTRUCTIONS**
- **7 CHECK PAYMENT INSTRUCTIONS**
- **8 LINE DRAWING & DIMENSIONS**
- 9 CONTACT INFORMATION
- 10 Documents / Resources
 - **10.1 References**
- 11 Related Posts



HOWARD H1 Kiosk Standalone Walk



Product Information

Specifications

• Model: HOWARD H1 KIOSK

• Support Contact: (888) 323 - 3151

• A/C Unit Mounting Requirement: A/C unit must be mounted at least 4 inches away from any obstruction

• Dimensions:

Top View: 12.411" x 47.909"
Front View: 26.000" x 27.196"
Side View: 14.500" x 69.500"

Product Usage Instructions

Cash Payment Instructions

Follow these steps to make a cash payment using the HOWARD H1 Kiosk:

- 1. Insert the cash into the designated slot on the kiosk.
- 2. Follow the on-screen prompts to complete the transaction.
- 3. Retrieve any change and receipt if applicable.

Check Payment Instructions

If you prefer to make a check payment, follow these steps:

1. Write the check payable to the specified recipient.

- 2. Insert the check into the designated slot on the kiosk.
- 3. Follow the on-screen instructions to finalize the payment.

Installation Instructions


To install the HOWARD H1 Kiosk, ensure that the A/C unit is mounted as per the provided dimensions and at least 4 inches away from obstructions. Connect the power and network cables appropriately for seamless operation.

FAQ


- Q: How can I contact customer support?
 - A: For customer support related to the HOWARD H1 Kiosk, you can call (888) 323 3151 for assistance.
- Q: Is technical support available?

A: Yes, we provide free telephone technical support 24/7 (excluding US holidays). Simply call 888.323.3151 for technical assistance related to your Howard product.

Look up your account information using one of the options below.

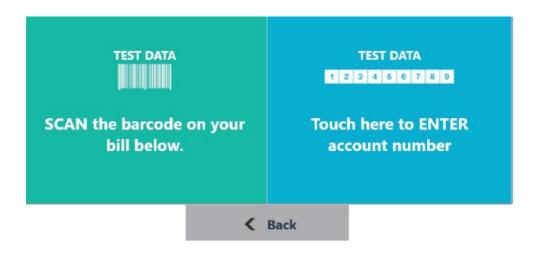

Select a bill to pay by tapping below

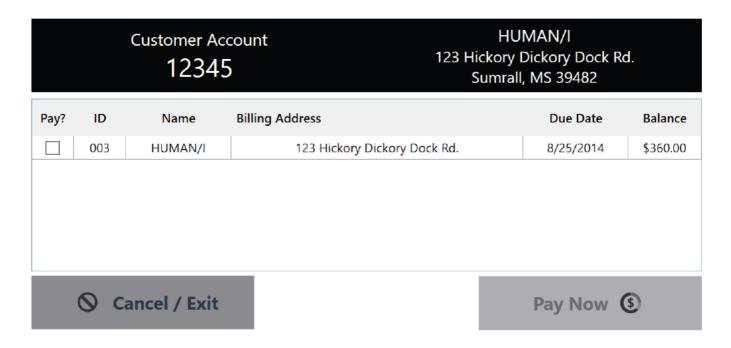

Before you pay by cash, please be aware of these conditions


This kiosk does NOT provide change.

This kiosk will NOT return any bills you deposit.

The entire cash amount inserted will be applied to your account, even if your session is interrupted by a power loss or network outage.

To ACCEPT these conditions, touch CONTINUE OR

Touch BACK to choose another payment method

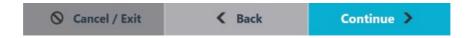


Required Information

In order to process your check payment, we are required to ask for the following


First and Last Name

To ACCEPT these conditions, touch CONTINUE OR

Touch BACK to select another payment method

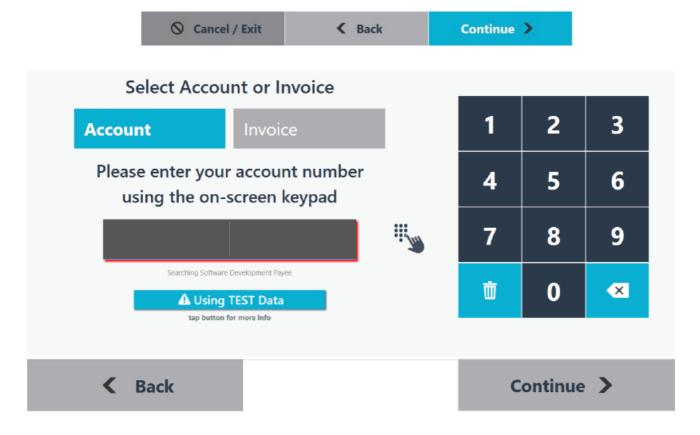


What amount would you like to pay?

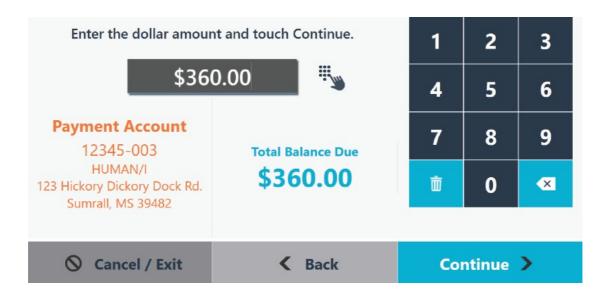


Please provide and verify all information below

What is your first name?

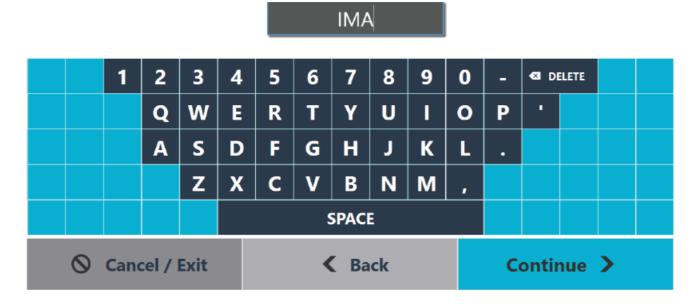


Select how you will pay by touching one of the buttons below

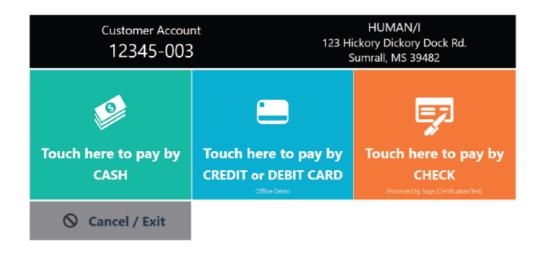

REMOVE ALL STICKERS FROM CARD BEFORE INSERTING **





CASH PAYMENT INSTRUCTIONS

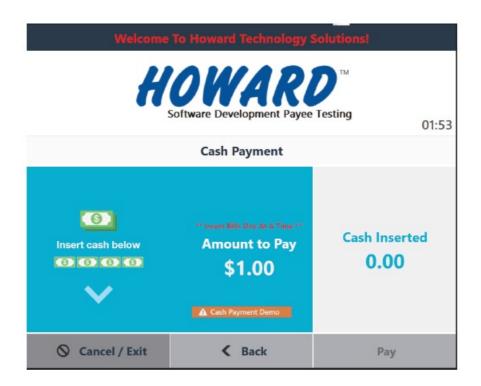


CHECK PAYMENT INSTRUCTIONS


Check Payment

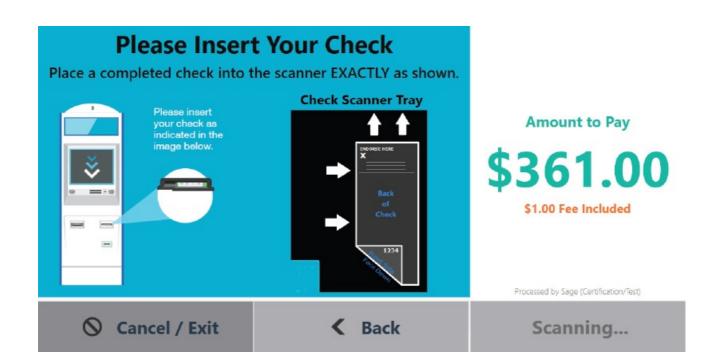


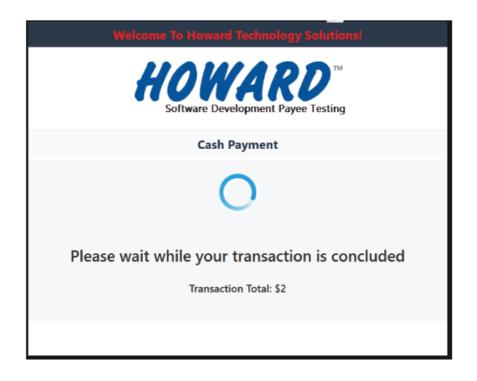

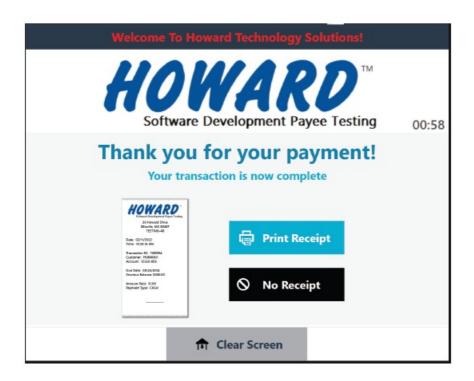

LINE DRAWING & DIMENSIONS

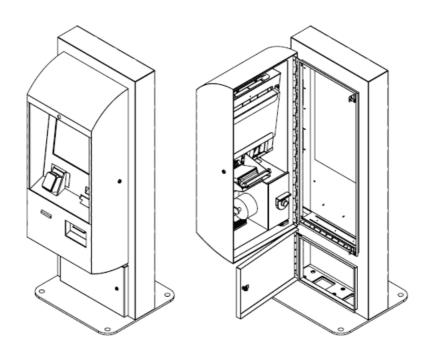

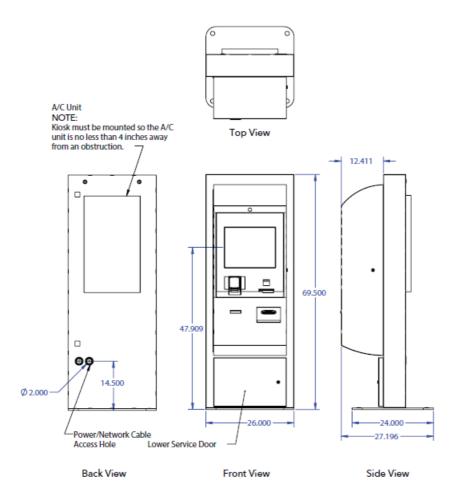

CONTACT INFORMATION

If you have any questions about our line of technology partner products, feel free to contact us for more information.

General Information

Toll Free: 1.888.912.3151

Customer Support

Toll Free: 1.888.323.3151

Technical Support

We provide FREE telephone technical support 24/7 (excluding US holidays) for as long as you own your Howard product. Our friendly, US-based team of experts will answer your questions about the product, hardware setup, or installation, and with telephone hold times of typically less than 1 minute!

For technical support call 888.323.3151

Documents / Resources



HOWARD H1 Kiosk Standalone Walk [pdf] User Guide

H1 Kiosk Standalone Walk, H1, Kiosk Standalone Walk, Standalone Walk, Walk

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.