

# hoymiles DTU-WLite Data Transfer Unit Installation Guide

[Home](#) » [hoymiles](#) » hoymiles DTU-WLite Data Transfer Unit Installation Guide 


## hoymiles DTU-WLite Data Transfer Unit Installation Guide



### Contents

- [1 Interface Layout](#)
- [2 Preparation](#)
- [3 Installation](#)
- [4 Installation Map](#)
- [5 Online Setting](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

### Interface Layout

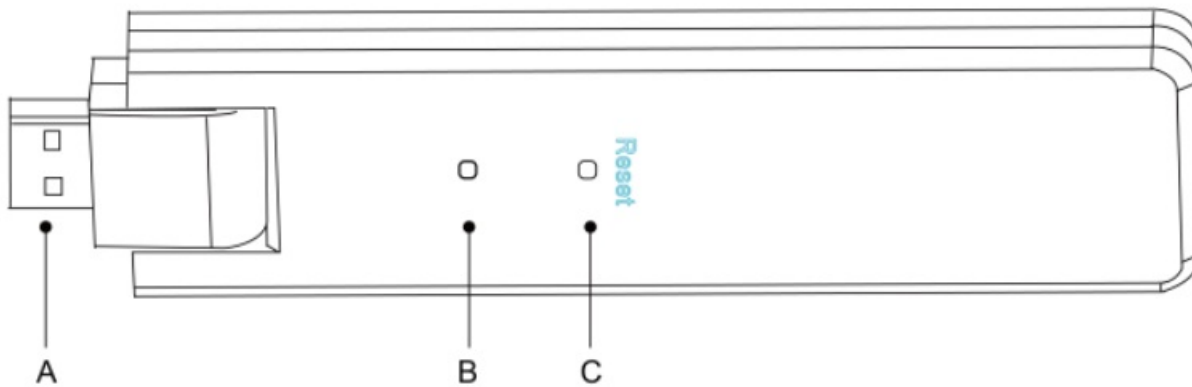

## Preparation


A) Download the Hoymiles mobile installer App




B) Check the box for the following items:  
✓ Hoymiles DTU-WLite

## Installation

A) Power the DTU- WLite

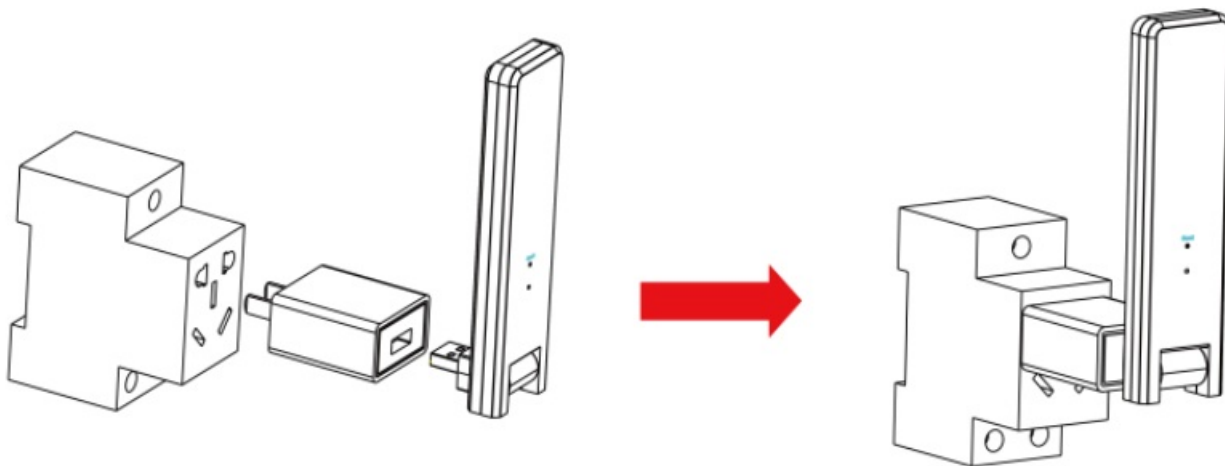

**Option 2:** Connect the DTU to the adapter and plug it into the Power Strip. Please make sure it is placed at least 0.5 meter above the ground and try to install the DTU 90 degrees vertical to the ground as much as possible.

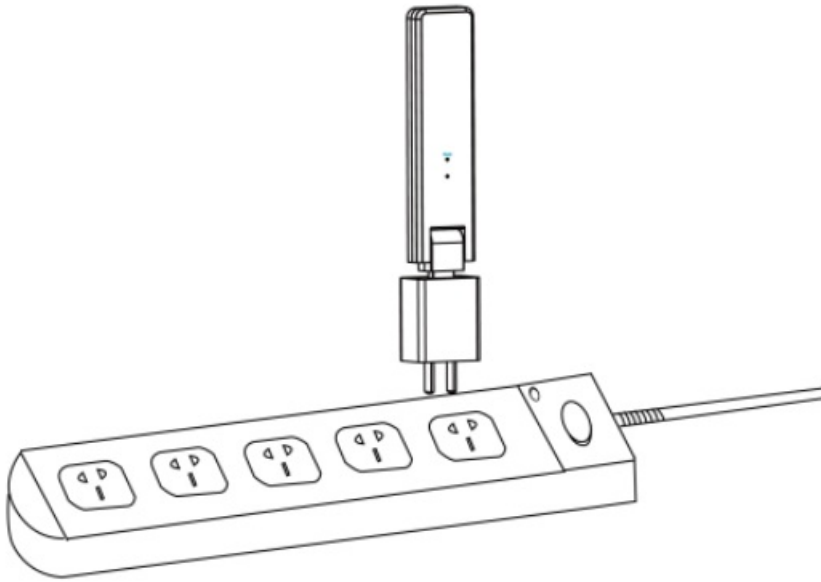



**Note:** Please do not install the DTU directly above the metal or concrete to prevent the signal dilution.

#### B) Start Procedure

Once the DTU powers on, the red, green and blue lights will flash for one second in turns for 30 seconds.

#### C) Set up with Internet


Use the smart phone/tablet open the Installer App and login. Approach to "O&M" on the bottom of the page and then "Network Configuration". And complete the Wi-Fi configuration.

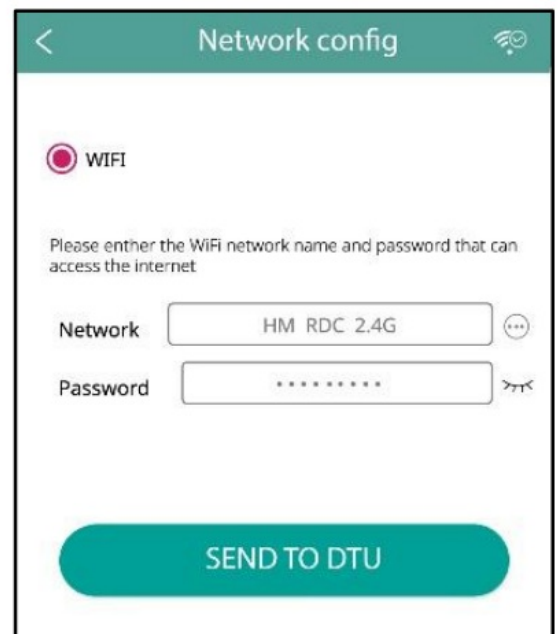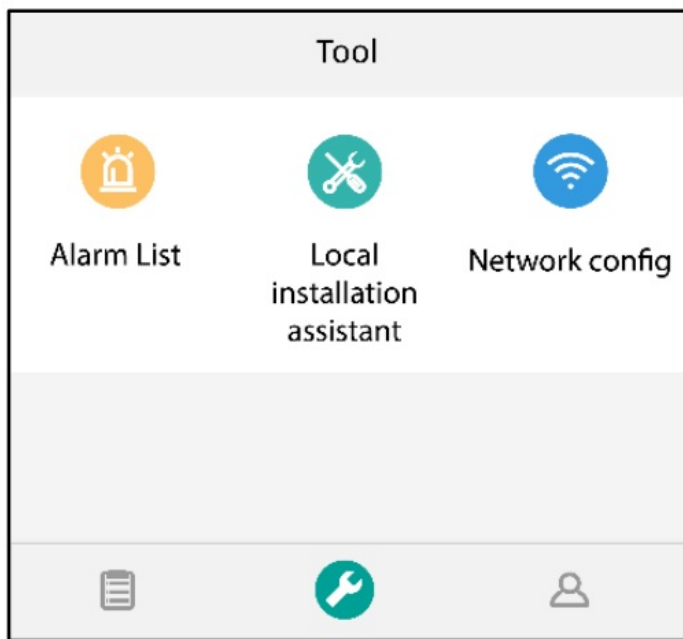

## Installation Map

Please complete the installation map.

A) Peel the serial number label (as circled below) from the DTU and place it on the installation map.

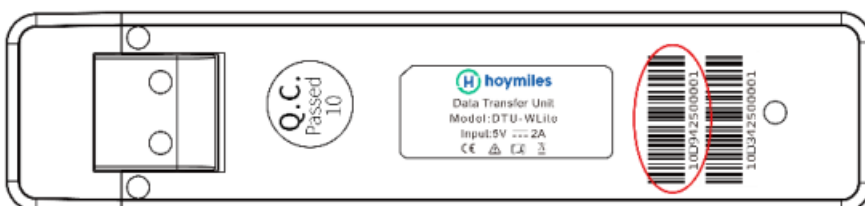

B) Complete system information of the installation map shown as follows.

To sheet \_\_\_\_\_ ↑

<b>Hoy miles</b>		Hoy miles Microinverter Installation Map												AP045228 V1.2		
Please Make It for North		Panel type: Azimuth: Tilt: Sheet _____ of _____						Customer Information						DTU Serial Number:		
SUN	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
A																
B																
C																
D																

To sheet \_\_\_\_\_ ↓

### Online Setting

Please complete the online account creation to complete the DTU installation (You can refer to “Quick Installation Guide for HMP Online Registration” for detail account creation steps).

**Note:** For more setting details regarding the Local Install Assistant please acquire the related Operation Guide from our Tech. Support Team at [service@hoymiles.com](mailto:service@hoymiles.com).

### Warning



**Warning**

- Only qualified personnel can install or replace the DTU.
- Do not attempt to repair the DTU as it contains the parts that are not serviceable to users. If the DTU breaks down, please contact your distributor for maintenance. Open the DTU without permission will invalidate the warranty.

### Documents / Resources

	<p><a href="#">hoymiles DTU-WLite Data Transfer Unit</a> [pdf] Installation Guide</p> <p>DTU-WLite, Data Transfer Unit, Transfer Unit, Data Transfer</p>
--	--