



Home » HP » hp MT7921W Button Speakers and Fingerprint Reader User Guide ™



Contents [hide]

- 1 hp MT7921W Button Speakers and Fingerprint Reader
- 2 Specifications
- 3 Product Usage Instructions
- 4 Power Button
- 5 Special Keys
- 6 Display
- 7 Touchpad components
- 8 FAQs
- 9 Documents / Resources
 - 9.1 References



hp MT7921W Button Speakers and Fingerprint Reader



• Component: Lights, Button, Speakers, Fingerprint Reader, Special Keys

• **Description:** Various components with specific functions

Product Usage Instructions

Lights

 Blinking: Indicates the computer is in Sleep state, conserving power by shutting off display and unnecessary components.

• Off: Computer is either off, in Hibernation, or in Sleep mode. Hibernation is the power-saving state consuming the least power.

Button, Speakers, and Fingerprint Reader

• Speakers: Produce sound.

Power Button

• Press briefly when the computer is off to turn it on.

• When the computer is on, a brief press initiates Sleep mode.

• In Sleep state, a brief press exits Sleep (select products only).

• In Hibernation, a brief press exists.

Fingerprint Reader: Enables fingerprint logon for Windows instead of a password logon. Register all sides of your finger to prevent login issues.

Special Keys

• Esc Key: Displays system information when pressed with the fn key.

• Fn Key: Executes specific functions when pressed with another key.

• Windows Key: Opens the Start menu.

 Action Keys: Execute frequently used system functions as defined by the icon symbols on the F1 through F12 keys. Varies by computer model.

SUMMARY

This guide provides information about components, network connections, power management, security, backing up, and more.

- © Copyright 2020 HP Development Company, L.P.
- Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license.
 Intel, Celeron, Pentium, and Thunderbolt are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries.
- Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. The microSD logo and microSD are trademarks of SD-3C LLC. USB Type-C® and USB-C® are registered trademarks of the USB Implementers Forum. DisplayPort™ and the DisplayPort™ logo are trademarks owned by the Video Electronics Standards Association (VESA) in theThe
- United States and other countries. Miracast® is a registered trademark of Wi-Fi
 Alliance.
- The information contained herein is subject to change without notice. The only warranties for HP products and services are outlined in the express warranty statements accompanying such products and services.
- Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

• First Edition: October 2020

• Document Part Number: M19507-001

Product notice

- This guide describes features that are common to most products. Some features might not be available on your computer.
- Not all features are available in all editions or versions of Windows. Systems might require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of
- Windows functionality. Windows 10 is automatically updated, which is always enabled.
 ISP fees might apply and additional requirements might apply over time for updates.
 Go to http://www.microsoft.com for details.
- To access the latest user guides, go to http://www.hp.com/support, and follow the instructions to find your product. Then select Manuals.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund, subject to the refund policy of your seller. For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

 Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.

WARNING

To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer's air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by applicable safety standards.

Processor configuration setting (select products only) Important information about processor configurations.

IMPORTANT

Select products are configured with an Intel® Pentium® N35xx/N37xx series or a Celeron® N28xx/N29xx/N30xx/N31xx series processor and a Windows® operating system. If your computer is configured as described, do not change the processor configuration setting in msconfig.exe from 4 or 2 processors to 1 processor. If you do so, your computer will not restart. You will have to perform a factory reset to restore the original settings.

Getting started

- This computer is a powerful tool designed to enhance your work and entertainment.
- Read this chapter to learn about best practices after you set up your computer, fun things to do with your computer, and where to find additional HP resources.

Best practices

After you set up and register the computer, we recommend the following steps to get the most out of your smart investment:

- Back up your hard drive by creating recovery media. See Backing up, restoring, and recovering on page 51.
- If you haven't already done so, connect to a wired or wireless network. See details in Connecting to a network on page 16.
- Become familiar with the computer hardware and software. For more information, see
 Getting to know your computer on page 3 and Enjoying entertainment features on page 20.
- Update or purchase antivirus software. See Using antivirus software on page 41.
- Access the HP Support Assistant app—For quick online support, open the HP
 Support Assistant app (select products only). HP Support Assistant optimises
 computer performance and resolves problems using the latest software updates,
 diagnostic tools, and guided assistance. Type support in the taskbar search box, and
 then select HP Support Assistant. Then select Support.

More HP resources

To locate resources that provide product details, how-to information, and more, use this table. Table 1-1 Additional information

Table 1-1 Additional information	
Resource	Contents
Setup Instructions	Overview of computer setup and features

For HP support, go to http://www.hp.com/support , and follow the instructions to find your product. - or - Type support in the taskbar search box, and then select HP Support Assistant. Then select Support. - or - Select the question mark icon in the taskbar search box. Then select Support.	 Online chat with an HP technician Support telephone numbers Replacement parts videos (select products o nly) Maintenance and service guides HP service centre locations
Safety & Comfort Guide To access this guide:	 Proper workstation setup Guidelines for posture and work habits that i ncrease your comfort and decrease your ris k of injury
To access this guide:	

Table 1-1 Additional information (continued)

Resource	Contents
----------	----------

 ▲ Type HP Documentation in the t askbar search box, and then select H P Documentation. - or - ▲ Go to http://www.hp.com/ergo. IMPORTANT: You must be connected to the internet to access the latest version of the user guide. 	Electrical and mechanical safety information
Regulatory, Safety, and Environment al Notices To access this document: Type HP Documentation in the t askbar search box, and then select H P Documentation.	Important regulatory notices, including infor mation about proper battery disposal, if nee ded.

Limited Warranty*

To access this document:

▲ Type HP Documentation in the t askbar search box, and then select **H P Documentation**.

- or -

▲ Go to http://www.hp.com/go/ord erdocuments.

IMPORTANT: You must be connected to the internet to access t he latest version of the user guide.

Specific warranty information about this computer

You can find your HP Limited Warranty located with the user guides for your product a nd/or on the CD or DVD provided in the box. In some countries or regions, HP might p rovide a printed warranty in the box. For countries or regions where the warranty is not provided in printed format, you can request a copy from http://www.hp.com/go/orderdocuments. For products purchased in Asia Pacific, you can write to HP at POD, PO Bo x 161, Kitchener Road Post Office, Singapore 912006. Include your product name, your name, phone number, and postal address.

Getting to know your computer

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Locating hardware

- To find out what hardware is installed on your computer, type Device Manager in the taskbar search box, and then select the Device Manager app.
- For information about system hardware components and the system BIOS version number, press fn+esc (select products only).

Locating software

To find out what software is installed on your computer, right-click the Start button, and then select Apps and Features.

Right side

Identify the components on the right side of the computer.

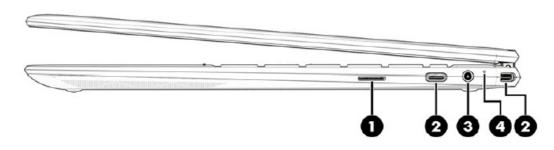


Table 2-1 Right-side components and their descriptions			
Compo nent		Description	
(1)	microSD™ memory card r eader	Reads optional memory cards that enable you to store, manage, share, or access information. To insert a card: 1. Hold the card label-side up, with conne ctors facing the computer. 2. Insert the card into the memory card re ader, and then press the card in until it is firmly seated. To remove a card: A Press in on the card, and then remove it from the memory card reader.	

Co mp o	nent		Description
(2)		USB Type-C power connector and Thunderbolt™ ports with HP Sleep and Charge (2)	Connect an AC adapter that has a USB Type-C connector, supplying power to th e computer and, if needed, charging the computer battery. — and — Connect a USB device, provide high-sp eed data transfer, and charge small devi ces, even when the computer is off. — and — Connect a display device that has a US B Type-C connector, providing DisplayP ort™ output. NOTE: Your computer might also suppo rt a Thunderbolt docking station. NOTE: Cables, adapters, or both (purch ased separately) might be required.

(3)	Audio-out (headphone) hone) combo)/Audio-in (microp o jack	Connects optional powered stereo spea kers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalo ne microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the Regulatory, Safety, and Environmental Notices. To access this guide: Type HP Documentation in the task bar search box, and then select HP Documentation. NOTE: When a device is connected to the jack, the computer speakers are disabled.
(4)	AC adapter a	and battery light	 White: The AC adapter is connected, and the battery is fully charged. Blinking white: The AC adapter is disconnected, and the battery has reached a low battery level. Amber: The AC adapter is connected, and the battery is charging. Off: The battery is not charging.

Left side

Identify the components on the left side of the computer.

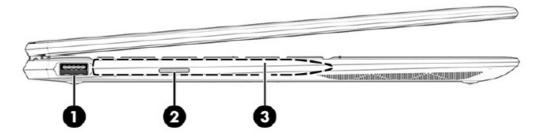


Table 2-2 Left-side components and their descriptions		
Compo		Description
(1)	USB port with HP Sleep and Charge	Connects a USB device, provides high-spe ed data transfer, and charges small device s, even when the computer is off.
(2)	Nano SIM card slot (select products only)	Supports a wireless subscriber identity mo dule (SIM) card. For SIM card installation steps, see <u>Using</u> a SIM card (select products only) on page 15.
(3)	Magnetic pen attachment are	Holds an optional pen. With the pen tip facing towards you, place the flat magnetic side of the pen against the left side of the computer near the display. NOTE: For more information about the pen, see the documentation provided with the pen.

Display

The computer display can include essential components such as speakers, antennas, cameras, and microphones.

Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

WARNING

To reduce the risk of serious injury, read the Safety & Comfort Guide. It describes proper workstation setup and proper posture, health, and work habits for computer users. The Safety & Comfort Guide also provides important electrical and mechanical safety information. The Safety & Comfort Guide is available on the web at http://www.hp.com/ergo.

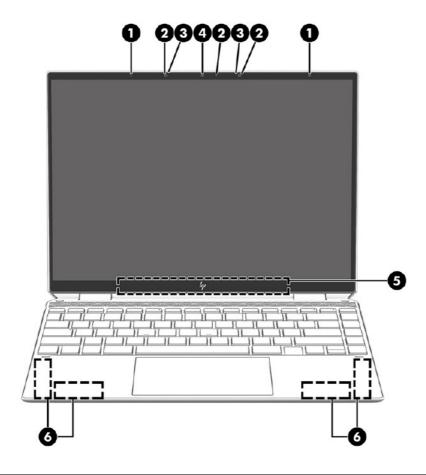


Table 2-3 Display components and their descriptions

Component

Description

(1)	Ambient light sensors (2) (select products only)	Adjusts the brightness of the display, depending on the ambient light.
(2)	Camera light(s)	On: One or more cameras are in use.
(3)	Internal microphones	Record sound.
(4)	Camera	Allows you to video chat, record video, and record still images. To use your camera, see Using the camera on page 20. Some camera s also allow a facial recognition login to Windows, instead of a password login. For more in formation, see Using Windows Hello (select products only) on page 40. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(5)	WLAN antennas*	Send and receive wireless signals to communicate with wireless local area networks (WL ANs).
(6)	WWAN antennas* (select produc ts only)	Send and receive wireless signals to communicate with wireless wide area networks (WW ANs).

*The antennas are not visible from the outside of the computer. For optimal transmissi on, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environ mental Notices* that applies to your country or region.

To access this guide:

▲ Type HP Documentation in the taskbar search box, and then select **HP Documen** tation.

Keyboard area

• Keyboards can vary by language.

Touchpad settings and components

• Learn the touchpad settings and components

Touchpad settings

• Learn how to adjust touchpad settings.

Adjusting touchpad settings

Use these steps to adjust touchpad settings and gestures.

- 1. Type touchpad settings in the taskbar search box, and then press Enter.
- 2. Choose a setting.

Turning on the touchpad

Follow these steps to turn on the touchpad

1. Type touchpad settings in the taskbar search box, and then press Enter.

2. Using an external mouse, click the touchpad button.

If you are not using an external mouse, press the Tab key repeatedly until the pointer rests on the touchpad button. Then press the spacebar to select the button.

Touchpad components

Identify the touchpad components.

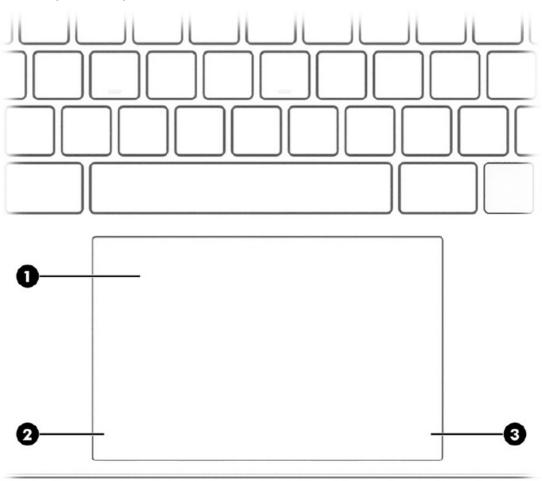


Table 2-4 Touchpad components and their descriptions	
Compo nent	Description

(1)	Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen. NOTE: For more information, see <u>Using touchpa</u> d and touch screen gestures on page 24.
(2)	Left touchpad button	Functions like the left button on an external mous e.
(3)	Right touchpad button	Functions like the right button on an external mouse.

Lights

Identify the lights on the computer.

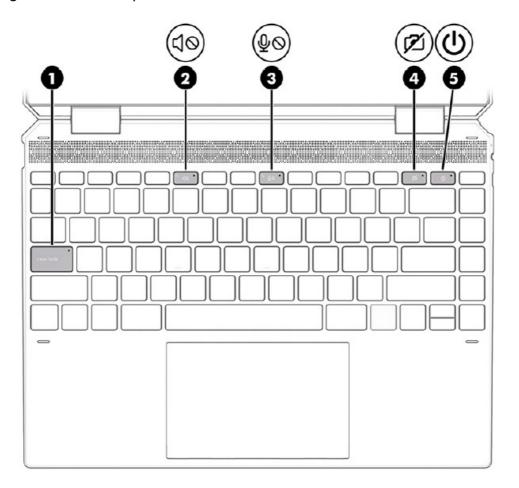


Table 2-5 Lights and their descriptions		
Compone		Description

(1)		Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2)	4 ⊘	Mute light	On: Computer sound is off.Off: Computer sound is on.
(3)	Φ0	Microphone mute light	On: The Microphone is off.Off: The Microphone is on.
(4)	Ø	Camera privacy light	On. The camera is off.Off. The camera is on.
(5)	மு	Power light	On: The computer is on.

FAQs

Q: What should I do if my computer stops responding?

A: If shutdown procedures are ineffective, press and hold the power button for at least 10 seconds to turn off the computer. This may result in the loss of unsaved information. For more power options, refer to your device's settings.

Documents / Resources



hp MT7921W Button Speakers and Fingerprint Reader [pdf] User Guide MT7921W, MT7921W Button Speakers and Fingerprint Reader, Button Speakers and Fingerprint Reader, Speakers and Fingerprint Reader, Finger print Reader

References

User Manual

▶ Button Speakers and Fingerprint Reader, Fingerprint Reader, HP, MT7921W, MT7921W Button Speakers and Fingerprint Reader, Speakers and Fingerprint Reader

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *				
Name				
Email				
Website				
☐ Save my name, email, and website in this browser for the next time I con	nment.			
Post Comment				
Search:				
e.g. whirlpool wrf535swhz	Search			

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.