

HPRT MT866 Portable Printer Wireless Bluetooth Connection User Guide



Contents

1 Quick Start Guide

1.1 MT866

1.1.1 Packing List

1.1.2 Appearance and Components

1.1.2.1 Front View

1.1.2.2 Left View

1.1.2.3 Inner View

1.1.3 LED Indicator

1.1.4 Print Self-test Page

1.1.5 Power On

1.1.6 Paper Loading

1.1.7 Printing from Mobile Phone

1.1.8 Printing from Computer

1.1.9 Battery Charging

1.1.10 Precautions

1.1.11 FCC WARNING


2 Documents / Resources

2.1 References

3 Related Posts

Quick Start Guide

 MT866

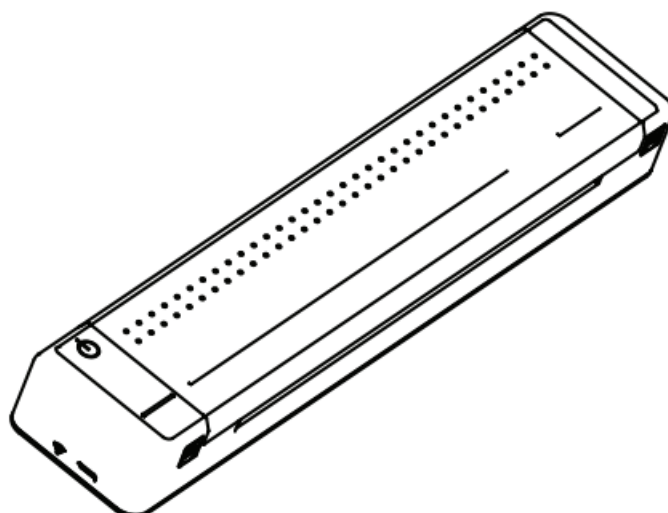


Manufacturer: Xiamen Hanin Electronic Technology Co.,Ltd.

Add: No.96, Rongyuan Road, Tong'an District, Xiamen, China, 361100

E-mail: support@hpert.com

Web: www.hpertprinter.com

 
Packing List

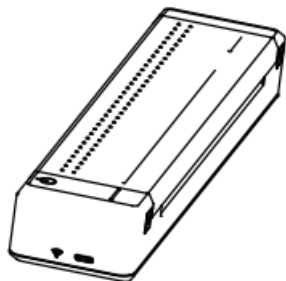


Printer



 
Thermal Bracket

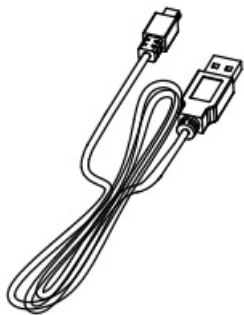

USB Cable

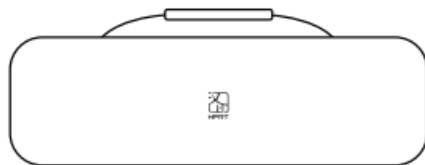 

Protective Case

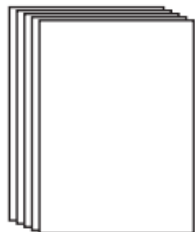 


Thermal Paper



Quick Start Guide

Appearance and Components

 
Front View

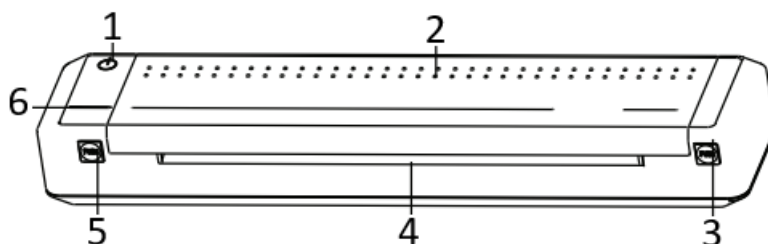

1. Power Button


2. Top Cover
3. Right Cover Opening Button
4. Paper Inlet
5. Left Cover Opening Button
6. LED Indicator

 Left View

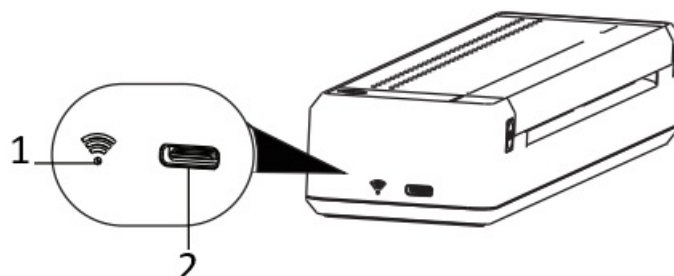

1. Connection Status Indicator
2. USB Type-C Interface

 Inner View

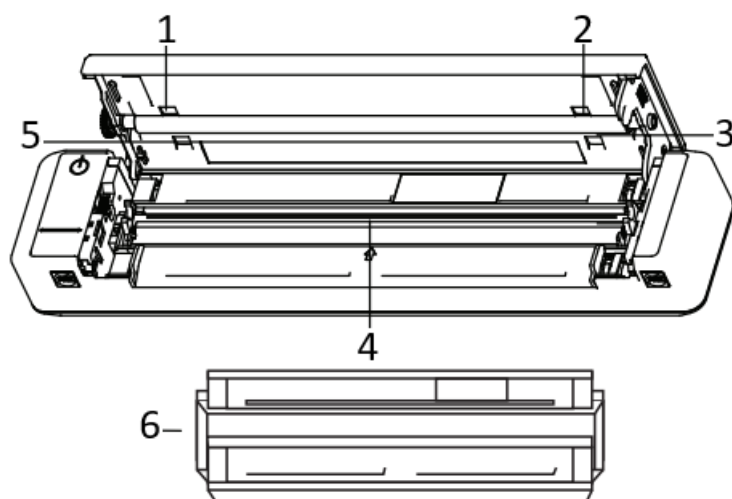

1. Left Out-of-paper Sensor
2. Right Out-of-paper Sensor
3. Right Paper Position Sensor
4. TPH
5. Left Paper Position Sensor
6. Thermal Bracket

LED Indicator

White LED indicator is lighting: Printer is turned on.

Green LED indicator is lighting: Printer is in charging mode, and green LED indicator will be off when fully

charged.

Red LED indicator is flashing: Printer cover is opened.

 
Note: For more LED indicator and buzzer status, please contact customer service by email.

Print Self-test Page

In the turned on state, loading the thermal paper, press the power button 3 times to print a self-test page of the printer.

Power On


Hold down the power button for 3 seconds to turn on the printer.

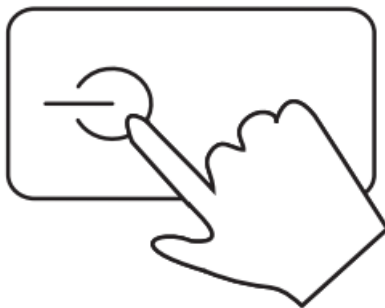

To turn off the printer, also hold down the power button for 3 seconds.

Paper Loading

 Put the thermal paper into the paper inlet in parallel with the thermal side down.
The printer will feed a distance automatically after detecting the paper.

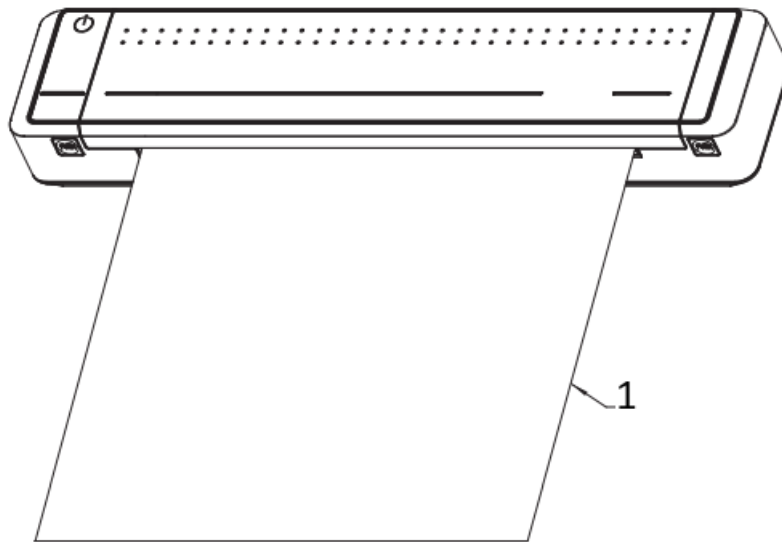

1. Thermal Side Down

Note: If the buzzer sounds once when paper feeding stops, it shows that the paper is loaded successfully. If the buzzer keeps beeping and the red LED is flashing, please open the cover and reload the paper.

Printing from Mobile Phone

1. APP Download

Scan the QR code to download the APP.



2. Connect with the printer

- (1) Open App, click "Connect printer", and "Connect" with "HPRT MT866-XXXX"(XXXX are last four digits of Bluetooth address);
- (2) If the APP can't find the printer, please open "Settings"- "Bluetooth" on your phone and connect with the printer first, and then return to APP and click "Connect".

3. Print

- (1) Open the document you want to print, and copy/share it to APP. (Or click "Documents" on Home to choose the document.)
- (2) Adjust it in Print preview, and click "Print" to print it.

 
Printing from Computer

1. Connect one side of the USB cable to the computer and the other side to the printer;
2. Turn on the printer;
3. Download the printer driver from the website: www.hpprt.com/HPRT-MT866 And then install it on the computer;
4. Choose the document you want to print and print it via printer "HPRT MT866".

Battery Charging

When the printer is in low power, the green LED indicator will flash. Please use matching USB cable to charge in time. If you continue printing, the printer may shut down automatically.

(1) Charging by computer

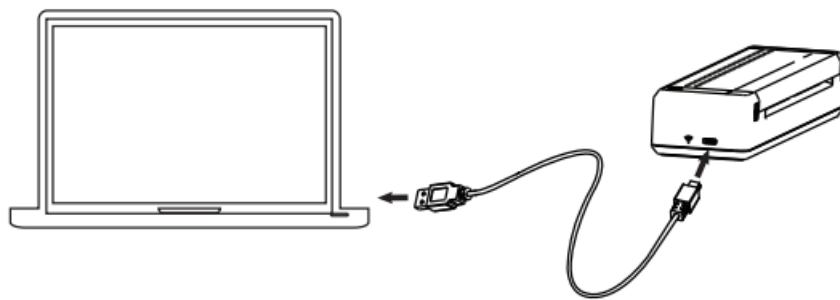

(2) Charging by adapter



Precautions

1. The best operating temperature is 0°C~40°C, if the environmental temperature is too low or too high, the print quality may be affected.
2. Please do not use the unofficial paper to ensure the print quality.
3. During printing, the area around the print head is very hot. Do not touch it to avoid burns.
4. Do not pull out paper by force during printing, or else it may damage the printer.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

FCC ID: 2AUTE-8TT22G

Please Scan QR Code to Get 24h After-sales
Technical Support Service



Search "HPRT Official" on YouTube to
Get Instruction Videos



HPRT YouTube Website

Search "HPRT Official" on Facebook to
Get Extra Consumables of Printer



HPRT Facebook Website

Documents / Resources

 Quick Start Guide MT866  <small>Manufacturer: Xiamen Hanin Electronic Technology Co., Ltd. Model: MT866 Version: 1.0 Copyright © 2018 Xiamen Hanin Electronic Technology Co., Ltd.</small>	<p>HPRT MT866 Portable Printer Wireless Bluetooth Connection [pdf] User Guide MT866 Portable Printer Wireless Bluetooth Connection, MT866, Portable Printer Wireless Bluetooth Connection, Printer Wireless Bluetooth Connection, Wireless Bluetooth Connection, Bluetooth Connection, Connection</p>
--	--

References

- hpert.com/HPRT-MT866
- [Mini Label Printer, A4 Thermal Printer, Home A4 Printer Suppliers - Xiamen Hanin Electronic Technology Co.,Ltd.](#)
- [User Manual](#)