



HQ POWER HQSA1011 BAZOOKA II Bluetooth Speaker User Manual

[Home](#) » [HQ-POWER](#) » HQ POWER HQSA1011 BAZOOKA II Bluetooth Speaker User Manual 

Contents

- [1 HQ POWER HQSA1011 BAZOOKA II Bluetooth Speaker](#)
- [2 Introduction](#)
- [3 Safety Instructions](#)
- [4 General Guidelines](#)
- [5 Overview](#)
- [6 Use](#)
- [7 General Use](#)
- [8 Care and Maintenance](#)
- [9 Technical Specifications](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)



HQ POWER HQSA1011 BAZOOKA II Bluetooth Speaker



Introduction

To all residents of the European Union Important environmental information about this product This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a specialized company for recycling. This device should be returned to your distributor or to a local recycling service. Respect the local environmental rules. If in doubt, contact your local waste disposal authorities. Thank you for choosing HQPower™! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, do not install or use it and contact your dealer.

Safety Instructions

Read and understand this manual and all safety signs before using this appliance.

- This device can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance contains an internal rechargeable battery. When the device reaches its end-of-life, it must be disposed of in accordance with local regulations.
- Do not install the appliance near any heat sources such as radiators, heat registers, stoves or other appliances that produce heat. Keep the appliance away from water, humidity and fire.
- The light source contained in this appliance cannot be replaced.
- Refer all servicing to qualified service personnel. Servicing is required when the appliance has been damaged in any way, does not operate normally, or has been dropped.

General Guidelines

- Refer to the Velleman® Service and Quality Warranty on the last pages of this manual.

- All modifications of the device are forbidden for safety reasons. Damage caused by user modifications to the device is not covered by the warranty.
- Only use the device for its intended purpose. Using the device in an unauthorised way will void the warranty.
- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any ensuing defects or problems.
- Nor Velleman nv nor its dealers can be held responsible for any damage (extraordinary, incidental or indirect) – of any nature (financial, physical...) arising from the possession, use or failure of this product.
- Keep this manual for future reference.

Overview

Refer to the illustrations on page 2 of this manual.

1	LED display
2	microSD port
3	USB port
4	charging input
5	aux input
6	volume

7	on-off
8	RGB LED
9	mode
10	previous/backward
11	play/pause
12	next/forward

Use

Getting Started

Installation

Install the appliance on a flat, non-slippery surface.

Charging

The speaker is powered by a built-in rechargeable battery, which must be fully charged before first use. To do so, connect the appliance to a powered USB power source using the included USB cable.

The charge LED on the display will burn red. When the battery is fully charged, the LED will switch off.

Note that a rechargeable battery has a limited number of charge cycles. Battery life and number of charge cycles vary according to use and settings.

The average charging time is 3 to 5 hours. To prolong battery life, do not charge continuously for more than 5 hours.

General Use

Wireless Function

1. Switch on the appliance.
2. Press the mode button to select the wireless function. The speaker will beep twice.
3. Activate the wireless function on your mobile phone and search for the speaker HQSA1011. Pair the speaker to your phone. Enter password 0000 if necessary.
4. You can now play music files from your mobile phone. Control the track from your mobile phone and adjust the volume level with the volume knob on the speaker or mobile phone.

USB/MicroSD Card

1. Insert a USB stick into the USB port, or a microSD card in the microSD port. The audio files will play automatically.
2. Play/pause the track with the play/pause button. Select the previous/next track by briefly pressing the previous/next button. Rewind/forward track by holding the backward/forward button. Adjust the volume level with the volume knob.

FM Radio

1. The included audio cable acts as an antenna. Insert the audio cable into the aux input prior to selecting the FM radio. Make sure to remove the USB stick before selecting the FM mode.
2. Next, press the mode button to select the FM radio.
3. In playing mode, short press the play/pause button to auto search and store the FM frequencies. Select the channel with the backward/forward button.

Aux Input

1. Insert the audio cable into the aux input and select the aux function using the mode button.
2. Connect your auxiliary device to the speaker. Control all functions from your auxiliary device except for the volume control.

Remarks

- In wireless mode, inserting a USB stick or microSD card will disconnect the wireless mode.
- Switch off the appliance after use.

Care and Maintenance

Storage

Store the appliance and its accessories in a clean and dry area.

Cleaning

Occasionally wipe with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents or strong detergents.

Maintenance

All repairs should only be carried out by qualified service personnel. Do not open exterior casing of the appliance. There are no user-serviceable parts inside. Opening or visible attempts to open or repair the appliance may void any guarantee and/or cause damage to the product or personal injury.

Technical Specifications

- power supply 5 VDC, 1 A via micro-USB
- maximum power 11.5 W
- battery capacity 1500 mAh, 3.7 V
- charging time.....4 h
- playing time..... 1 h @ max. volume
- playing time..... 1 h @ max. volume
- USB/SD card max. 32 GB
- dimensions 315 x 138.5 x 146.5 mm

Use this device with original accessories only. Velleman nv cannot be held responsible in the event of damage or injury resulting from (incorrect) use of this device. For more info concerning this product and the latest version of this manual, please visit our website www.hqpower.eu. The information in this manual is subject to change without prior notice.


RED Declaration of Conformity

Hereby, Velleman NV declares that the radio equipment type [HQSA1011] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.velleman.eu.

© COPYRIGHT NOTICE

The copyright to this manual is owned by Velleman nv. All worldwide rights reserved. No part of this manual may be copied, reproduced, translated or reduced to any electronic medium or otherwise without the prior written consent of the copyright holder.

Documents / Resources

	<p>HQ POWER HQSA1011 BAZOOKA II Bluetooth Speaker [pdf] User Manual</p> <p>HQSA1011, BAZOOKA II Bluetooth Speaker, HQSA1011 BAZOOKA II Bluetooth Speaker, Bluetooth Speaker, Speaker</p>
---	--