



HQ POWER HQSA1040 Bluetooth Speaker

[Home](#) » [HQ-POWER](#) » HQ POWER HQSA1040 Bluetooth Speaker 

Contents

- [1 HQ POWER HQSA1040 Bluetooth Speaker](#)
- [2 Introduction](#)
- [3 Safety Instructions](#)
- [4 General Guidelines](#)
- [5 Use](#)
- [6 Care and Maintenance](#)
- [7 Technical Specifications](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



HQ POWER HQSA1040 Bluetooth Speaker



Introduction

To all residents of the European Union Important environmental information about this product. This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a specialized company for recycling. This device should be returned to your distributor or to a local recycling service. Respect the local environmental rules.

If in doubt, contact your local waste disposal authorities. Thank you for choosing HQPower™! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, do not install or use it and contact your dealer.

Safety Instructions

Read and understand this manual and all safety signs before using this appliance. Indoor use only.

- This device can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance contains an internal rechargeable battery. When the device reaches its end-of-life, it must be disposed of in accordance with local regulations. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not install the appliance near any heat sources such as radiators, heat registers, stoves or other appliances that produce heat. Keep the appliance away from water, humidity and fire.
- The light source contained in this appliance cannot be replaced.
- Refer all servicing to qualified service personnel. Servicing is required when the appliance has been damaged in any way, does not operate normally, or has been dropped.

General Guidelines

- Refer to the Velleman® Service and Quality Warranty on the last pages of this manual.
- All modifications of the device are forbidden for safety reasons. Damage caused by user modifications to the device is not covered by the warranty.
- Only use the device for its intended purpose. Using the device in an unauthorised way will void the warranty.
- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any ensuing defects or problems.
- Nor Velleman nv nor its dealers can be held responsible for any damage (extraordinary, incidental or indirect) – of any nature (financial, physical...) arising from the possession, use or failure of this product.
- Keep this manual for future reference.

Use

Installation

Install the appliance on a flat, non-slippery surface.

Charging

The speaker is powered by a built-in rechargeable battery, which must be fully charged before first use. To do so, connect the appliance to a powered USB power source using the included USB cable.

The charge LED on the display will burn red. When the battery is fully charged, the LED will switch off. Note that a rechargeable battery has a limited number of charge cycles. Battery life and number of charge cycles vary according to use and settings.

Average charging time is 2 hours. To prolong battery life, do not charge continuously for more than 2 hours.

On/Off

1. To switch on the appliance, turn the power knob to the on position. The appliance will enter the last used mode before switch-off.
2. To switch off the appliance, turn the power knob to the off position.

Wireless Function

1. Press the mode button to select the wireless function. The speaker will beep twice.
2. Activate the wireless function on your mobile phone and search for the appliance SA1040. Pair the appliance to your phone. Enter password 0000 if necessary.
3. You can now play music files from your mobile phone. Control the track from your mobile phone and adjust the volume level with the volume knob on the appliance or mobile phone.

USB/TF Card

1. Insert a USB stick into the USB port, or a TF card in the TF port. The audio files will play automatically.
2. Play/pause the track with the play/pause button. Select the previous/next track by briefly pressing the previous/next button. Adjust the volume level with the volume knob.

FM Radio

1. The appliance has a built-in antenna. Press the mode button to switch to FM mode.
2. Next, press the scan button to auto search and store the FM frequencies.
3. Once the search done and the frequencies saved, select the channel with the backward/forward button.





Aux Input

1. Insert the audio cable into the aux input. The appliance will automatically switch to the aux function.
2. Connect your auxiliary device to the appliance. Control all functions from your auxiliary device.

Mic Input

1. Connect a microphone to the appliance.
2. Adjust the volume level with the volume knob.

Remote Control

MODE	Press to select the wireless/FM mode.
CH+	In FM mode, press to select the next channel.
CH-	In FM mode, press to select the previous channel.
	In MP3 mode, short press to select the next track, long press to fast forward.
	In MP3 mode, short press to select the previous track, long press to rewind.
	Press to play/pause the track.
VOL-	Press to decrease the volume level.
VOL+	Press to increase the volume level.
EQ	Press to select the sound mode (Jazz → Rock → Bass → Normal → Class).
	In MP3 mode, short press to enter the repetition mode (Fold (repeat folder), One (repeat the selected song), rAn (random), All (repeat all songs))
0-9	In FM mode, press to select the channel. In MP3 mode, press to select the song.
100+	

Remarks

- In wireless mode, inserting a USB stick or microSD card will disconnect the wireless mode.
- Switch off the appliance after use.

Care and Maintenance

Storage

Store the appliance and its accessories in a clean and dry area.

Cleaning

Occasionally wipe with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents or strong detergents.

All repairs should only be carried out by qualified service personnel. Do not open exterior casing of the appliance. There are no user-serviceable parts inside. Opening or visible attempts to open or repair the appliance may void any guarantee and/or cause damage to the product or personal injury.

- power supply: 5 VDC, 2 A via micro-USB
- maximum power: 2 x 15 W
- battery capacity: 2x 1500 mAh, 3.7 V lithium
- charging time: 2 h
- playing time: 3-5 h @ max. volume
- frequency response: 80 Hz-18 kHz
- S/N ratio: > 85 dB
- speakers: 2 x 4" – 2 Ω
- USB/SD card: max. 32 GB
- weight: 2.09 kg
- dimensions: 375 x 145 x 210 mm

RED Declaration of Conformity

COPYRIGHT NOTICE

Documents / Resources

