

# ALCK-486 Set Time / Alarm / Stopwatch - User Guide

Home » HRS » ALCK-486 Set Time / Alarm / Stopwatch – User Guide 🖫

## **Contents**

- 1 User Guide
  - 1.1 ALCK-486 Set Time / Alarm / Stopwatch
- 2 Instructions:
- **3 Related Posts**

**User Guide** 



# ALCK-486 Set Time / Alarm / Stopwatch

## Instructions:

- 1. Regular mode shows Hour Minute Second Day of the week.
- 2. Press and hold "S" (set) button to view alarm time setting. Regular mode will reappear upon release.
- 3. Press and hold "D" (date) button to view Month and Day. Regular mode will reappear upon release.

#### Sat time and date:

In regular mode, press "M" (mode) button 3 times. Set the second first by pressing the "D" (date) button to reset at 0, then press "S" (set) to confirm. The minute will start flashing. Press "D" (date) to adjust, then "S" (set) to confirm. Repeat the same procedure to adjust the hour, day, month. Press "M" (mode) button to confirm all the adjustments and return to regular mode.

## NOTE:

- Press and hold the "D" (data) button when in setting mode to last forward the digits.
- Make sure to respect the AM / FM time.

## Alarm setting:

In regular mode, press "M" (mode) 2 times to set the hour of alarm first by pressing the "D" (date) button, then press "S" (set) to confirm. Press "D" (dale) to adjust the minute, then "S" (set) to confirm. Press "M" (mode) to return to regular display mode.

## Turn ON / OFF alarm function:

In regular mode, press and hold "S" (set) button and at the same time press "D" (date) button to tum alarm function ON or OFF. Make sure the alarm icon appears on display when the alarm function is activated and disappears when it is OFF.

## **Snooze function:**

When the alarm sound is on, press "D" (data) button to enter "snooze" function mode and the alarm sound will tum on again after 5 minutes. To stop alarm sound, press "S" (set) button.

## Stopwatch (timer) setting:

In regular mode, press "M" (mode) once to enter Timer mode. Press "S" (set) button to reset at 0, then press "D" (date) to start / stop the timer. Press "M" (mode) to return to regular mode.

#### **Read More About This Manual & Download PDF:**

ALCK-486 Set Time / Alarm / Stopwatch — User Guide — Optimized PDF ALCK-486 Set Time / Alarm / Stopwatch — User Guide — Original PDF

Questions about your Manual? Post in the comments!

Manuals+.