


[Home](#) » [HTL Electronics](#) » **HTL Electronics 2ARW6-B2 CD Player Wireless 2 In 1 B6 Audio Receiver and Transmitter User Manual** 

Contents [[hide](#)]

- [1 HTL Electronics 2ARW6-B2 CD Player Wireless 2 In 1 B6 Audio Receiver and Transmitter](#)
- [2 Product Usage Instructions](#)
- [3 Summarize](#)
- [4 Button Functions](#)
- [5 Specification](#)
- [6 FCC STATEMENT](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

HTL Electronics

HTL Electronics 2ARW6-B2 CD Player Wireless 2 In 1 B6 Audio Receiver and Transmitter



Product Usage Instructions

Charging and Powering On

- Charge the device for 2-3 hours using a USB-5V1A power source.
- After charging or plugging in the power supply, switch ON the CD player.

Playing Content

- Insert a CD-ROM or plug in an audio device.
- Press the play/pause icon briefly to start playback.
- Press the play/pause icon briefly again to pause playback.
- Press and hold the play/pause icon for 3 seconds to switch between different playback modes.

Mode Switching

- When all audio devices are connected, the playback order is CD-USB-TF-FM-AUX.
- Press the mode switching button briefly to cycle through the different modes.

Controlling Playback

 
- Click the previous song button to play the previous track.
- Click the next song button to play the next track.
- Use the volume buttons to adjust the volume levels as desired.

Notice


- Avoid high volume levels to protect your hearing.
- Handle discs carefully to prevent player malfunction; avoid heavy scratches, fingerprints, and dirt on the signal side of the disc.

CD Player User's Manual

- Please read the instruction manual carefully before use in order to use the CD player correctly and quickly.
- The color is based on the real thing.

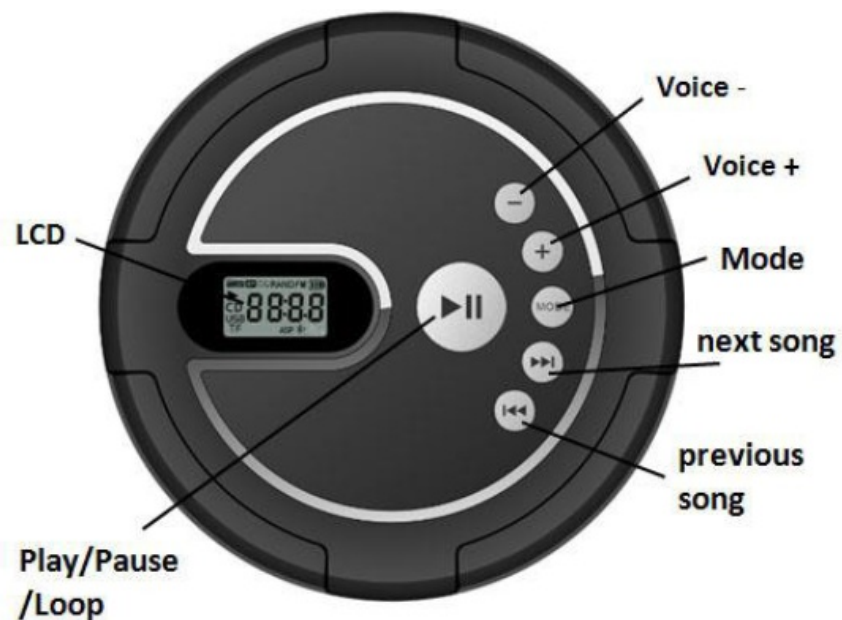

 - CD Player *1
- TYPE-C line*1
- Instruction manual*1

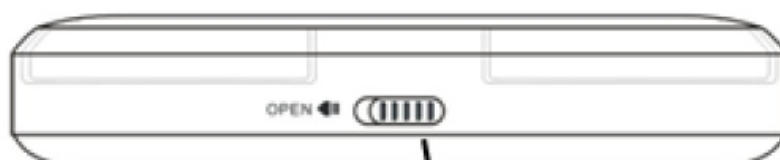

Push left to pop open the top cover and insert a CD-ROM.

Summarize



 

For your safe and proper use, please read and observe the following precautions

1. Do not hit the host machine severely.
Keep away from strong magnetic and electric fields.
2. Do not expose this CD player to moisture, rain, sand, various heat sources, and chemicals such as benzene and thinner.
3. Clean the CD player with a soft, slightly damp cloth, instead of alcohol, benzene solvents, or other chemicals;
4. Do not use the CD player and headphones while riding, driving a car, or motorcycle in case of danger;
5. Do not disassemble, repair, or modify the CD player by yourself. If the CD player is damaged due to illegal operation, the consequences will be at the user's own risk.
6. Please sort and dispose of waste packaging, batteries, and old electronics properly.

Button Functions





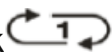


Play/Pause/Loop

- After charging the battery or plugging in the power supply, switch ON, put in the CD-ROM, or plug in the audio device.
- Press the play  /pause  icon briefly to play, and then press the “P” icon briefly to pause in the playback state.
- Press and hold for 3 seconds to switch between “RAND” playback, loop playback , and single song loop playback .

 


Mode switching

- When all the audio devices are in the state, playback order is CD-USB-TF-FM-AUX.
Press  the button briefly to switch in order.
- (Note: The CD needs to be put into the CD-ROM. USB flash disk, TF card, and AUX mode should be accessed with the appropriate equipment. When you need to turn on FM mode, you must first insert the headphones.)




-  previous song: Click to play the previous song
-  Next song: Click to play the next song
-  Press the “Voice + ” button briefly to increase the volume, and press and hold the “Voice +” button to increase the volume quickly
-  Press the “Voice – ” button briefly to reduce the volume, and press and hold the “Voice – ” button to quickly reduce the volume to zero

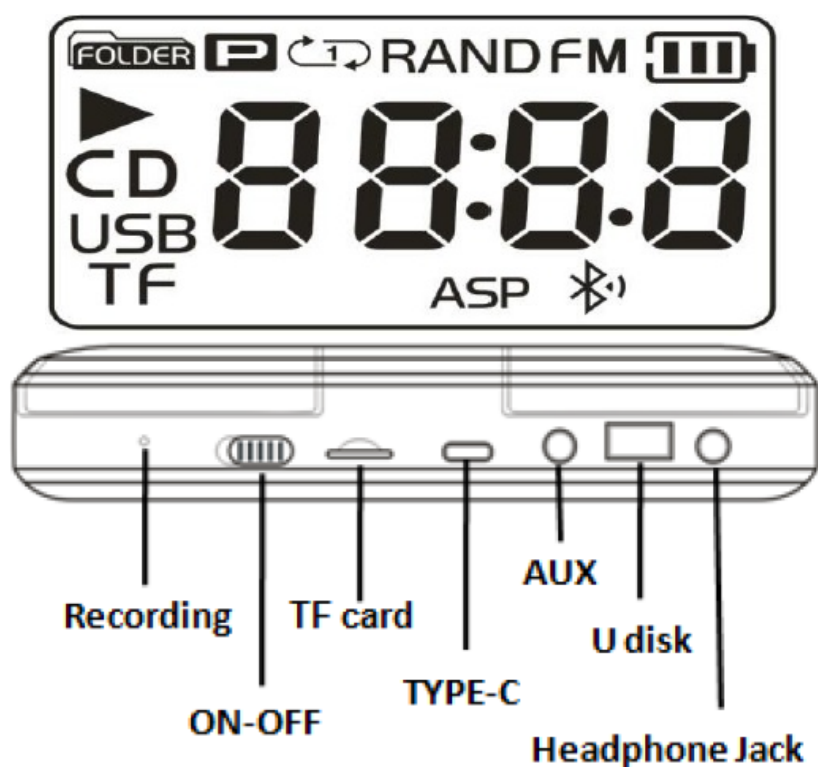
Functions




- CD: inserting the CD-ROM to enter the default CD mode, CD icon will light up, ASP icon will be displayed, and anti-shock function will be turned on automatically in working condition.
- USB flash disk: inserting the USB flash disk, USB icon will light up, and the machine will play the songs from the USB flash disk.
- TF card: Inserting the TF card, the TF icon will light up, and the machine will play the songs on the TF card
- AUX: Plugged into the external input audio signal, the AUX icon will light up, and the machine will play the external audio.
- FOLDER: playing the music stored in the folder, the FOLDER icon will light up.

- Bluetooth: transmit Bluetooth signals, connect to devices such as mobile phones, Bluetooth headphones, Bluetooth speakers, car Bluetooth speakers, etc.

1. In CD, TF card, and USB playback modes, long-press the  button for 3-5 seconds, and the Bluetooth emission icon  will flash. Turn on the device that needs to be connected, such as Bluetooth headphones, Bluetooth speakers, or car Bluetooth speakers. After the device is turned on, it will automatically connect within 10-20 seconds (do not turn on other Bluetooth receiving devices during the process to avoid connecting to other devices). After the connection is complete, the Bluetooth icon will stop flashing, and the CD player will output it as a sound source to other devices
2. Every time you switch between CD mode, TF card mode, and USB mode, you need to reconnect to Bluetooth.
3. Some sports earphones and Apple earphones require pairing to be turned on for the CD to automatically connect.
4. If the connection timeout occurs, please check if the device is in working condition, disconnect it from other connections, and then restart it to reconnect.
5. When the phone beeps, press  briefly to make a Bluetooth call.

FM: Inserting into the headset, “FM” will light up to enter the reception mode. Press and hold  for 3 seconds to search channels automatically. Press the previous button and the next button to switch.

Charging instructions

1. The power adapter is USB 5V1A. If you use an adapter higher than 5V, it will burn the internal chip and prevent it from working normally.
2. When the screen shows the low battery symbol , please charge this CD-ROM as soon as possible; when charging, the battery symbol on the screen flashes.

Specification

- **Power Input:** USB-5V1A
- **Supported Disk Format:** CD Original Disk, MP3 Disk, CD-R, CD-RW

- **Supported music format:** CD-DA, M P3, WMA
- **Battery:** Charge 2-3 hours, 2-3 hours of playback in CD mode, 6-8 hours of playback in another mode.
- **Bluetooth transmitting distance:** 10 meters

Notice

1. Do not overdo the volume, so as not to damage your hearing
2. Cracked discs can cause player malfunction. Heavy scratches, fingerprints, and dirt on the signal side of the disc may result in equipment malfunction or shorten the life of the laser head.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, according to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet the general RF exposure requirements. The device can be used in portable exposure conditions without restriction

FAQ

- **Q: What should I do if my CD player malfunctions?**
 - **A:** Check the disc for cracks and ensure it is clean. Also, try adjusting the volume levels and power cycling the device.
- **Q: How do I maximize battery life?**
 - **A:** Charge the device fully before initial use and avoid overcharging. Use in CD mode for shorter playback sessions to extend battery life.

Documents / Resources

<div>CD Player User's Manual</div> <div><small>Please read the instruction manual carefully before using a product and be sure to follow the safety instructions. The safety instructions are included in the manual.</small></div>	<div>HTL Electronics 2ARW6-B2 CD Player Wireless 2 In 1 B6 Audio Receiver and Transmitter [pdf] User Manual</div> <div>2ARW6-B2, 2ARW6-B2 CD Player Wireless 2 In 1 B6 Audio Receiver and Transmitter, CD Player Wireless 2 In 1 B6 Audio Receiver and Transmitter, Wireless 2 In 1 B6 Audio Receiver and Transmitter, 2 In 1 B6 Audio Receiver and Transmitter, Audio Receiver and Transmitter, Receiver and Transmitter</div>
---	---

References

- [User Manual](#)

2 In 1 B6 Audio Receiver and Transmitter, 2ARW6-B2, 2ARW6-B2 CD Player Wireless 2 In 1 B6 Audio Receiver and Transmitter, Audio Receiver and Transmitter, CD Player Wireless 2 In 1 B6 Audio Receiver and Transmitter, HTL Electronics, Receiver and Transmitter, Wireless 2 In 1 B6 Audio Receiver and Transmitter

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.