 


Huiran
YMP-A1 MP4
Player User

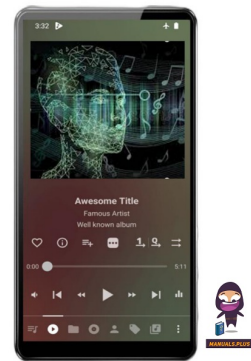

Huiran YMP-A1 MP4 Player User Guide

 
[Home](#) » [Huiran](#) » Huiran YMP-A1 MP4 Player User Guide 

Contents

- [1 Huiran YMP-A1 MP4 Player](#)
- [2 Open the Package](#)
- [3 FAQs](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Huiran

Huiran YMP-A1 MP4 Player

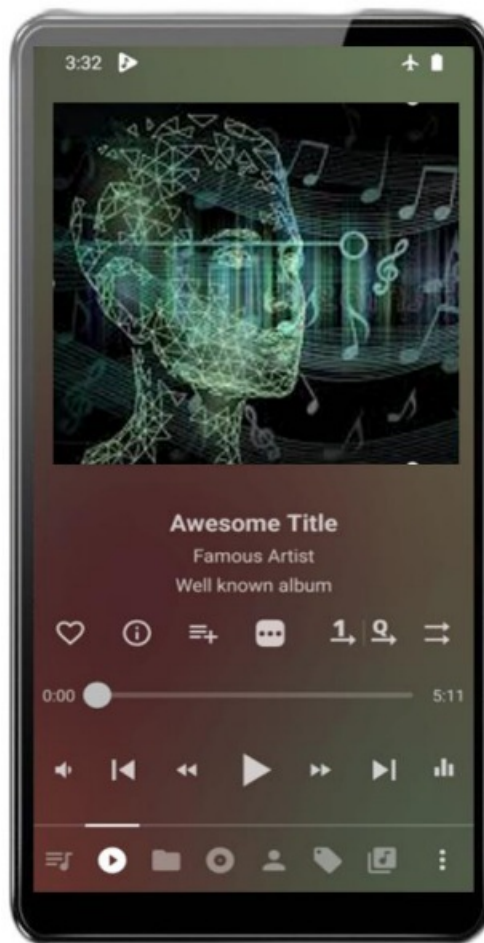

Use this Manual

Please read this manual carefully before using. All illustrations in this manual are for reference only, please refer to the actual product.


Warm Tips

1. To protect the new machine, a protective film is applied on it. If you want to get the best visual and operating experience, it is recommended to tear it off.
2. There are many Internet applications embedded in the player, and the experience will be better in a WIFI environment. Of course, choosing to use offline is no problem at all.
3. It is recommended to apply for a Google account before use, so that most Internet applications can use it to log in. Follow the link below to learn how to create a Google Account.
<https://edu.gcfglobal.org/en/googleaccount/creating-a-google-account/1/>
4. It is recommended not to execute too many large-scale applications at the same time, which will easily cause the machine to heat up. Periodically clean up background executors manually or through clean software.
5. If the player will not be used for a short period of time, it is recommended to manually shut down the system to prevent excessive power consumption.
6. The player provides Google Store, you can download applications at will, but many applications are charged, please use with caution.
7. If the player crashes, prick the reset hole with a needle to reset the system and force restart. If it still cannot be turned on, check whether the product is out of power.
8. Android operating system and Google input method support multiple languages, you can choose the language

you need through system settings.

9. It is recommended to turn down the volume of the unit before using, headphones, and gradually increase the volume after you start listening until, it is suitable. Don't turn up the volume too high to protect your hearing, (Doctors point out that listening at high volume for extended periods of time, will damage the listener's hearing). When tinnitus occurs, turn down the volume or stop using it.
10. It is recommended to back up the personal data stored in the player, before formatting.
11. Over-voltage, power cable strain, bending or squeezing by heavy, objects is not allowed to avoid overheating or fire disaster.
12. Please keep the product away from the electromagnetic environment,
13. excessive humidity, smoke and other harsh environments.
14. Do not immerse the product in water, and do not use any corrosive or abrasive cleaners to clean.
15. Do not expose the product to moisture or rain. It may cause equipment, failure or even hard to repair because of water and moisture penetration.
16. Do not use headphones while driving, riding, operating machinery, or, doing work that requires attention to outside sounds.
17. Please do not repair or disassemble the product by yourself, otherwise, we will not provide you with normal after-sales service.
18. There is an automatic shutdown function in setting. The following conditions must be met for achieving this function: No programs running automatically in the background; B. Can not be in the charging state.
Note: The automatic shutdown timer starts after the screen is completely turned off.
19. If the actual setting and using method of this product are inconsistent, with this manual due to firmware upgrade, please contact us.

Open the Package

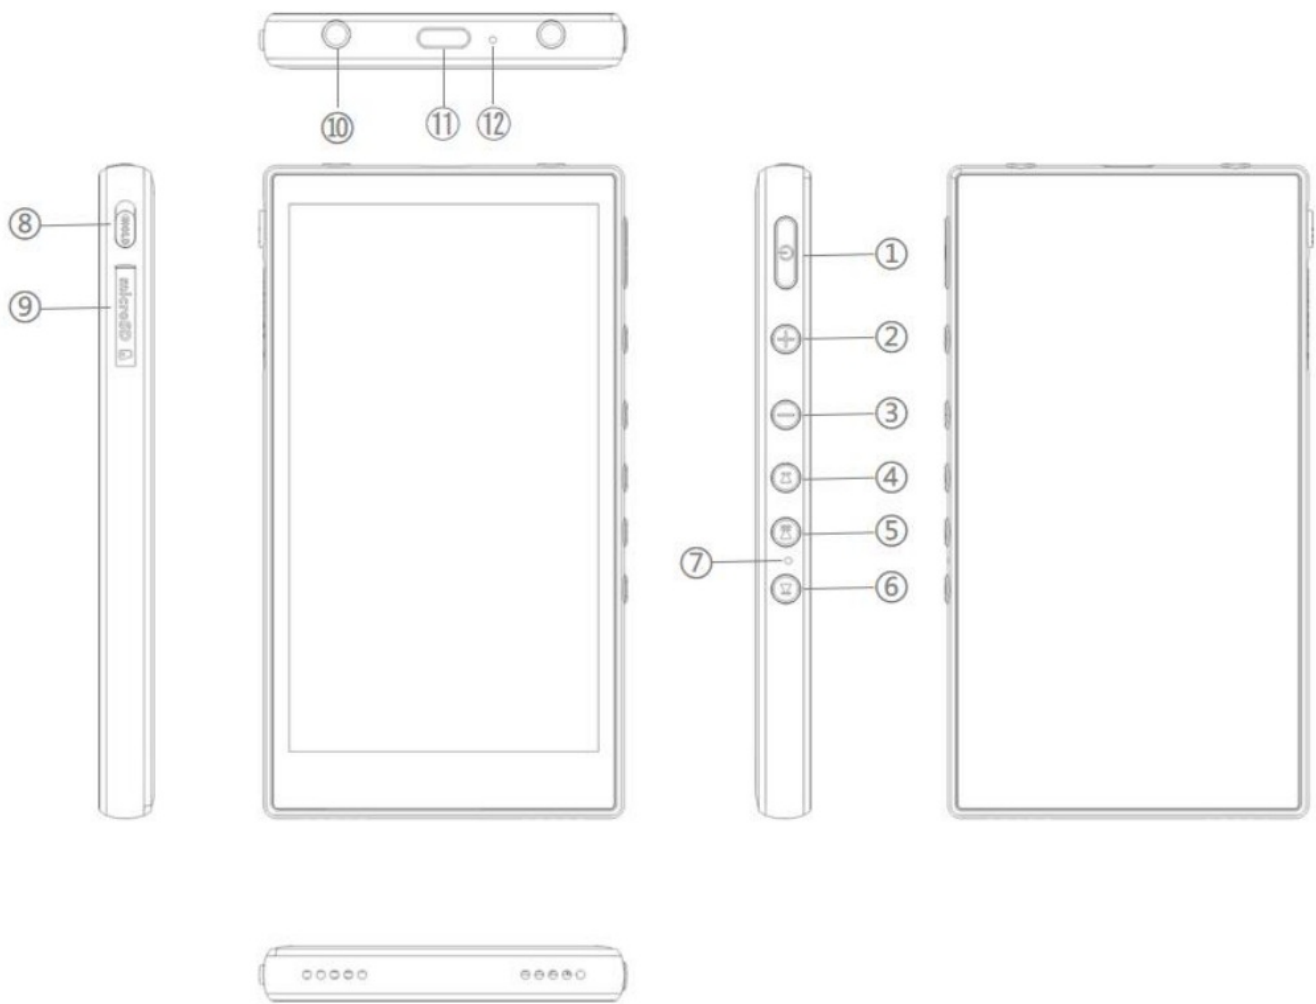


Appearance Buttons Introduction




1. Power on/off, Screen on/off
2. Volume+
3. Volume-
4. Previous
5. Play/Pause
6. Next
7. Reset Hole
8. Hold
9. microSD Card Slot
10. Headset Hole 1○1 .USB-C Slot 1○2 .MIC

Basic Operation

1. Power on/off: Hold the power button ① to turn on/off the player. Short press button ① to turn on/off the screen.
2. Main Interface Introduction:
 - a. Status Bar: When entering the specific function menu, the top column of the interface is the status bar, which displays these information: time, battery power, Bluetooth, WiFi.
 - b. Function Icons: In the main interface, the system comes with multiple icons. Directly click the icon to enter various functions or related settings for this equipment.
3. Volume Adjustment
 - a. Press button ② to increase volume.

- b. Press button ③ to decrease volume.
 - c. Touch: When the volume bar pops up, you can adjust the volume by dragging the slider.
4. **Reset:** If the player crashes, prick the reset hole with a needle to reset the system and force restart. If it still cannot be turned on, check whether the product is out of power.
 5. **Recovery:** If you forget the password or cannot enter the system, you can try to restore the factory state through the recovery mode. Press and hold the [Power key①] + [Volume Up key③] at the same time to enter recovery mode.
 6. **Return:** Swipe from right to left or tap the upper right button, "  "
 7. **Virtual Function Keys Operation:** At the bottom of the screen, display the navigation bar.
 8. When the Hold button ⑧ is turned on, other buttons will become invalid immediately. With this button, you are not afraid of the device being pressed by mistake while it is in your pocket.
 9. You can insert a microSD card into the microSD Card Slot ⑨ to expand the capacity of the device. It is recommended that you use a toothpick to open this slot relatively easily rather than by hand.



-  Display background hidden files interfaces.
-  Return to main interface.
-  return to previous menu.

Notes

1. After the device is operated for a long time, especially in a high temperature environment, it is a normal phenomenon that the surface might be hot. When you feel it is hot, please stop using or charging, turn off some functions as well as moving the device to a cool place. Avoid prolonged contact with hot surface.
2. If you do not use the device for a long time, please charge and discharge it at least once a month to prevent damage caused by excessive battery.

Configuration of New Device

Connect to Wi-Fi Network

 
1. Swipe down from the status bar to open the notifications bar or find "Wi-Fi" in settings.
2. Turn on "Wi-Fi" switch and the system will list all detected WiFi networks.
3. Tap the Wi-Fi network you want to connect to. If you choose an encrypted network, you will need to enter a password for access connection.

Connect to Bluetooth

1. Swipe down from the status bar to open the notifications panel or find "Bluetooth" in settings.
2. Turn on "Bluetooth" switch. Enter the Bluetooth settings interface and, click to search new device.
3. Tap the name of the Bluetooth address you want to connect to and, perform a pairing connection.

Transfer MP3 Music Files


1. Connect your MP3 player to your PC using a USB cable.
2. Open “YMP-A1” folder as below on your PC windows panel.
3. Drag and drop the music files from your PC to the MP3 player’s folder.
4. Once the transfer is complete, safely eject the MP3 player from your PC.

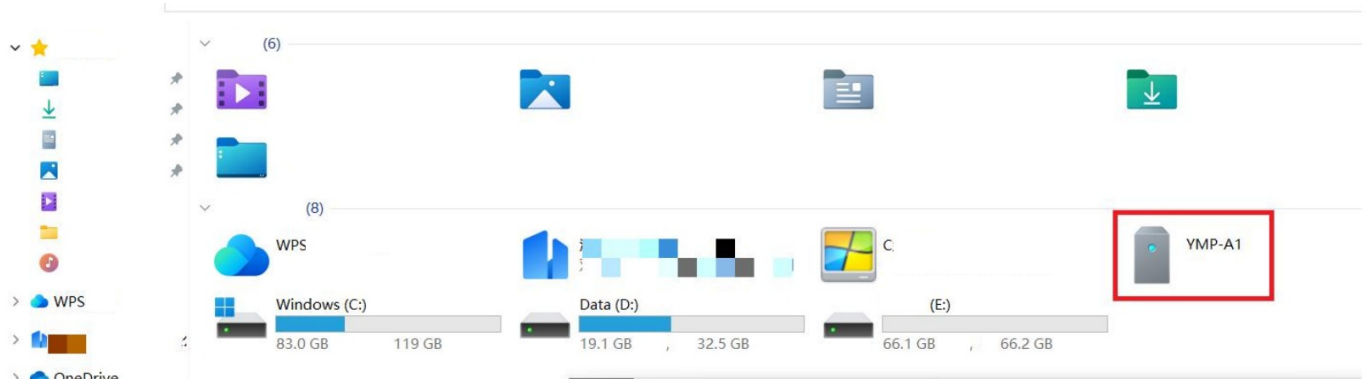


Exception handling

If you are still unable to transfer MP3 files from PC to MP3 player, here are some troubleshooting steps you can try:



1. Check the USB cable: Make sure the USB cable you are using is functioning properly and is not damaged. Try using a different USB cable to see if the issue persists.
2. Enable USB debugging: On your Android device, go to “Settings” > “Developer options” > “USB debugging” and enable it. This will allow your PC to recognize your Android device. Below are the detailed instructions:
 - Enter the settings APP, click “System”

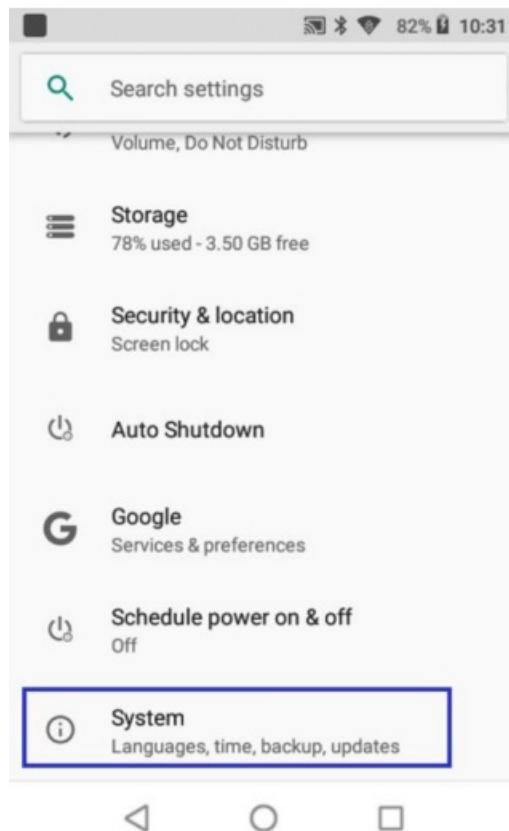

 
- Click “Model” 7 times in a row, back again, developer options mode is turned on on your device.

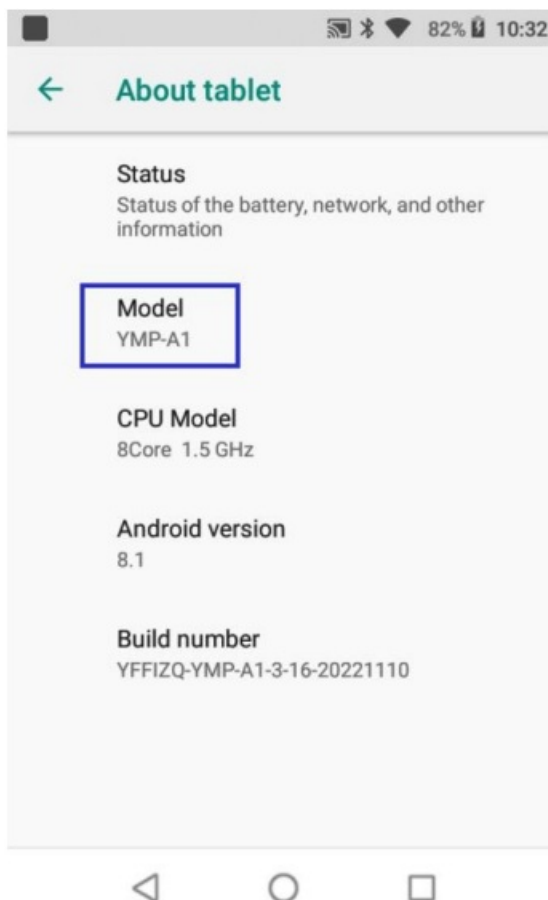

 - Enter the developer options, swipe down, you will see the USB debugging option, slide the slider on the right side of the USB debugging to the right, and the USB debugging function will be turned on.

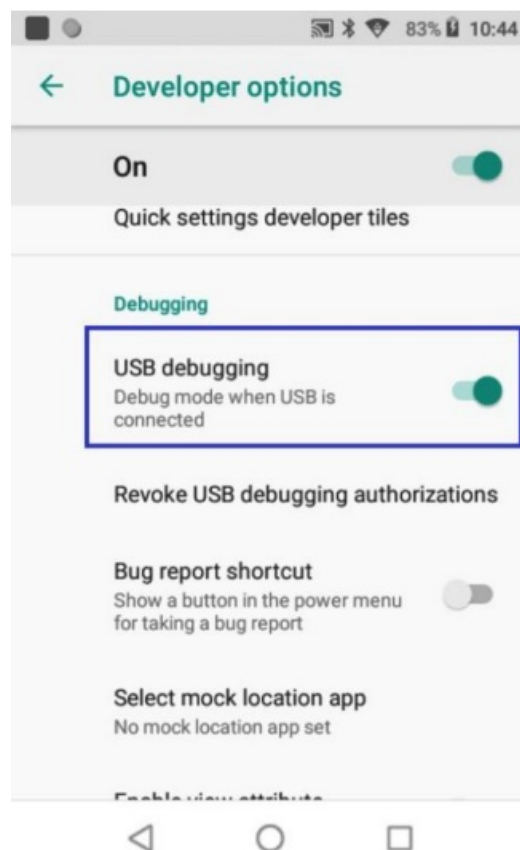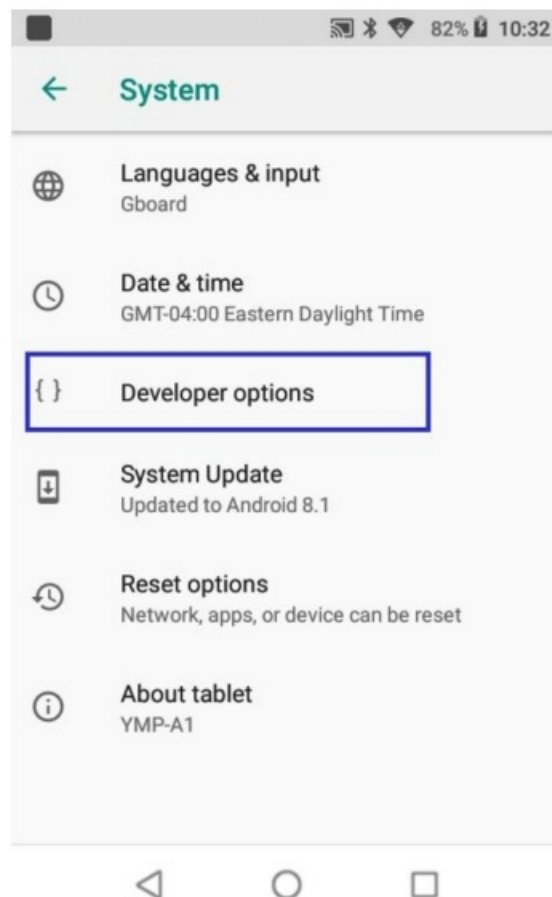

- After these steps are completed, you connect the MP3 to the computer with a data cable, and the following options will appear on your MP3, please select Transfer files, At this time, the YMP-A1 mobile hard disk will appear on your computer, and you can transfer the data on your computer to MP3.

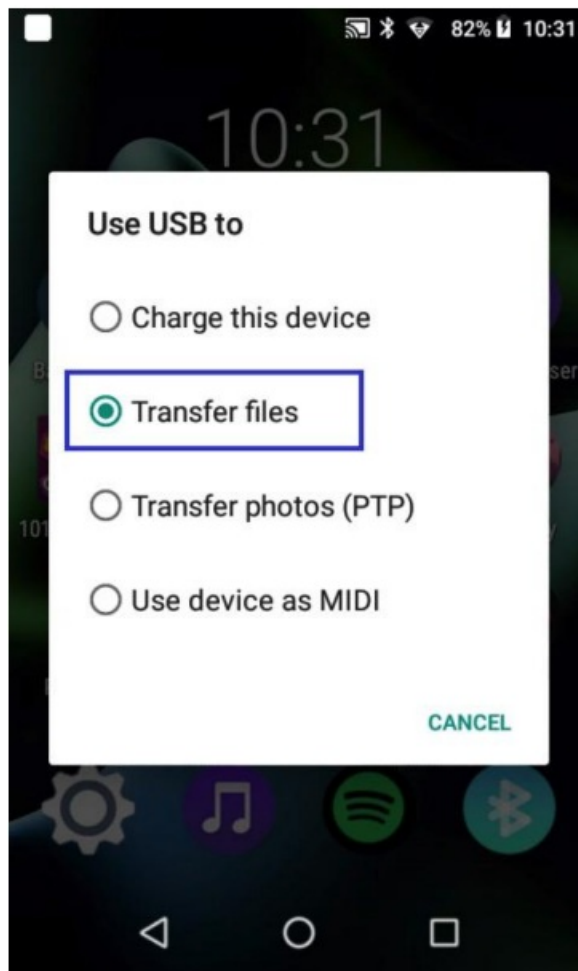

- Restart your devices: Sometimes, a simple restart can fix the issue. Try restarting both your Android device and your PC.
- Use a different transfer method: If none of the above steps work, you can try using a different transfer method, such as Bluetooth or cloud storage.
- By following these troubleshooting steps, you should be able to resolve any issues you are experiencing when transferring MP3 files from your Android device to your PC.

Screen and Display

- Basic Operation of Screen
- Tap: Touch the target once. Eg: tap to confirm selection or, open the APP. Long Press: Touch the target for more than 2 seconds. Eg: long press the blank area on home screen to enter the editing, state of home screen.
- Swipe: Swipe your finger on screen. Eg: swiping up and down, or left and right on the screen, allows you to scroll through, files, navigate to other home pages, or perform other actions.
- Drag: Long press the target and move it to another location, on the screen. Eg: on the home screen, drag a window widget, or icon to any location.

Lock & Unlock Screen

- Set screen lock pattern and password. You can set the screen lock, password for your device to protect your private information.
- If you forget your password, you need to reset your device and clean up, the data before use it again. Please


keep your screen lock password safe.

1. Open the settings.
2. Click“Security”>Screen Lock.
3. You can choose to swipe, set pattern, PIN code or password to unlock, screen.

Notification& Status

1. **Recognize the Status Bar** According to the status bar,you can know the notification information and, running status of the device in real time. When there are notifications, light up the device screen and swipe down from the status bar to view, various messages.
2. **Open Notification Bar** Notification bar icon When the notification bar is turned on, you can quickly set the screen, brightness, WiFi, Bluetooth, auto-rotate mode.








System Functions and Settings

Find the Setting icon  on the main screen and click it to enter the,setting function:





1. WLAN:After the Wi-Fi is turned on, the device will automatically search, for connectable wireless network.
2. Bluetooth:After turning on Bluetooth, click to search new device, the device will automatically search for connectable Bluetooth devices. Connect Bluetooth speakers and Bluetooth headphones only.
3. Memory: You can check the running memory of the device and the average memory usage of each application.
4. Applications notifications: You can view recently opened applications, and view notification permissions,etc.
5. Battery: You can set the smart power saving mode, sleep setting, etc.
6. Display:You can set brightness, night mode, wallpaper, sleep time, screen rotation, font size, font style, screensaver, etc.
7. Sound:You can adjust the volume of media, alarm and notification, separately.
8. Storage:You can view the used storage and the storage space occupied by Apps
9. Security:You can set the lock screen password to encrypt and protect the data.
10. Automatic shut-down:You can select for 5 minutes, 10 minutes,
11. ,minutes, 20 minutes, 30 minutes(Default) and never shut down.
12. Google account setting.
13. Timing on off: You can set the time according to your needs. Once, finish the setup, tap “Done”at the top right of the screen.
14. System:
 - Language input: Click”Add Language”, select the corresponding, language, press and drag to the first row, the system will automatically set, the language.
 - Date time: The date and time can be updated automatically by, connecting to the network, and also can be set manually. PS: The date and time can be automatically sync when you connect Wi-Fi. Otherwise, you need to set it manually: click”Automatic Date and Time”, and select “Off” to continue setting the date and time.
 - Factory reset:When you reset your device, all data will be cleared, Please make a backup before resetting.
 - About device: You can view information about the player.

Music (Build-in app)

Find the music icon in the main interface.

1. Enable to choose, the desired classification. There are artists, songs playlists.
2. In the music playback interface: click " " to, play or pause.
3. Click " " to play the next or previous, song.
4. Click " " to view the music being played and, enter the playlist.
5. Click " " to set the music loop.
6. Click " " to set the repeat mode.
7. Click " " to select shuffle playback, add to, playlist, delete, sound effects (can set equalizer), music library.
8. Click " " to quickly find music.

Sound Recorder (Build-in app)

1. Find the sound recorder icon on the interface and click it to enter the, recording function.
2. Click " " to start recording
3. Click " " to pause the recording.
4. Click " ", to end and save the recording.
5. Click to set sound quality: High, Medium, Low.
6. Click " " to view the recording file.

[Attention] The recording format is WAV and MP3.

microSD Card Instructions

Equipped with microSD Card expansion card slot, can put videos, pictures, e-books, etc. into the memory card. When using, insert the memory card correctly according to the instructions and push in until you hear a "CLICK" sound. When taking out, please push it into the slot and then release, the memory card will be automatically ejected and then take it out.

1. Please insert the card into the card slot of the device correctly.
2. Please do not remove the memory card when operating such as reading, copying, etc., otherwise the data may be in error.
3. Avoid using and storing memory card in high temperature and high humidity environments.
4. Keep memory card away from liquids and corrosive materials.

Notes on Battery Charging

1. Please use PC USB port or 5V/1A power adapter (Charger is NOT included) to charge. Note: Different PCs have different current output capabilities of the USB interface, and the charging time will also be slightly different. It is recommended that when using the PC USB interface to charge, try to charge in the off state to speed up

the charging speed. When charging, it is a normal phenomenon that the charger and the player have a certain, temperature rise.

2. New battery needs to charge and discharge for several times to achieve, optimum performance.
3. The player can be fully charged in about 3 hours normally. It is recommended to unplug it from the USB interface after charging and please do not connect to the power supply for a long time.
4. The polymer lithium battery coming with can be recharged repeatedly.
5. The polymer lithium battery must be replaced by professionals, do not replace it by yourself. Note: if the battery is improperly replaced, there is a danger of explosion and it can only be replaced with the same type or equivalent type of battery. In order to protect the environment, give the waste battery to a professional organization for recycling.
6. Battery life may vary with usage conditions and production time.
7. Do not expose the battery to overheated environment such as sunlight or fire.

Specifications

Size	114 × 63 × 9.8mm
Screen	4.3"screen,resolution:1280×720
Weight	about 120g
Music Format	MP3/APE/OGG/AAC/FLAC/AIFF/MAV(Some,formats require third-party APP support)
Video Format	MKV/MP4/MOV/AVI/M4V/WMV/ASF/FLV/MPEG/H.264
Recording Format	WAV/MP3
Picture Format	JPG/BMP/GIF/PNG

Ebook	PDF/TXT/EPUB/FB2		
RAM	3G		
Built-in Memory	16G		
microSD Card Expansion	256GB		
Bluetooth	4.2		
S/N	≥85dB		
Playtime	Music	Headset	31H
		Speaker	9H
		Bluetooth	14H
	Video	Headset	4H
		Speaker	3H
		Bluetooth	3.5H
	Voice Record	15H	
	FM Radio	21H	
Compatible System	Android 8.1 or above		
Charging Time	about 2 hours		
Battery	2000mAh		
Recommended Charger	5V/1A input		
Interface	Type-C USB2.0		
Using Temperature	0>45℃		

Supporting

If you meet any product or usage problem, Please feel free to contact us to get the technical support to enhance your using experience. Welcome to contact us from your Amazon order or directly email us to get the following supports if you need:

1. Electronic Instruction Manual
2. If product defective, Free replacement of a new one
3. Please contact us first to enjoy a 15% discount on the next purchase at our store.
4. Technical support
5. E- mail: lisyftx@sina.com
6. WhatsApp: +86-13760321959
7. Phone Support: +86-13760321959

Again, Thank you very much for your support and trust!

Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
- This device may not cause harmful interference
- this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF warning statement:

- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FAQs

The computer does not display the USB symbol when transferring files.

A: Since the device is Android system, the computer cannot display the USB symbol. However, you can open "Computer" or "My Computer" in your computer to view the disk name "YMP-A1" and continue the transmission.

The computer reminded that the format is not supported during the transmission of files.

A: Due to system reason, some formats may cause the computer to pop up, "format not supported" window when transferring files. In fact, they can be supported. When this window pops up, please select "Yes" and "Execute, the operation on all files". The transmission will continue without appearing this window.

The navigation bar will disappear after open some applications


A: When the navigation bar disappears, you can check whether the navigation bar is hidden. Steps: Settings Navigation bar Hide, navigation switch, and select Close. If there is no problem in the navigation bar setting you can pull down from status bar to open the notification bar and the navigation bar will be appeared. You can choose to exit and return.

Some video formats cannot be opened in the built-in video software?

A: The built-in video software of this device has limited decoding capability. It can download third-party video software for playback. In addition, files in rmvb format are copyright protected, so this device cannot support this

format. cannot support this format.

Documents / Resources

	<p>Huiran YMP-A1 MP4 Player [pdf] User Guide YMP-A1, YMP-A1 MP4 Player, MP4 Player, Player</p>
-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------

References

- [🌐 Google Account: Creating a Google Account](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.