



[Home](#) » [HUMMER](#) » **HUMMER R400 High Performance CPU Cooler User Manual** 

Contents [[hide](#)]

- 1 HUMMER R400 High Performance CPU Cooler
- 2 Intel & AMD
- 3 Intel & AMD
- 4 Intel-LGA 18XX/1700/1200/115X
- 5 Intel-LGA 18XX/1700/1200/115X
- 6 AMD-AM5/AM4
- 7 AMD-AM5/AM4
- 8 Intel & AMD
- 9 Intel & AMD SRGB
- 10 INTEL&AMD ARGB
- 11 Specifications
- 12 FAQs
- 13 Documents / Resources
 - 13.1 References




HUMMER R400 High Performance CPU Cooler



Package Content

A	CPU Cooler	x1
B	Backplate	x1
C	Intel Mounting Bracket	x2
D	AMD Mounting Bracket	x2
E	Thumb Screws	x4
F	Standoffs	x4
G	Thermal Paste	x1

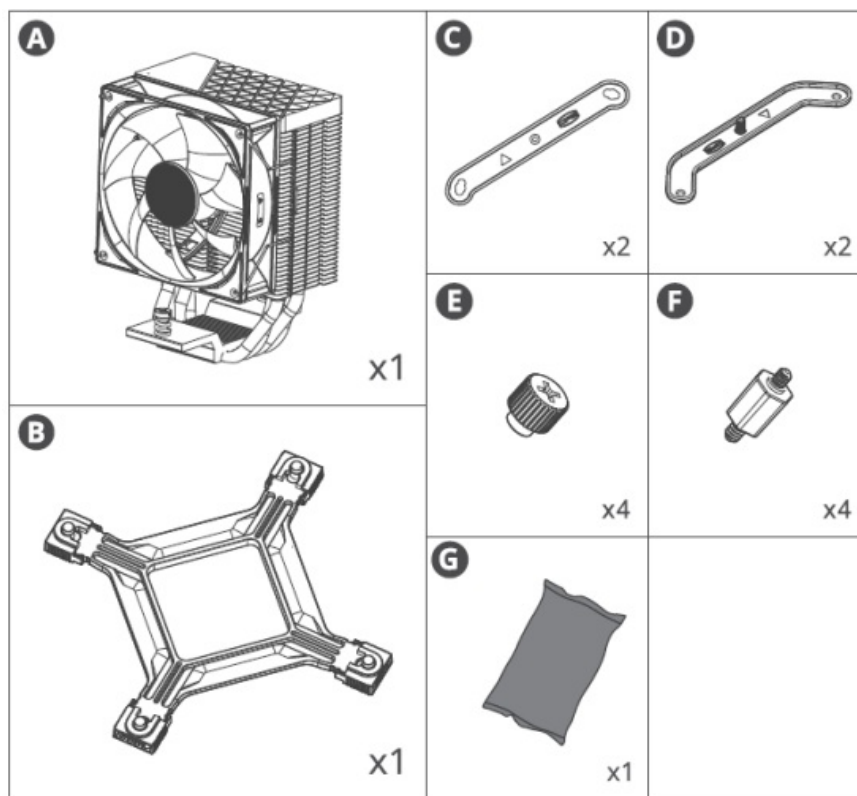


Intel & AMD

- AMD AM5/AM4: Use parts D, E, F
- Intel LGA 1800/1700/1200/115X: Use parts B, C, E, F


AMD AM5/AM4:D、E、F

INTEL LGA 1800/1700/1200/115X: B、C、E、F

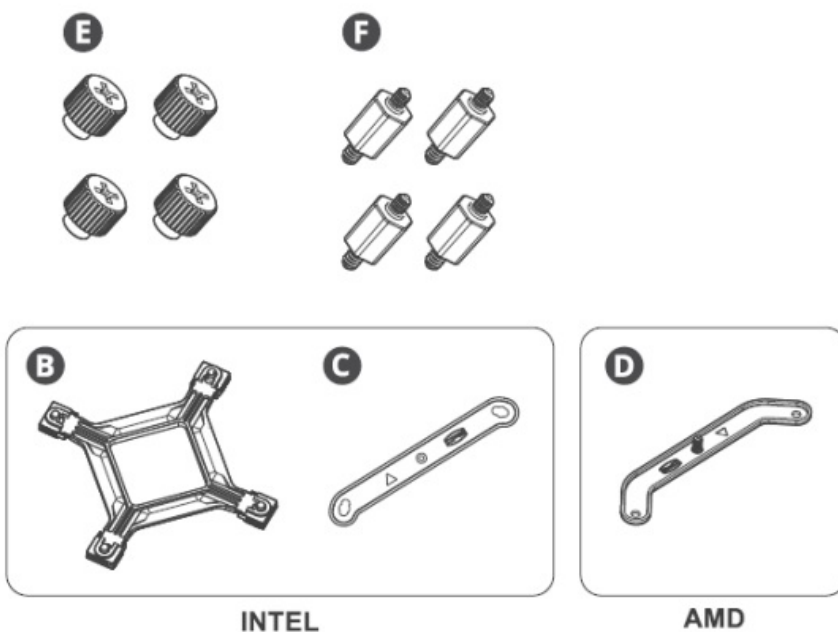


Intel & AMD

- Ensure the protective cover is removed from the base of the cooler before installation.

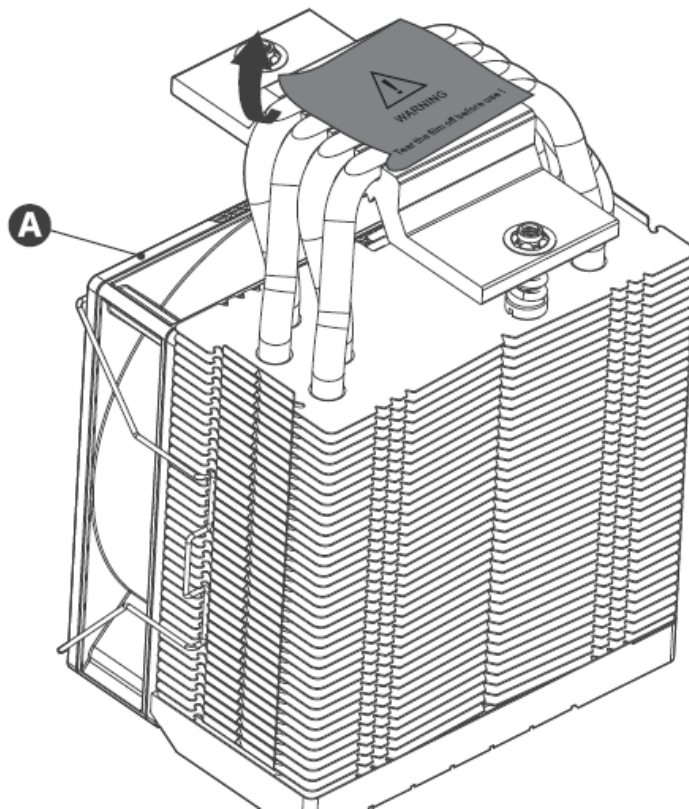


Intel-LGA 18XX/1700/1200/115X

1. Align the backplate (B) with the motherboard holes.
2. Secure the backplate using the standoffs (F).
3. Place the Intel mounting brackets (C) over the standoffs.
4. Secure with thumb screws (E).

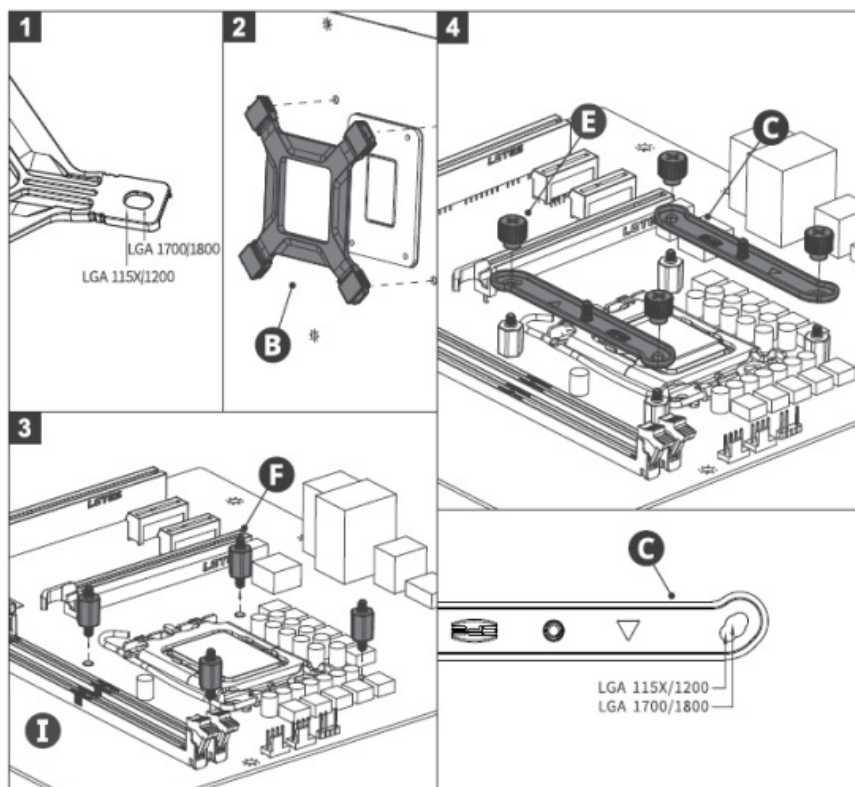


Intel-LGA 18XX/1700/1200/115X

1. Apply thermal paste (G) on the CPU.
2. Place the CPU cooler (A) onto the CPU.
3. Secure the cooler using the screws provided.

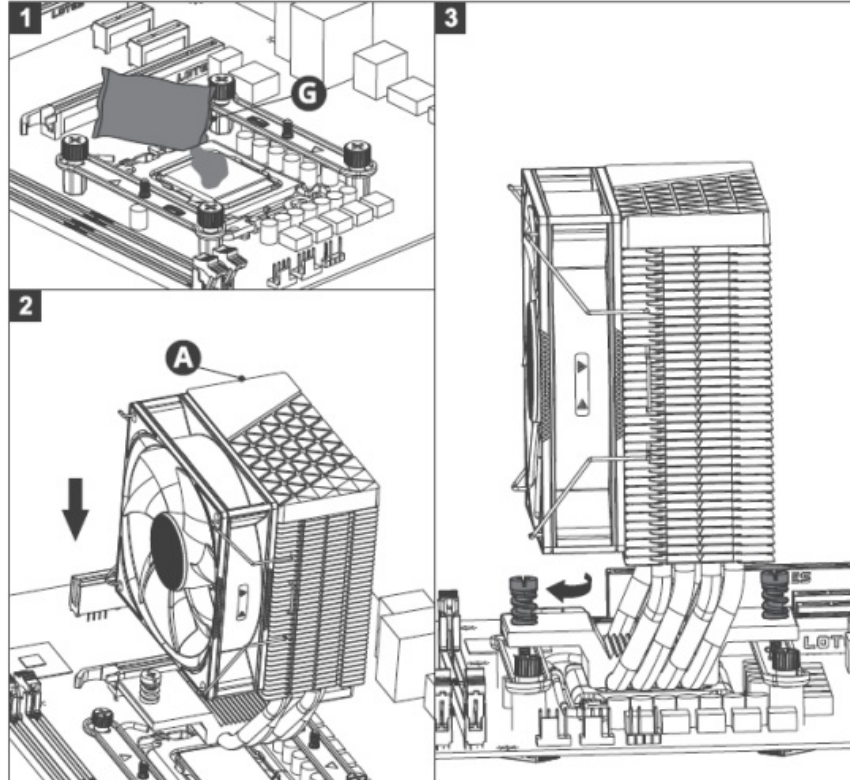


AMD-AM5/AM4

1. Place the AMD mounting brackets (D) on the motherboard.
2. Secure with standoffs (F).
3. Use thumb screws (E) to secure the brackets.

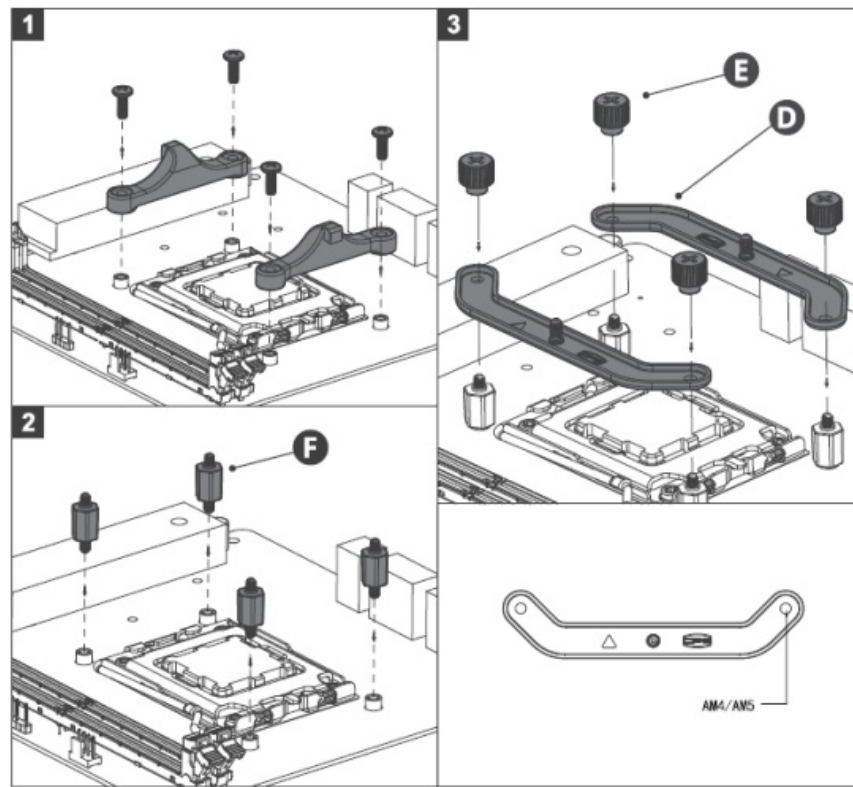


AMD-AM5/AM4

1. Apply thermal paste (G) on the CPU.
2. Place the CPU cooler (A) onto the CPU.
3. Secure the cooler using the screws provided.

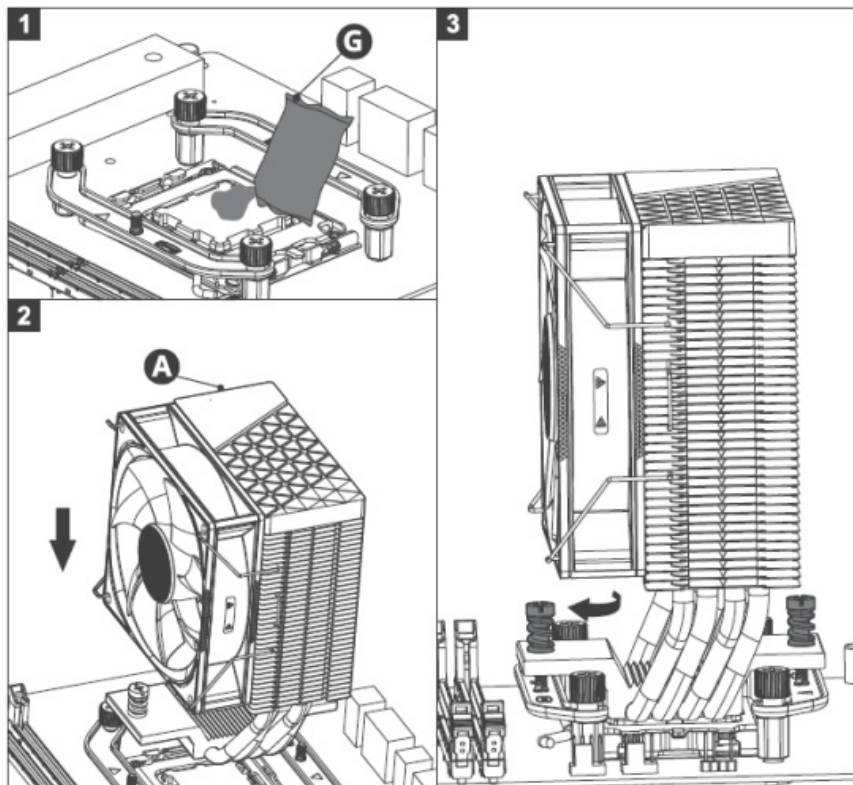


Intel & AMD

- Connect the CPU fan to the CPU fan header on the motherboard.

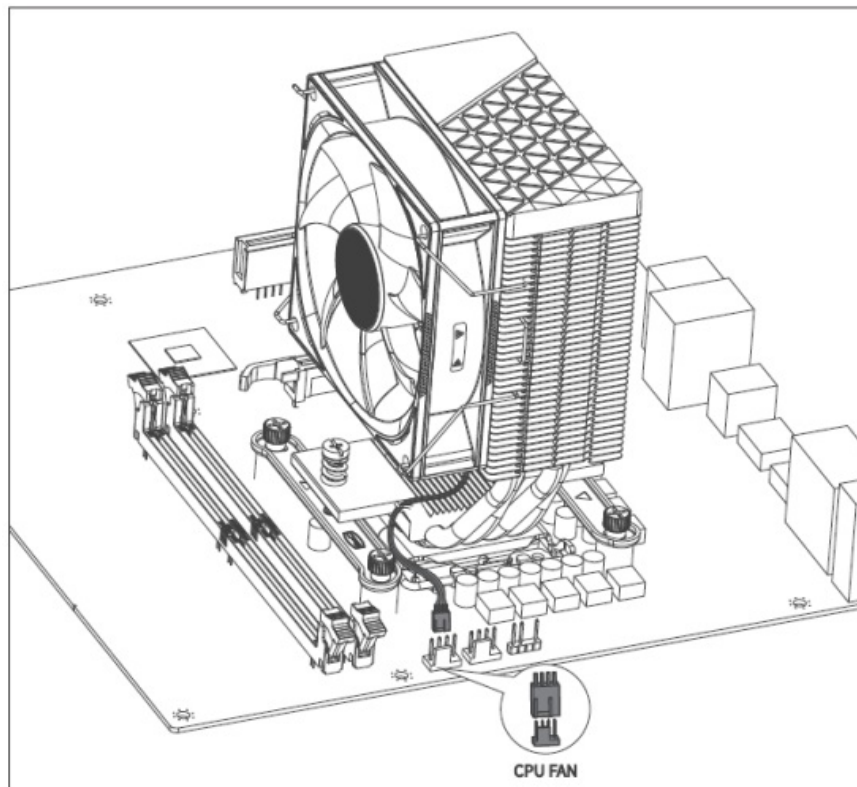


Intel & AMD SRGB

- Ensure the CPU fan is connected to the CPU fan header for proper RGB functionality.

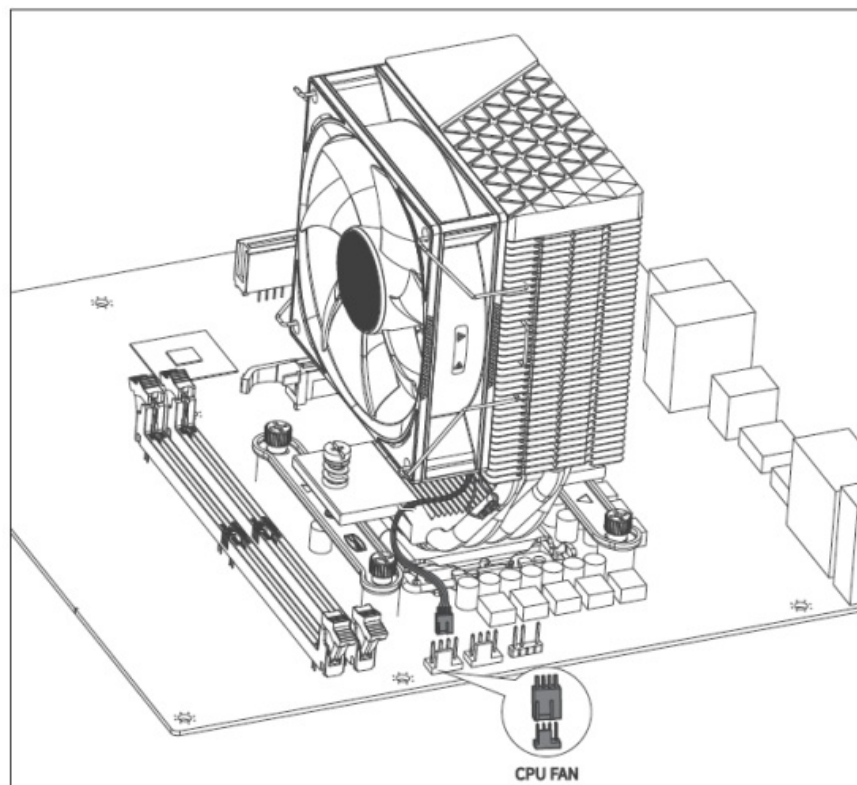

INTEL&AMD ARGB

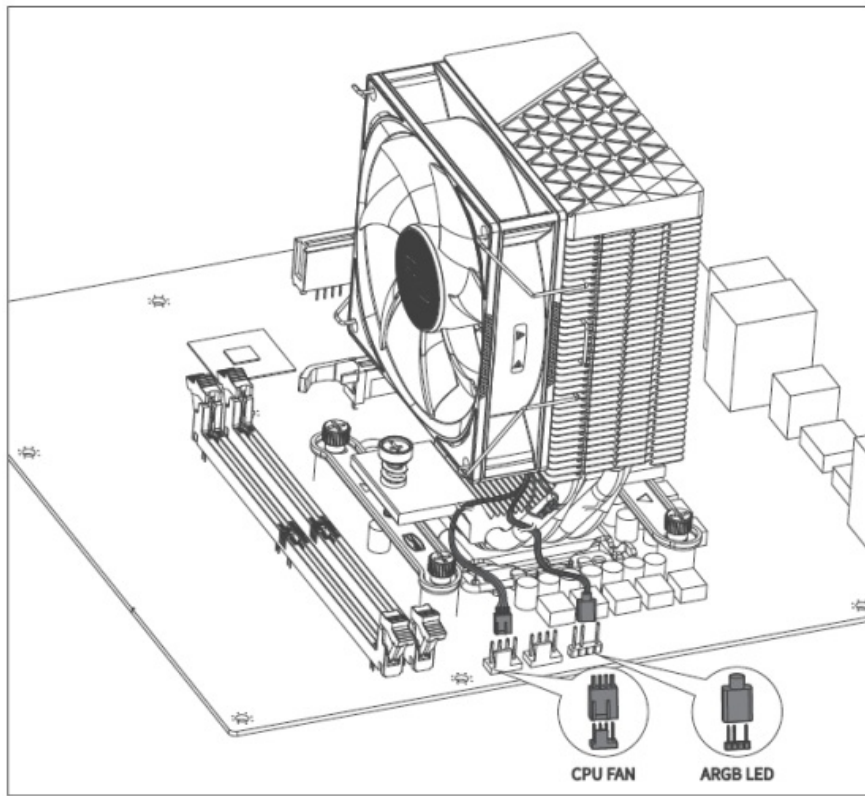

Specifications

Component	Quantity
CPU Cooler	1
Backplate	1
Intel Mounting Bracket	2
AMD Mounting Bracket	2
Thumb Screws	4
Standoffs	4
Thermal Paste	1

FAQS

How do I install the CPU cooler?

Follow the steps provided in sections 04 to 07 for Intel and AMD installations

What should I do if the cooler doesn't fit?

Ensure you are using the correct mounting brackets and standoffs for your CPU socket type

How often should I reapply thermal paste?

It's recommended to reapply thermal paste every 1-2 years or if you remove the cooler

Documents / Resources

	HUMMER R400 High Performance CPU Cooler [pdf] User Manual R400 High Performance CPU Cooler, R400, High Performance CPU Cooler, Performance CPU Cooler, CPU Cooler, Cooler
--	--

References

- [User Manual](#)

■ HUMMER

🔍 cooler, CPU Cooler, High Performance CPU Cooler, HUMMER, Performance CPU Cooler, R400, R400 High Performance CPU Cooler

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.