



Hunter FS-3000 Field Server Installation Guide

[Home](#) » [Hunter](#) » Hunter FS-3000 Field Server Installation Guide 

Hunter®

FS-3000 Field Server
Installation Guide



Field Server
INSTALLATION GUIDE
FS-3000 and FS-1000

Contents


- 1 FS-3000 Field Server
- 2 Accessing a Gateway Through the Web Interface
- 3 Documents / Resources
 - 3.1 References

FS-3000 Field Server

Hunter Field Server Installation Guide

The field server can be installed anywhere with the host network, including near a Hunter controller enclosure. Field servers can also be rack mounted in a central network location.

1. Install the field server with the standard DIN rail connector.
2. Connect to the server with the “Eth1” RJ-45 port. (The “Eth2” is for WAN use, if applicable.)
3. Connect the field server power with the supplied power connector. This can either be 9 – 30 VDC, or 24 VAC.

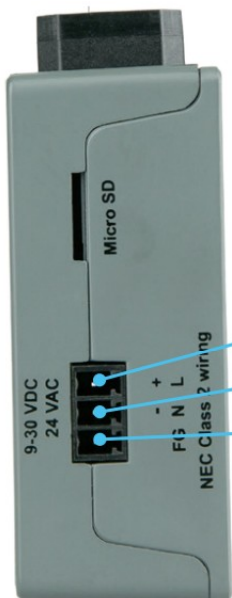

Power to Gateway	Gateway Pin Label	Pin Assignment
Power in (+)	L+	V+
Power In (-)	N-	V-
Frame Ground	FG	Frame GND


Install the Ethernet communication module for the controller (A2CLAN or A2CWIFI for ACC2, WIFIKIT or LANKIT for ICC2).

Connect the Hunter LAN/Wi-Fi module to the network. Once the Hunter controller and the field server are connected to the same network, you can log in and finish setting up the field server.

Accessing a Gateway Through the Web Interface

Make sure the computer's IP address is in the same subnet mask as the gateways. To do this, navigate to the computer's Settings > Network & Internet > Change adapter options.

1. Open the browser.
2. Type in the IP address of the field server/gateway. The default address is: 192.168.2.101.

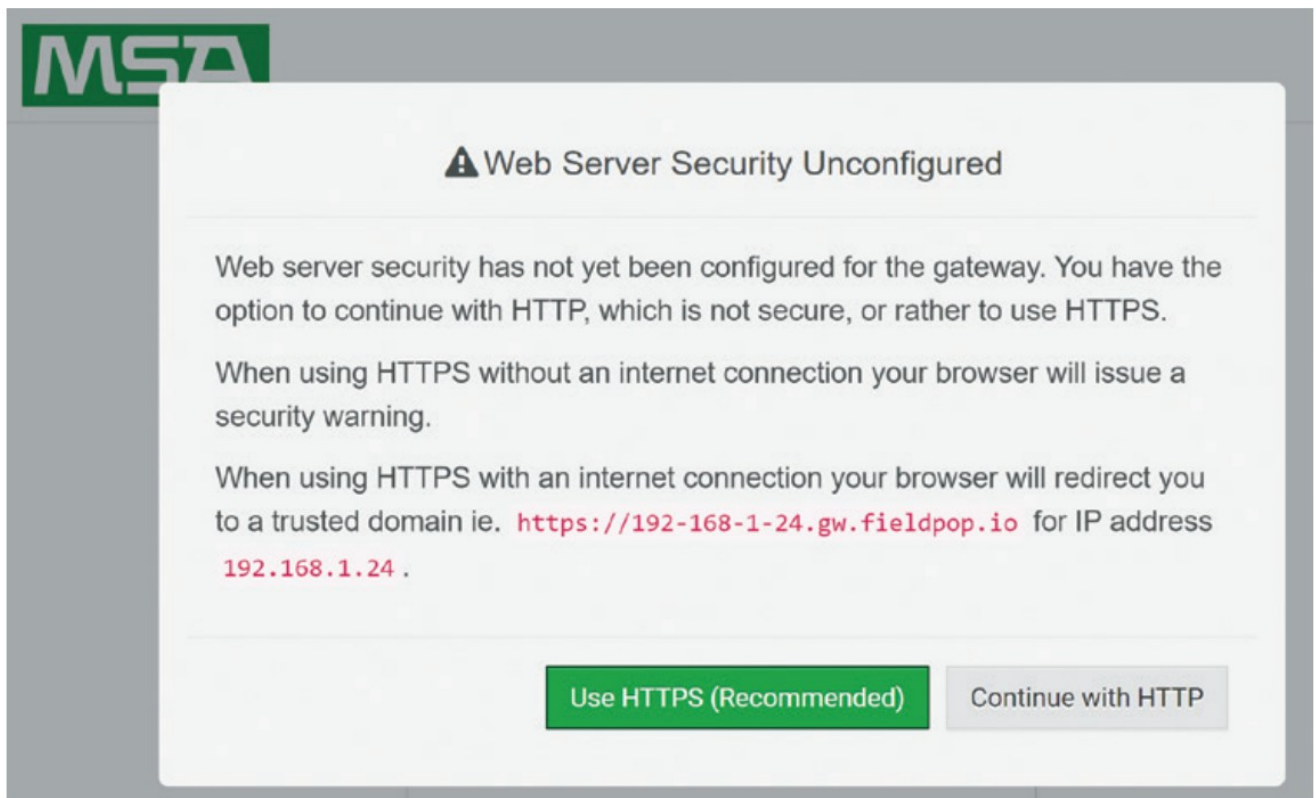

3. Continue with HTTP.

Note: This can be changed later.


4. Enter the default username: admin

A screenshot of a web browser showing the MSA login page. The browser's address bar shows "192.168.2.101/login/" and the page is marked as "Not secure". The MSA logo is at the top left. The main heading is "Log In". Below the heading are two input fields: "Username" and "Password". Below these fields is a green "Log In" button. At the bottom right of the login area is a blue link that says "Forgot Password?".

5. Enter the password. This can be found on the back of the gateway.

6. Choose HTTP and press Save.

Note: This can be changed later to increase security.

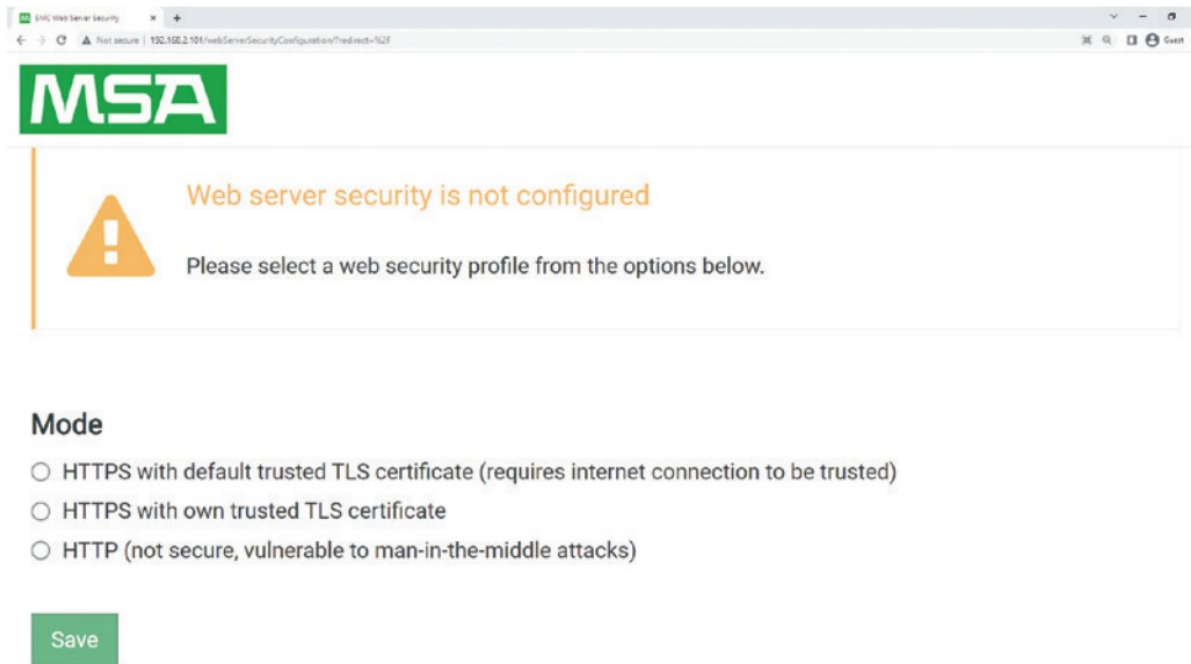

MSA

Web server security is not configured

Please select a web security profile from the options below.

Mode

- ☐ HTTPS with default trusted TLS certificate (requires internet connection to be trusted)
- ☐ HTTPS with own trusted TLS certificate
- ☐ HTTP (not secure, vulnerable to man-in-the-middle attacks)

Save

Notes About Passwords:

- Lower case Ls appear as a line “|”
- Upper case Ls appear as the roman numeral “I”
- The number one appears as “1”
- You can scan the QR code for the password

For complete support and documentation, visit the Hunter Industries website using the QR code below.



hunterindustries.com/support/fs-3000-support

Helping our customers succeed is what drives us. While our passion for innovation and engineering is built into everything we do, it is our commitment to exceptional support that we hope will keep you in the Hunter family of customers for years to come.

Hunter®




Denise Mullikin, President,
Landscape Irrigation and Outdoor Lighting
HUNTER INDUSTRIES | Built on Innovation®

1940 Diamond Street, San Marcos, CA 92078 USA

hunterindustries.com

© 2023 Hunter Industries Inc. Hunter, the
Hunter logo, and other marks are trademarks of Hunter Industries Inc.
registered in the U.S. and certain other countries. Please recycle.

Documents / Resources

	<p>Hunter FS-3000 Field Server [pdf] Installation Guide FS-3000, FS-1000, FS-3000 Field Server, FS-3000, Field Server, Server</p>
---	---

References

- [H Hunter Irrigation Sprinkler Systems | Hunter Industries](#)
- [H FS 3000 - Support | Hunter Industries](#)

Manuals+.