



HURRICANE Floating Mop Instruction Manual

[Home](#) » [Hurricane](#) » HURRICANE Floating Mop Instruction Manual 

Contents

- [1 HURRICANE Floating Mop](#)
- [2 Description and images](#)
- [3 INSTRUCTIONS FOR USE](#)
- [4 IMPORTANT SAFETY NOTICES](#)
- [5 Technical Data](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

 


HURRICANE Floating Mop



Description and images

- **a.** Blue polishing pad
- **b.** Dark green scrubbing pad
- **c.** Green microfiber pad
- **d.** Handle
- **e.** Upper stem
- **f.** Middle stem
- **g.** Lower stem
- **h.** Power supply
- **i.** On/Off button
- **j.** Mop base
- **k.** Charging port
- **l.** Two rotating mop heads
- **m.** Red charging indicator light
- **n.** Assembled upper, middle and lower stem sections

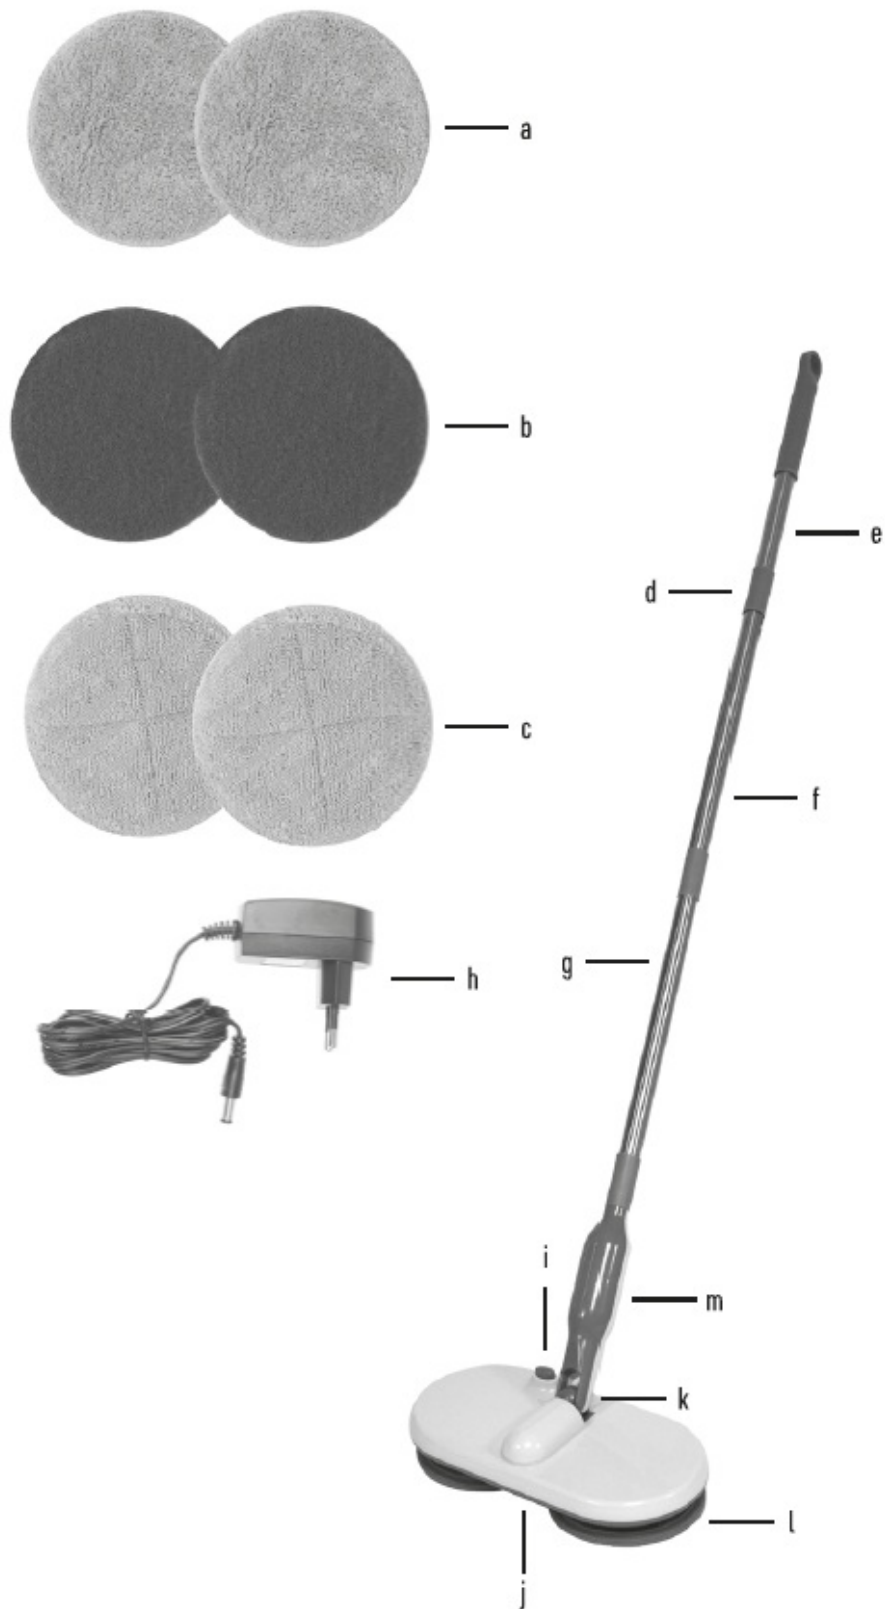

INSTRUCTIONS FOR USE

INFO: LET THE APPLIANCE DO THE WORK FOR YOU! FOR CORRECT AND FAULTLESS USE, THE HURRICANE FLOATING MOP MUST NEVER BE PRESSED TOO HARD AGAINST THE FLOOR. PRESSING TOO HARD CAN IMPAIR THE ROTATION AND THUS ALSO THE CLEANING PERFORMANCE.

Delivery contents

- 1 x Mop mop base device
- 1 x Upper stem
- 1 x Middle stem
- 1 x Lower stem
- 2 x Microfibre pads
- 2 x Polishing pads
- 2 x Scrubbing pads
- 1 x Power supply

IMPORTANT SAFETY NOTICES

READ AND FOLLOW ALL WARNINGS BEFORE USING THIS PRODUCT. IMPROPER USE CAN LEAD TO INJURY. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

- Only intended for domestic use.
- Never immerse the Hurricane Floating Mop in a bucket of water or hold it under running water. While the mop is designed to work with water or the household detergent of your choice, always be sure to apply water or detergent only to the cleaning pads.
- Do not use any charger or accessories other than those supplied with your Hurricane Floating Mop.
- Rapid charging and overcharging can cause damage to the rechargeable battery, personal injury, or even a fire.
- This device should only be used by children aged 8 years and over, as well as by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the device and understand the dangers associated with its use. Children must never be allowed to play with the device. Cleaning and user maintenance must not be carried out by children unless they are older than 8 years of age and supervised by a responsible adult. Keep children younger than 8 years away from the appliance.

Charging the mop

1. To charge the mop, plug the power supply unit into a socket and then plug the charging adapter into the charging port on the mop base. (Fig. 1)




2. The red light on the mop base now indicates that the mop is in charging mode.
3. Leave the mop to charge for approximately 180 minutes. The red charge indicator light will go out when the mop is fully charged.

Assembling the mop


1. Before assembling, please make sure that all parts of the appliance are present.

Note: The top and middle stems have the same black internal thread. The lower stem has a blue internal thread.


2. Tightly screw the upper stem into the lower stem in a clockwise direction. (Fig. 2).

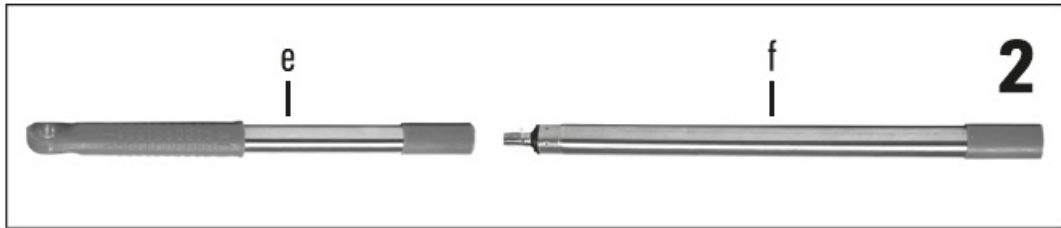

3. Now attach the lower stem to the middle stem by tightly screwing it in a clockwise direction. (Fig. 3)


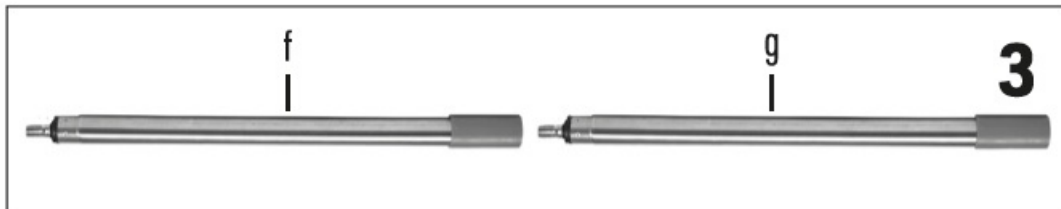


4. You can then attach the assembled handle to the mop base by holding the mop base and screwing the handle in clockwise.

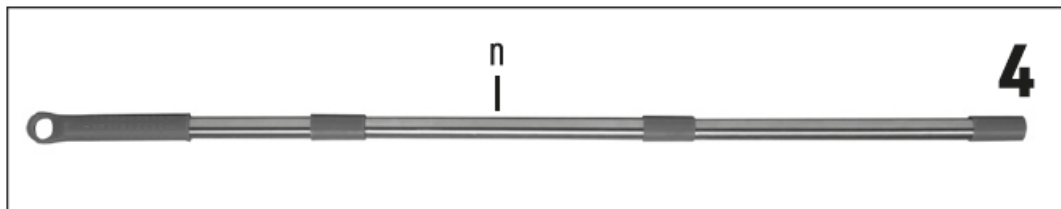

Starting up the mop

1. Turn the mop base over. Select the reusable cleaning pads you wish to use
 1. Green microfibre pad: ideal for normally soiled hard-surface floors
 2. Blue polishing pad: ideal for cleaning windows and mirrors
 3. Dark green scrubbing pad: ideal for stubborn dirtand attach them to the underside of the mop base using the Velcro tape. Press the pads lightly so that they stick firmly in place. (Figs. 5 + 6). You can now spray both pads with water or your detergent of choice. Tip: You will achieve the best results if you only slightly moisten the cleaning pads (slightly damp).

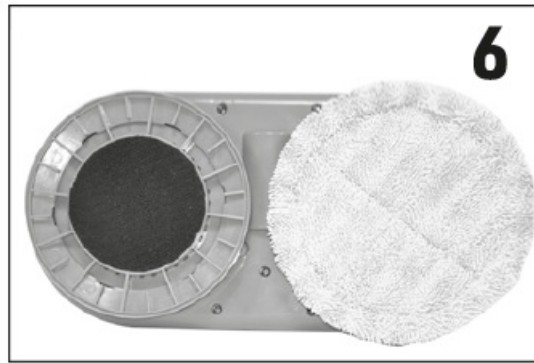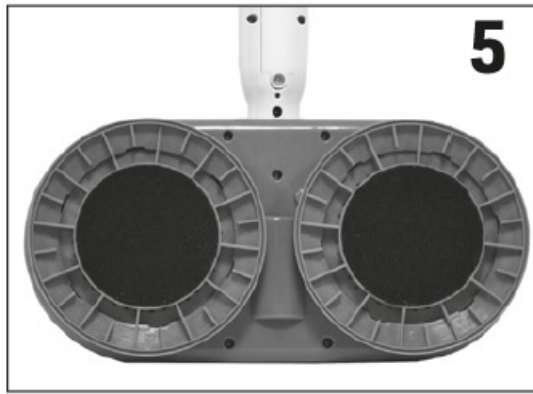

2. Switch on the device by pressing the On/Off button on the mop base. You are now ready to clean, scrub or polish your floor.
3. When you're done, press the ON/OFF button again to turn the mop off.

Cleaning instructions

To clean the reusable pads, you can simply wash them in the washing machine on a gentle cycle. Use warm water and a commercially available detergent for this.

To ensure its longevity, store the Hurricane Floating Mop in a cool, dry place.

Technical Data

- **Input:** 9,5V 0,6A 5,7W
- **Battery:** Li-Ion 7,4V 2000mAh

Material composition

- Microfiber pad and polishing pad: 80% polyester, 20% nylon
- Scrubbing pad: 100% polyester

Liability claims against the company Mediashop, which relate to damage (except in the case of injury to life, body or health of a person, so-called personal injuries), material or immaterial in nature, caused by the use or non-use of the information provided or through the use of incorrect and incomplete information provided by third parties is fundamentally excluded, unless it can be proven that Mediashop acted with wilful intent or gross negligence.


This product complies with the European directives

This symbol means that such electrical equipment or batteries must not be disposed of with normal household waste. You are legally obliged to hand in such items – free of charge – to a public collection point or distributor-created collection point for the recycling of electrical devices and expired bulbs and batteries within the scope of the Electrical and Electronic Equipment Act that are not encapsulated by or fixed into the appliance, and can be removed or separated from the appliance non-destructively, for disposal at the end of their service life. Use rechargeable batteries instead of single-use batteries wherever possible. The recovery and recycling of old appliances makes an important contribution to protecting our environment. Improper disposal can result in toxic substances being released into the environment, which can have harmful effects upon people, animals and plants. Batteries with an increased pollutant content are also marked with the following symbols

CH: Mediashop Schweiz AG | Leuholz 14 | 8855 Wangen | Schweiz EU: MediaShop GmbH | Schneiderstraße 1, Top 1 | 2620 Neunkirchen | Austria

office@mediashop-group.com | www.mediashop.tv

Documents / Resources

	<p>HURRICANE Floating Mop [pdf] Instruction Manual Floating Mop, Mop</p>
---	--

References

-  [Group Publishing](#)
-  [MediaShop - Das Original aus dem TV ✓ online bestellen](#)