

HYCHIKA®
BETTER TOOLS FOR BETTER LIFE
ML-RS18-180
Classic
Reciprocating
Saw



HYCHIKA ML-RS18-180 Classic Reciprocating Saw Instruction Manual

[Home](#) » [HYCHIKA](#) » HYCHIKA ML-RS18-180 Classic Reciprocating Saw Instruction Manual 

Contents

- [1 HYCHIKA ML-RS18-180 Classic Reciprocating Saw](#)
- [2 Technical Data](#)
- [3 Intended use](#)
- [4 Batteries And Chargers](#)
- [5 Features](#)
- [6 Charging the battery pack](#)
- [7 Changing the blade](#)
- [8 Operation](#)
- [9 Troubleshooting](#)
- [10 EC DECLARATION OF CONFORMITY](#)
- [11 CONTACT](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)

HYCHIKA®
BETTER TOOLS FOR BETTER LIFE

HYCHIKA ML-RS18-180 Classic Reciprocating Saw



Info

Thank you for choosing a HYCHIKA series product. If you have any questions, please scan the QR code to access the user manual, product videos, and online customer support.



Technical Data

Rated Voltage	18V
No-load speed	0-2800SPM
Stroke length	22mm
Battery Pack	2.0Ah
Charger	2A

Intended use



- The device – device-reciprocating saw has been designed for sawing wood, plastics and sheet metal. This tool is intended for consumer use only.
- Plunge cuts

Batteries And Chargers


Batteries

- Never attempt to open for any reason.
- Do not expose the battery to water.
- Do not store in locations where the temperature may exceed 40 °C. Charge only at ambient temperatures between 10 °C and 40 °C.
- Charge only using the charger provided with the tool
- When disposing of batteries, follow the instructions given in the section “Protecting the environment”
- Do not attempt to charge damaged batteries.

Chargers

- Use your HYCH I KA charger only to charge the battery in the tool with which it was supplied. Other batteries could burst, causing personal injury and damage.
- Never attempt to charge non-rechargeable batteries.
- Have defective cords replaced immediately.
- Do not expose the charger to water.
- Do not open the charger.
- Do not probe the charger.
-  The charger is intended for indoor use only.
-  Read the instruction manual before use.


Electrical safety

-  Your charger is double insulated; therefore no earth wire is required. Always check that the mains voltage corresponds to the voltage on the rating plate. Never attempt to replace the charger unit with a regular mains plug.
- If the supply cord is damaged, it must be replaced by the manufacturer or an authorized Service Centre in order to avoid a hazard.

Features


This tool includes some or all of the following features.

 Figure A:

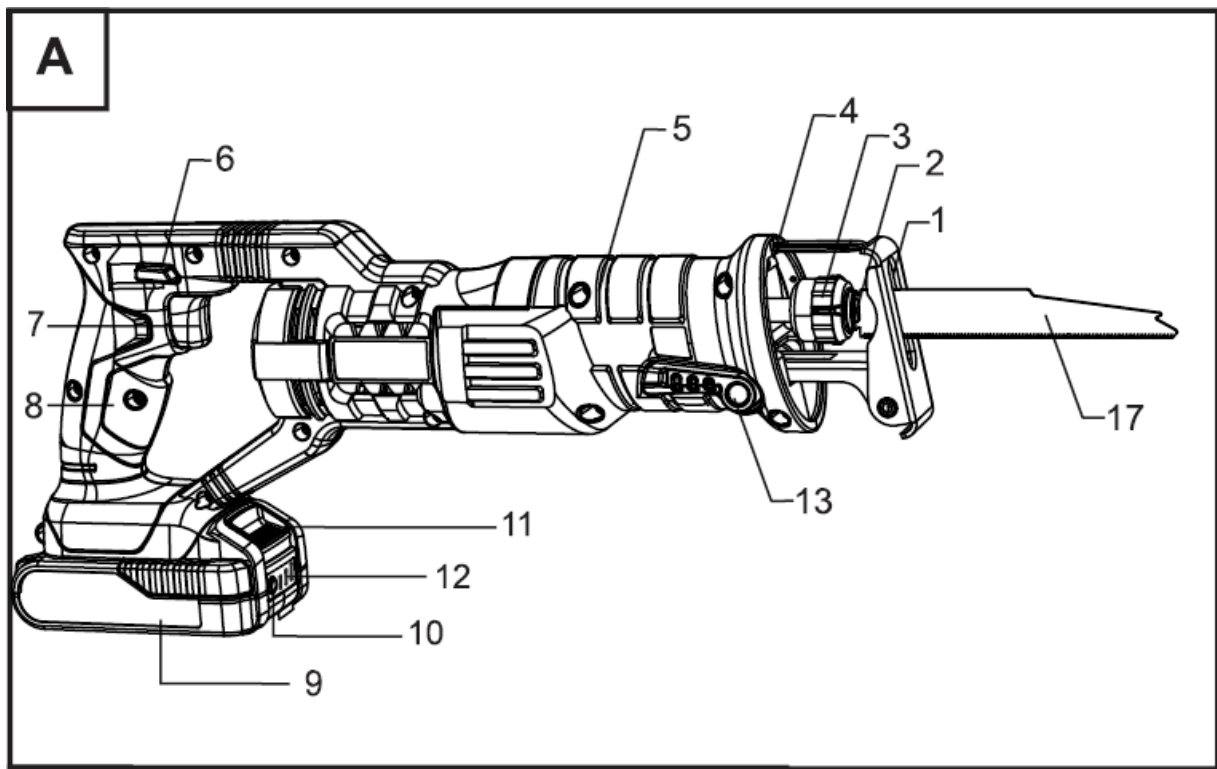

- 1. Base plate
- 2. Saw blade retainer
- 3. Chuck ring
- 4. LED work light
- 5. Front handle
- 6. Switch lock
- 7. On / Off switch
- 8. Rear handle
- 9. Battery pack
- 10. Battery level button
- 11. Release button
- 12. Battery level indication light
- 13. Base plate adjustment
- 17. Saw blade

 ◦ **Figure B:**

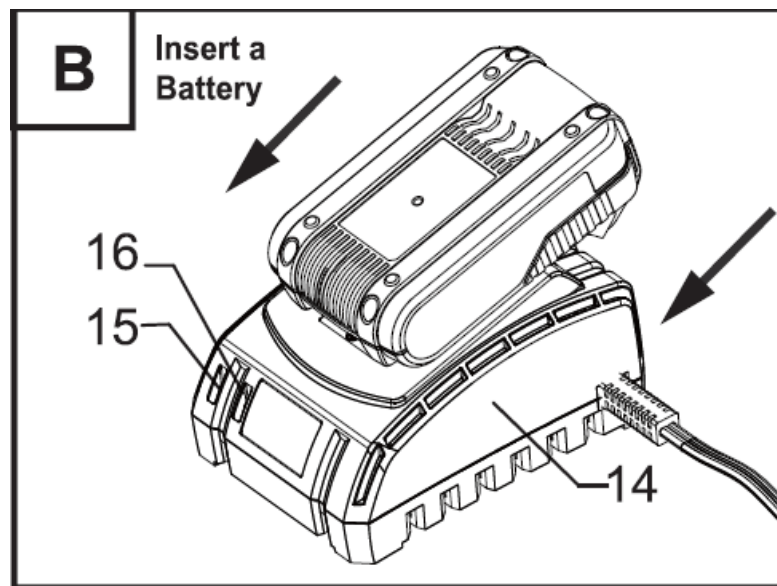

- 14. Faster charger
- 15. Charge status LED – red
- 16. Charge status LED – green button

 
 
Charging the battery pack

CAUTION

Always pull out the plug of charger before removing or connecting the battery pack 9 to the charger.

- Never charge the battery pack 9 when the ambient temperature is below 50 °F (10 °C) or above 104 °F (40 °C).
- Connect the battery pack 9 to the fast charger 14 (see Fig. B).
- The green LED flashes briefly and then expires when the battery is empty. The red LED glows permanently while loading.
- During charging operations, only red charge status LED 15 glows up.
- The green charge status LED 16 lights up while red charge status LED 15 turns off that the charging process is completed
- Red LED flashes: Battery pack is defective
- Green LED flashes: Battery pack is too cold or too hot.

Attaching/disconnecting the battery pack

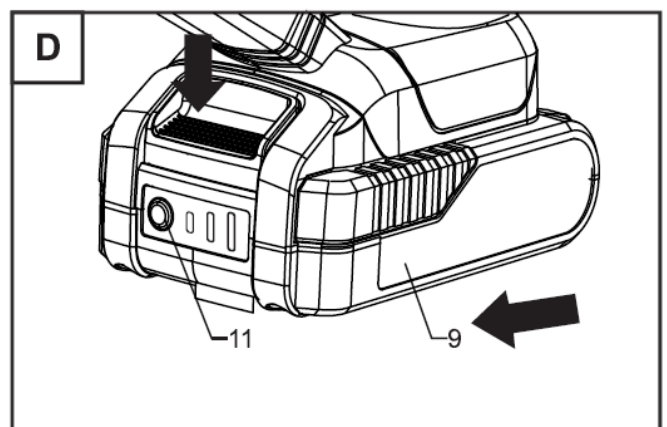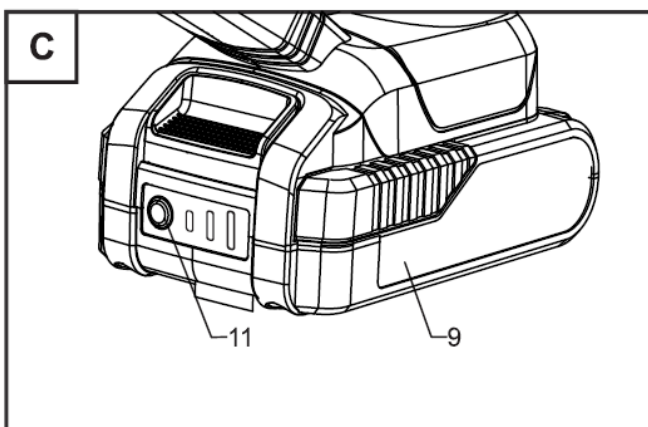

Inserting the battery pack:

 
1. Push and allow battery pack into the tool's connection slots completely and be clicked to it. (see Fig. C).

Removing the battery pack:

1. Press the release button 11 downward and pull the battery pack 9 from the tool (see Fig. D).

Checking the battery level

Press the battery level button 10 to check the charge level of the battery pack (see Fig. E). The status / remaining charge will be shown on the battery level indication lights 12.

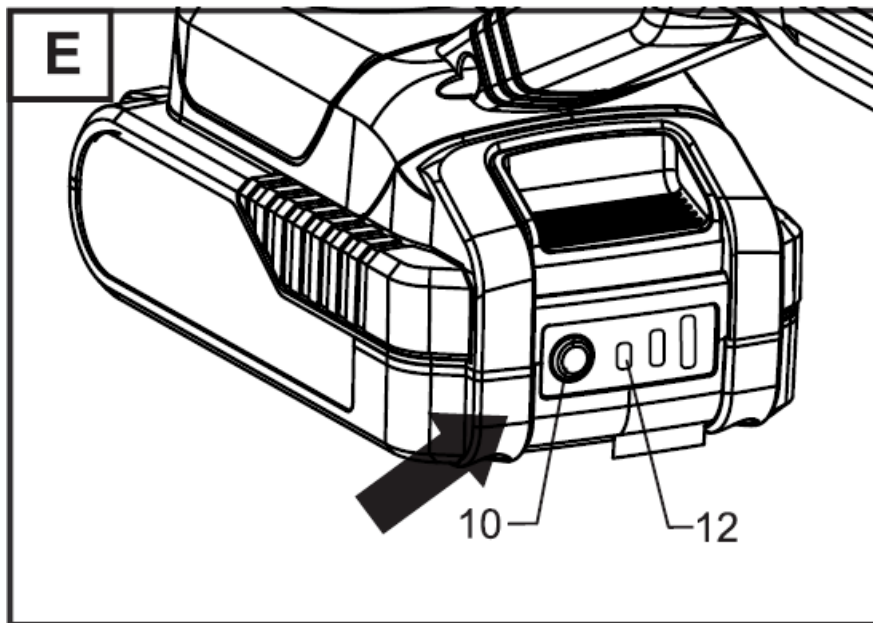

- 3 blue lights glow= maximum charge level
- 2 blue lights glow= medium charge level
- 1 blue light glow= low charge level

Changing the blade

- Always wear protective gloves when handling the saw blade in order to avoid cutting yourself.

CAUTION

- Battery pack 9 must be removed from the tool prior to changing the blade 17.
- Do not use any blunt, bent or damaged blade
- Always install a suitable saw blade for the job.

1. Turn chuck ring 3 in anti-clockwise direction
2. Insert saw blade 17 into saw blade retainer 2 as per direction a. Release chuck ring 3 and let it turns back to original position

3. Pull the blade 17 in direction b to check it is installed properly

 
 
Removing the saw blade:

1. Turn chuck ring 3 in anti-clockwise direction
2. Pull the blade 17 from saw blade retainer 2 as per direction b.
3. Release chuck ring 3, it will turn back to original position

Operation

- When working with the device, always wear suitable clothing and appropriate protective equipment.
- Prior to each use it must be ensured that the device is working correctly. Personal protective equipment and a fully functional device reduce the risk of injuries and accidents.
- After the device has been switched off, the blade continues moving for some time. Do not touch the moving blade and do not attempt to break it. Danger of injury!

Switching on and off

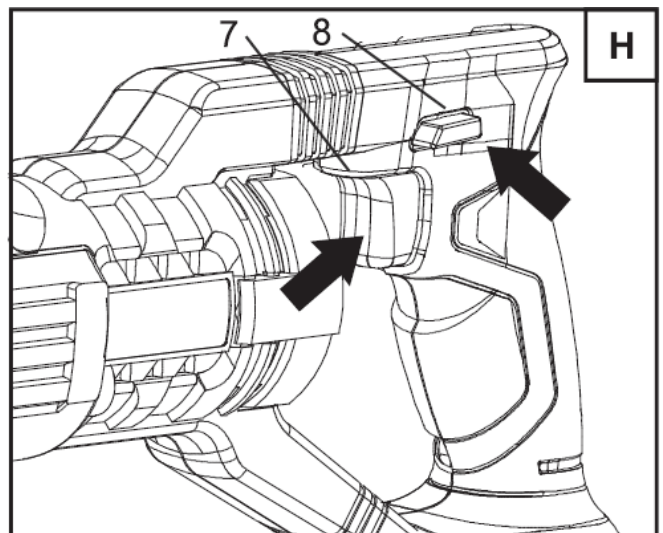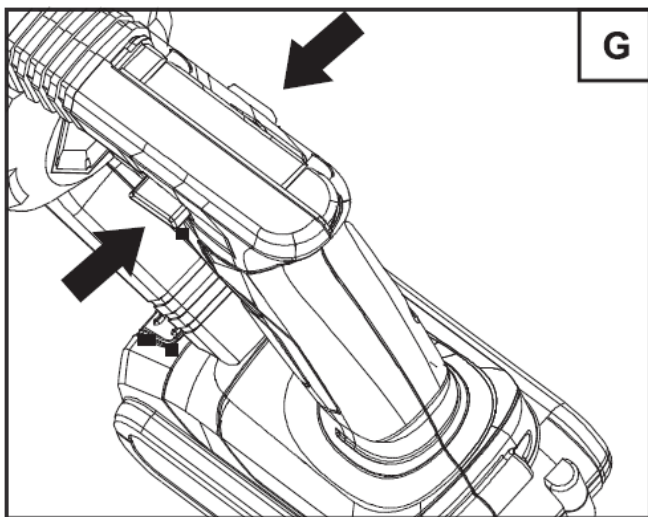

- Ensure your stance is stable and hold the tool's front handle 5 and rear handle 8 firmly with both hands.
- Before switching on the device, ensure it is not in contact with the work piece.

Switching on:

 
1. Ensure that battery pack 9 is inserted properly (see "Attaching / Disconnecting the battery pack to / from the product").
2. Press the switch lock 6 and on /off switch 7 (see Fig. H).
3. Then release switch lock 6 (see Fig. G). The switch lock 6 moves back into its original position.
4. By using On /off switch 7, you can progressively control stroke rate. Gentle pressure: low stroke rate Greater pressure: higher stroke rate On / Off switch 7 cannot be locked

Switching off:

1. Just release On / Off switch 7

Adjusting the base plate

In order to meet the needs of the piece the, the bottom plate can be adjusted and rotated in multiple positions

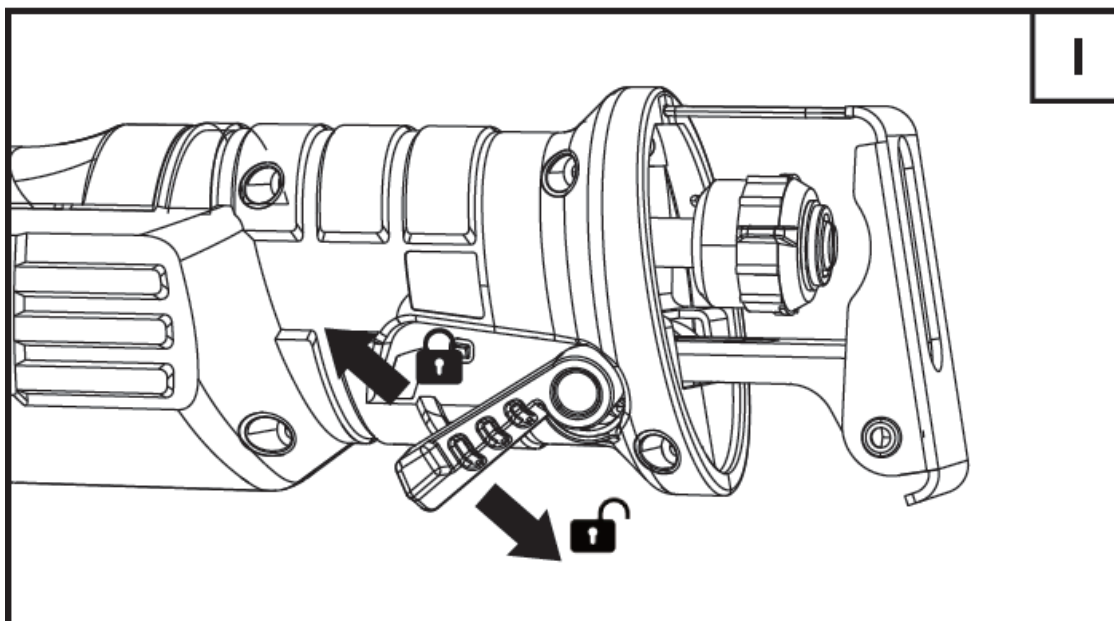

1. Adjusting button 13(see Fig 1)unlocked state. The base plate 1 can now be adjusted to the desired position.
2. After base plate 1 is placed in desired position push up base plate adjustment button 13 back to original position (see Fig. J).

Practical tips

- Wear gloves when handling the saw blade. In this way, you avoid injury from cuts.

CAUTION

Risk of injury and damage to property!

- Do not use any blunt or bent blades or blades which are damaged in any other way.
- Before sawing the work piece, check for hidden foreign objects such as nails, screws. These must be removed.
- Always insert a suitable saw blade.
- Secure the work piece with the aid of clamping devices on the workbench.
- Apply only as much pressure as is required for sawing. If there is excessive pressure, the sawing blade may bend and break.
- Switch the device off immediately if the sawing blade jams. Spread the saw cut out and pull the blade out carefully.
- Always stand to the side of the saw when working.
- Always make sure that the workplace is well ventilated.
- Avoid over-stressing the device while working.

Regular cuts

- Verify the tool is not touching the work piece. Then switch on.
- Apply the shoe 1 to the work piece. Use even pressure, advancing at a steady pace when making your cut. You can make horizontal, diagonal, or vertical cuts.

 


- When you are finished, first pull the saw blade out of the work piece before switching off the power tool.


Plunge cuts

- Plunge cuts are very challenging and are associated with a higher risk of injuries. Only use this technique if you are familiar with it.
- Plunge cuts may only be carried out in soft materials such as wood or plasterboard and with short blades (max. length 6 in / 150 mm). There is a risk of kickback and personal injury.

1. Place the front edge of the base plate 1 on the work piece so that the saw blade 17 does not touch the work piece.

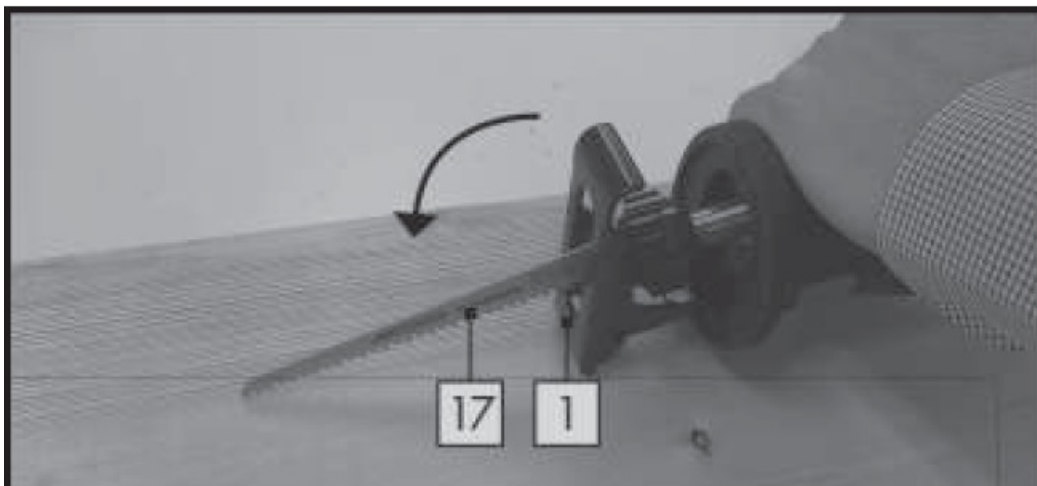

 2. Turn the device on and let the saw blade 17 slowly plunge into the work piece.
3. When the work piece depth has been cut through, continue sawing as usual.

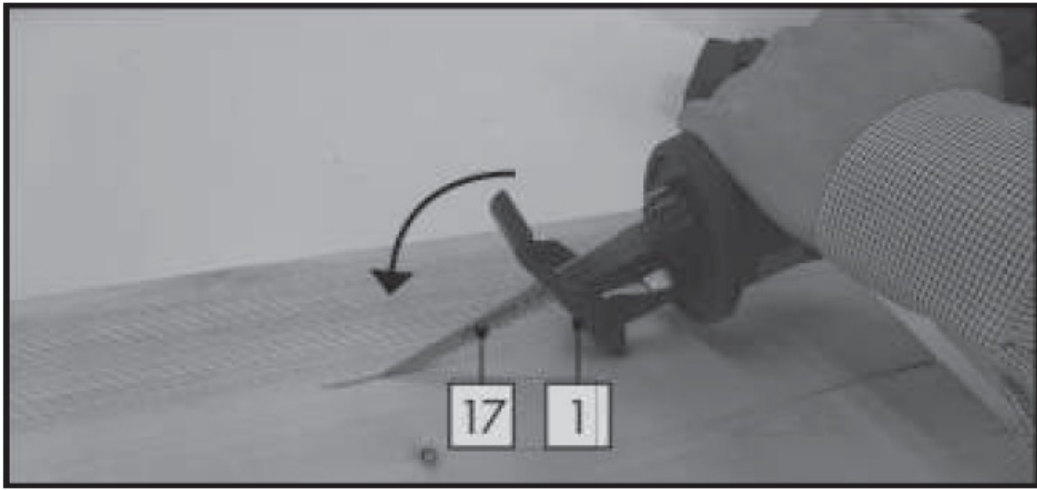

Flush cuts:

- With elastic bi-metal saw blades you can separate water pipes, for example, flush to the wall.




- Make sure that the blade is always longer than the pipe diameter. There is a risk of kickback and personal injury.

Troubleshooting

Problem	Possible Cause	Possible Solution
Unit will not start	Battery pack not installed properly	Check battery pack installation.
	Battery pack not charged.	Check battery pack charging requirements.
Battery pack will not charge.	Battery pack not inserted into charger.	Insert battery pack into charger until LED appears
	Charger not plugged in	Plug charger into a working outlet. Refer notes "for more details.
	Surrounding air temperature too hot or too cold	Move charger and battery to a surrounding air temperature of above 40 degrees F(4.5°C) or below 105 degrees F(+40.5°C)
Unit shuts off abruptly	Battery pack has reached its maximum thermal limit.	Allow battery pack to cool down
Unit shuts off abruptly	Out of charge. (To maximize the life of the battery pack, it is designed to shut abruptly when the charger is depleted)	Place on charger and allow to charge

Protecting the environment




-  Separate collection. This product must not be disposed of with normal household waste.
- Should you find one day that your HYCHIKA product needs replacement, or if it is of no further use to you, do not dispose of it with household waste. Make this product available for separate collection.



- A separate collection of used products and packaging allows materials to be recycled and used again.
- Reuse of recycled materials helps prevent environmental pollution and reduces the demand for raw materials.
- Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.

Batteries



-  There are no user-serviceable parts inside.
- At the end of your product's life return the whole unit to your service agent or to a local recycling station to have the battery recycled. Do not throw the unit out with household waste.

EC DECLARATION OF CONFORMITY

The object of the declaration:

- **Product:** Classic Reciprocating Saw
- **Mode/ type:** ML-RS18-180
- **Serial nos.:** 23/02
- **Manufacture Address:** Zhejiang minglei Tool Industrial Co., Ltd. No.188 Yindong North Road, Yinzhou District, Ningbo, 315100, Zhejiang, China
- **European Representative Address:** EUREP GmbH. Unterlettenweg 1a 85051 Ingolstadt Germany.

This declaration is issued under the sole responsibility of the manufacturer

The object of the declaration described above is in conformity with the relevant Union harmonization legislation:


- **2006/42/EC:** The Machinery Directive
- **2014/30/EU:** The Electromagnetic Compatibility Directive
- **2011/65/EU:** The Restriction of Hazardous Substances Directive

Conformity is shown by compliance with the applicable requirements of the following documents:

- EN 62841-1:2015
- EN 55014-1:2017
- EN 50581:2012
- EN 62841-2-11:2016
- EN 55014-2:2015

Signed for and on behalf of:

- **Date of issue:** 4th Aug 2021
- **Name:** Spencer Tang
- **Position:** QA Director
- **Signature:**

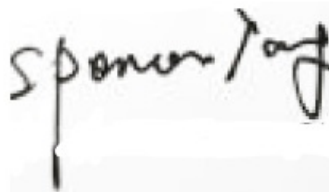

The technical documentation for the machinery is available from above address.

CONTACT

If any problems, please contact our after-sales email: support@hychika.com

Thank you for choosing a HYCHIKA series product. If you have any questions, please scan the QR code to access the user manual, product videos, and online customer support.




- **Manufacturer:** Zhejiang minglei Tool Industrial Co., Ltd.
- **ADD:** No.188 Yindong North Road, Yinzhou District, Ningbo, 315100, Zhejiang, China
- **After-sales email:** support@HYCHIKA.com
- **European Representative:** EUREP GmbH.
- Unterlettenweg 1a 85051 Ingolstadt Germany
- **Tel:** +49 841 8869 7744
- **E-mail:** eurep@eurep-gmbh.com

Made in China



Documents / Resources

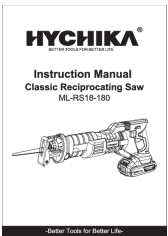	HYCHIKA ML-RS18-180 Classic Reciprocating Saw [pdf] Instruction Manual ML-RS18-180 Classic Reciprocating Saw, ML-RS18-180, Classic Reciprocating Saw, Reciprocating Saw, Saw
---	--

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.