



HYDRO Sprite TL Push Button Mode User Guide

[Home](#) » [HYDRO](#) » HYDRO Sprite TL Push Button Mode User Guide 



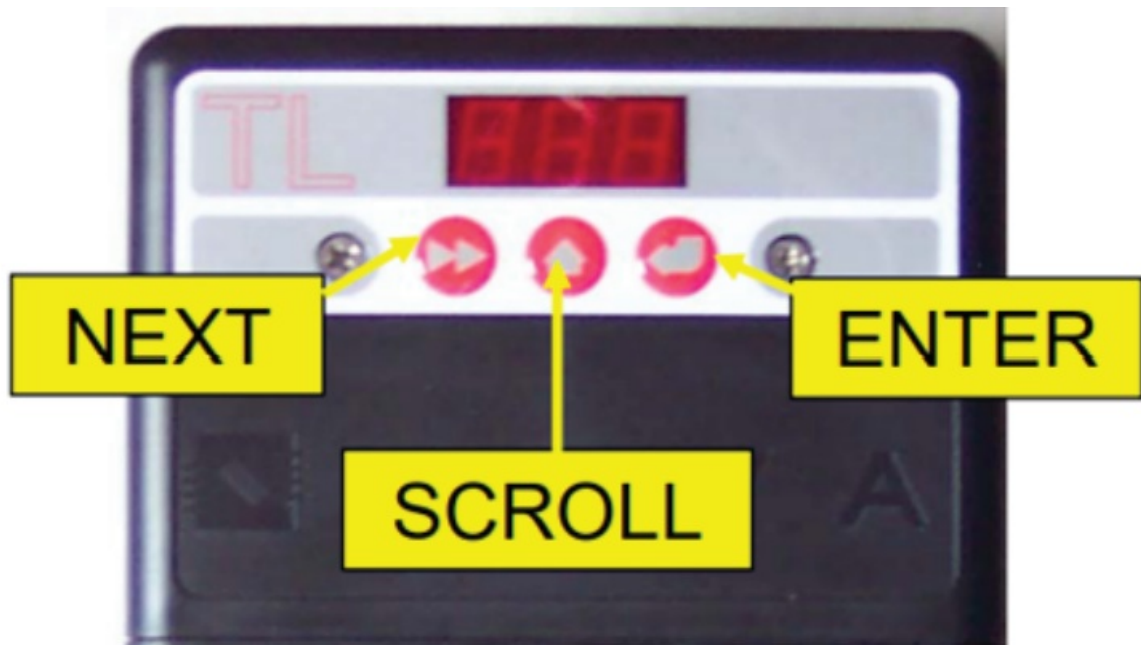
Quick Start Guide Sprite TL Push Button Mode








Note: The following instructions will serve as a start-up programming base for the installation of a Sprite TL in Push Button Mode.

Contents




- 1 [Get into Programming Menu](#)
- 2 [Prime the Pumps and Operation Mode](#)
- 3 [Clear Load Count and Operation Mode choice](#)
- 4 [Program Dispenser Lock Out Period](#)
- 5 [Program Pump Run Time](#)
- 6 [Program Pump Delay Time](#)
- 7 [Program Additional Formulas](#)
- 8 [If using washing machine signals, Program Filter Duration time](#)
- 9 [Program User Prime Pumps](#)
- 10 [Program Change Password](#)
- 11 [Warranty](#)
- 12 [Documents / Resources](#)
 - 12.1 [References](#)
- 13 [Related Posts](#)

Get into Programming Menu







- To enter the programming menu press and hold the  key for 2 seconds.
- The display will show 000 with the left 0 flashing.
- Press the  key to change the digit to a 1.
- Press the  key to advance to the middle digit.
- Press the  key 2 times to change the digit to a 2.
- Press the  key to advance to the right digit
- Press the  key 3 times to change the digit to a 3.
- With the display showing 123 press the  key.

Prime the Pumps and Operation Mode






- The display will show P-1 with the 1 flashing. (pump 1)
- Press the  key to prime pump 1, press again to stop.
- Press the  key to select P-2 (pump 2).
- Press the  key to prime pump 2, press again to stop.

Clear Load Count and Operation Mode choice







- Press the  key to display "Clr". The screen will toggle between the current load count and "Clr" .
- Press the  key to clear the load count.
- Press the  key to display "oP". (operation mode) The screen will toggle between the current operation mode and "oP".

- Press the  key to adjust the operation mode. Choices are “Pb” for Push Button mode (select this choice), or “oc” for Occurrence mode, or “Au” for Automatic mode.







Program Dispenser Lock Out Period

- Press the  key to set the “oP” & advance to “LP”.
- Press the  key to display “LP”(Lockout Period).
- Press the  &  key to adjust the desired “LP”.
- Press the  key to set the Lockout Period .





Program Pump Run Time

- Press the  key to display F-1 with the 1 flashing.
- Press the  key to select a Formula to program.
- Press the  key when desired Formula is displayed.
- Press the  key to start & stop Pump 1 run time.
- Press the  key to select P 2 (Pump 2).
- Press the  key to start & stop Pump 2 run time.





Program Pump Delay Time

- Press the  key to display “d1” with the 1 flashing. (d1 = pump 1 delay time, d2 = pump 2 delay time).
- Press the  key to select a pump to delay.
- Press the  key to display delay time.
- Press the  &  key to adjust the desired delay time.
- Press the  key to set the delay time.



Program Additional Formulas

- Press the  key and to display “Fin”.
- Press the  key to display F-1 with the 1 flashing.
- Press the  key to select another Formula to prog. or,
- Press the  key to display “Fd”.








If using washing machine signals, Program Filter Duration time

- Press the  key to select a Filter Duration time.
- Press the  &  key to adjust the desired delay time.
- Press the  key to set the "Fd".

Program User Prime Pumps

- Press the  key to display "Upr (user prime)". The screen will toggle between the current setting and "Upr".
- Press the  key to toggle "OFF" or "ON".

Program Change Password

- Press the  key to display "Pin".
- Press the  key if you want to change the "Pin".
- Press the  &  key to change the desired NEW "Pin".
- Press the  key to set the "Pin".
- Press the  key to display "End".
- Press the  key to exit Programming Menu.

Warranty

Limited Warranty

Seller warrants solely to Buyer the products will be free from defects in material and workmanship under normal use and service for a period of one year from the date of completion of manufacture. This limited warranty does not apply to (a) hoses; (b) products that have a normal life shorter than one year; or (c) failure in performance or damage caused by chemicals, abrasive materials, corrosion, lightning, improper voltage supply, physical abuse, mishandling or misapplication. In the event the products are altered or repaired by Buyer without Seller's prior written approval, all warranties will be void. No other warranty, oral, expressed or implied, including any warranty of merchantability or fitness for any particular purpose, is made for these products, and all other warranties are hereby expressly excluded. Seller's sole obligation under this warranty will be, at Seller's option, to repair or replace F.O.B. Seller's facility in Cincinnati, Ohio any Products found to be other than as warranted.

Limitation of Liability

Seller's warranty obligations and Buyer's remedies are solely and exclusively as stated herein. Seller shall have no other liability, direct or indirect, of any kind, including liability for special, incidental, or consequential damages or for any other claims for damage or loss resulting from any cause whatsoever, whether based on negligence, strict liability, breach of contract or breach of warranty.



Hydro Systems Company
3798 Round Bottom Road
Cincinnati, OH 45244 U.S.A.
Phone 513-271-8800
Toll Free 800.543.7184
Fax 513-271-0160
Web hydrosystemsco.com

Documents / Resources

A thumbnail image of a PDF document titled "HYDRO Quick Start Guide Sprite TL Push Button Mode". The document shows a digital display with "0.00" and "0.00" and a "PUSH" button. Below the display is a list of steps for getting into programming mode.	<p>HYDRO Sprite TL Push Button Mode [pdf] User Guide Sprite TL Push Button Mode, Sprite TL, Push Button Mode</p>
---	--

References

- [🔵 Chemical Dilution, Dosing and Injection Equipment | Hydro Systems](#)

[Manuals+](#)