



HYF A02 Bluetooth Fingerprint Reader Scanner Instructions

[Home](#) » [HYF](#) » HYF A02 Bluetooth Fingerprint Reader Scanner Instructions 

Contents

- [1 HYF A02 USB/Bluetooth Fingerprint Reader/Scanner Instructions](#)
 - [1.1 Device Parameter](#)
 - [1.2 Product Pictures](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

HYF A02 USB/Bluetooth Fingerprint Reader/Scanner Instructions



Shenzhen Herofun Bio-Tech Co., Ltd

7th floor,U3 Block, Junxiang U8 Industrial Park Hangcheng Ave., Guxing Community, Xixiang Street, Baoan District, Shenzhen
www.herofun-bio.com

A02 USB/Bluetooth Fingerprint Reader/Scanner



Device Parameter

Model Number	A02
Size	L103 *W 55 *H 15 mm
Weight	65g
Shell	Plastic
Interface	USB Support OTG (Micro USB) Bluetooth
Electrical parameters	
Power Voltage	5.0V±5% supplied by USB
Working current	<200 mA
Environmental parameters	
Working temperature	-10°C -60°C
Storage temperature	-20°C -70°C
Working humidity	10%-90%
Storage humidity	20%(±3) 90%(±3)
Fingerprint parameters	
Capture window size	18mm* 12mm
Image size	256x280 pixels
Image Resolution	508 DPI
Grayscale	8 bit,256
Software parameters	
Fingerprint image quality	FBI CJIS-RS-0010 IAFIS Image Quality Specification Appendix F
Feature format	ANSI378,ISO19794
Image format	WSQ,PNG,BMP,JPEG,etc
OS	Linux, Windows, Android,iOS,MacOS
Development language	C/C++,Java,C Delphi,etc

Product Pictures



Documents / Resources

	HYF A02 Bluetooth Fingerprint Reader Scanner [pdf] Instructions A02, A02 Bluetooth Fingerprint Reader Scanner, Bluetooth Fingerprint Reader Scanner, Fingerprint Reader Scanner, Reader Scanner, Scanner
---	--

References

-  [To be globally recognized biometric hardware integrator|HYF Group](#)

Manuals+.