



# Hyfire HFI-IO-404-01 Vega Multi-Modules Instruction Manual

[Home](#) » [Hyfire](#) » Hyfire HFI-IO-404-01 Vega Multi-Modules Instruction Manual 

## Contents

- [1 Hyfire HFI-IO-404-01 Vega Multi-Modules](#)
- [2 GENERAL DESCRIPTION](#)
- [3 TECHNICAL SPECIFICATIONS](#)
- [4 ISOLATOR SPECIFICATIONS](#)
- [5 LED INDICATORS](#)
- [6 INSTALLING THE MULTI-MODULES](#)
- [7 WARRANTY](#)
- [8 WIRING THE MULTI-MODULE – GENERALITIES](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)



**Hyfire HFI-IO-404-01 Vega Multi-Modules**




## VEGA MULTI-MODULES

- HFI-IO-404-01 – MULTIWAY I/O UNIT 4 INPUT, 4 RELAY OUTPUT – BOXED
- HFI-IO-422-01 – MULTIWAY I/O UNIT 4 INPUT, 2 RELAY OUTPUT, 2 SUPERVISED OUTPUT – BOXED
- HFI-IO-602-01 – MULTIWAY I/O UNIT 6 INPUT, 2 RELAY OUTPUT – BOXED


## GENERAL DESCRIPTION

Generally speaking, the Vega multi-module series is a family of microprocessor-controlled interface devices permitting the monitoring and control of auxiliary devices. These are loop-powered devices that operate according to the Vega analog-intelligent protocol and are characterized by low current consumption; their particular design allow an easy and fast installation. A channel is a multi-module sub-device through which monitoring and control of analog-loop-extraneous auxiliary devices are exerted by the analog control panel. Multi-modules are, as a matter of fact, multi-channel devices. In detail, Vega multi-modules are:


- HFI-IO-404-01 – is composed of 4 input channels and 4 form C outputs.
- HFI-IO-422-01 – is composed of 4 input channels, 2 supervised output channels, and 2 form C output channels.
- HFI-IO-602-01 – is composed of 6 input channels and 2 form C output channels.

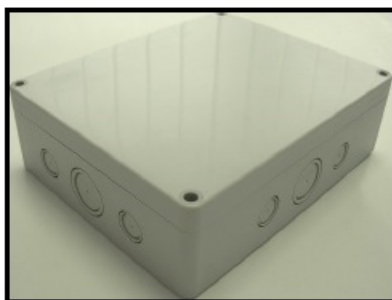


Picture 1 - multi-module's external overview

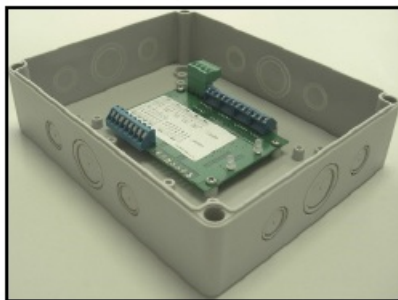

Picture 2 - multi-module's overview (without front cover)

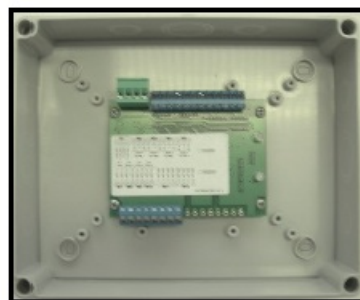

Picture 3 - multi-module's internal overview showing the device's internal PCB.

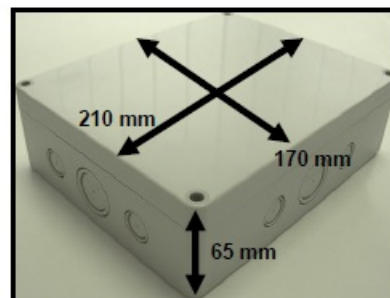

Picture 4 - device's dimensions

<b><u>TECHNICAL SPECIFICATIONS</u></b>	
Compatible communication/control protocol	Vega analog-intelligent protocol
Vega protocol voltage range	from 4 V to 42 V
Device operative voltage range *	from 18 V to 40 V
Standby current consumption	500 $\mu$ A at 24 V
Supervised input and supervised output "end of the line" resistor recommend value (REOL)	27 K $\Omega$
Supervised input auxiliary device's series resistor to the switch recommended value (RSW)	10 K $\Omega$

Operating temperature range	from –10 °C to + 55 °C
Humidity	from 5 RH% to 93 +- 3% RH not condensing)

Dimensions	210 x 170 x 65 mm
Weight	470 grams
Cable entry knockout holes measures	1X M25/32, 2X M16/20 for each lateral side of the device's box
IP rating	65
Applicable wire gauge range	from 0.5 mm <sup>2</sup> to 2.5 mm <sup>2</sup>

- The product operates down to 15 V but without LED indication.
- Technical data: see document TDS-VMICX held by the manufacturer.

<b><u>ISOLATOR SPECIFICATIONS</u></b>	
Maximum rated continuous current with the switch closed – IC max	350 mA
Maximum rated switching current (e.g. under short circuit conditions) – IS max	350 mA
Maximum leakage current with the switch open (isolated state) – IL max	7.4 mA
Maximum series impedance with the switch closed – ZC max	0.11 $\Omega$
The voltage at which the device isolates (i.e. switches from closed to open) – VSO	11 V $\pm$ 5%
The voltage at which the device reconnects (i.e. switches from open to closed) – VSC	13 V $\pm$ 5%

## **SHORT-CIRCUIT ISOLATOR**

- The multi-module has a built-in bidirectional isolator designed to provide short-circuit isolation and functional protection features for the analog-intelligent loop.
- When activated, the isolator will “cut out” the adjacent loop’s section where the short occurred; on the other hand, all functions of the devices situated on the opposite loop’s section of the multi-module will be unaffected and operate normally.
- When the short is removed, the multi-module restores power to the isolated loop’s section and its devices.

## LED INDICATORS

Multi-modules are equipped with two LED indicators: one is dedicated to the input channels and the second one is dedicated to the output channels (picture 9); these are green/red/amber three-color LEDs. When all channels are in normal conditions, the status of the first input channel (considering a sequential order based on the loop addresses given to the channels) is signaled on the input LED, and the status of the first output channel is signaled on the output LED. If one channel alters its condition (fault or alarm), then the related LED signals its condition of it. If more than one channel is in a not-normal condition, the first one in addressing order is signaled.

## ADDRESSING

- Multi-modules are analog-addressable devices. Each multi-module type can be assigned more than one address, this depends on the choices made by the installer of the fire security system and its design.
- If installed on a loop, the multi-module must be assigned at least one address, with a value ranging from 1 to 240, which corresponds to the first input channel that is always active and cannot be disabled: all the other ones can be activated or deactivated by the installer, depending on his needs, from the control panel (if it has been implemented with such control feature); each multi-module takes up to 8 addresses sequentially, and no inactive gaps are allowed between two active addresses.
- Similarly to every Vega device, each active channel can be controlled by the control panel and must have a unique address.
- Automatic addressing can be performed on this kind of device (consult the analog-intelligent auto-addressing feature described in the related application notes).
- Alternatively, to control the panel's addressing and management, the first address of multi-modules can be set by using a special hand-held programming unit; for more information about manual addressing, please, refer to the programming unit's instruction manual.

**NOTE:** The multi-modules can hold up to 8 active addresses. The address assigned by the programmer always relates to the input channel; to the remaining active channels are automatically assigned consecutive addresses.


## INSTALLING THE MULTI-MODULES

For specific information regarding the detector and device's spacing, placement and special applications refer to your specific national standards.


1. Select the position of the multi-module before installing and fixing it.
2. Securely fix the device's box to the wall with the provided screws (see pictures 5 and 6).
3. Multi-module device box is designed with three cable entry knockout holes, present on each lateral side, allowing sealed, cable gland fitted, loop, and auxiliary device's cables to be connected to the device and, at the same time, to preserve the IP protection rating (picture 7).  
Fit the cable gland (or glands) to the cables.
4. Fit the cable's gland (or glands) into the device box's cable entry (or entries).
5. Feed the cables into the box, giving them a sufficient length.
6. Connect the cable's terminals to the device's terminal blocks as indicated in the wiring paragraphs.
7. After installing all multi-modules and other loop devices, apply power to the loop in accordance with the control panel's installation instructions.
8. Test the multimodule's effectiveness and reset the system as described in the TESTING and RESET

paragraph.


9. Position the front cover onto the device's box and tighten it with the supplied screws until a good seal is obtained (picture 8).

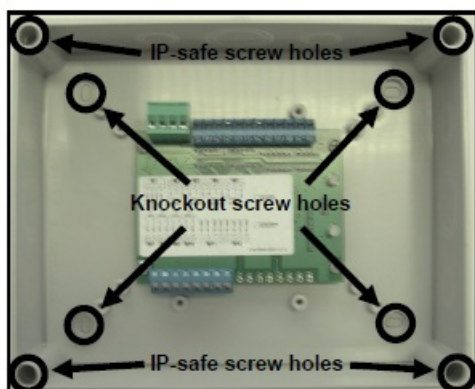


Picture 5 - locations for wall fixing screw insertion holes on the multi-module

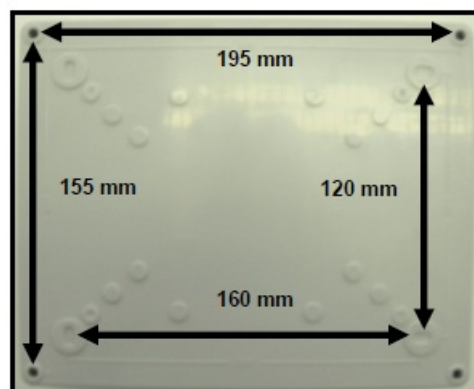


Picture 6 - device box's rear view: distances between screw insertion holes

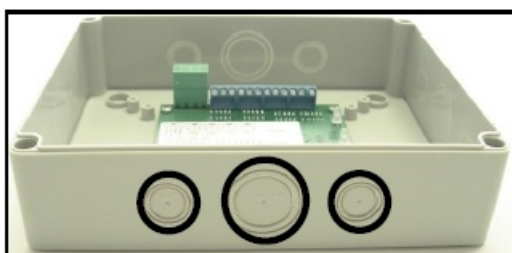

Picture 7 - cable's entry knockout holes

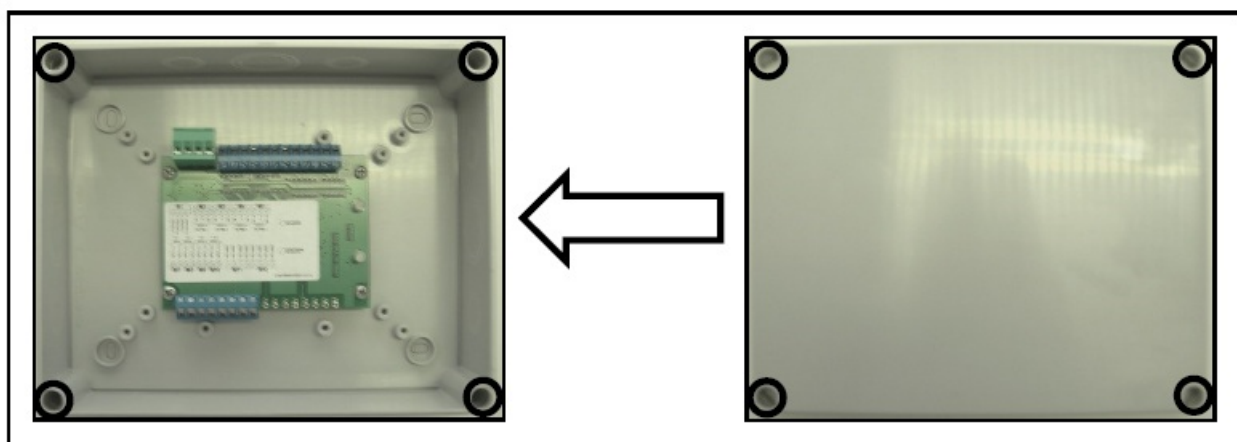

Picture 8 - placement of the device's cover onto its box and sealing screw's insertion holes

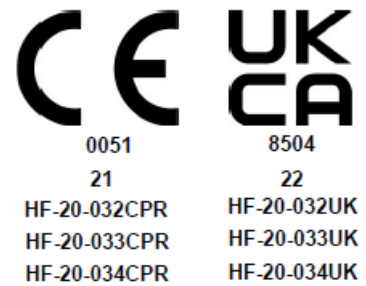

## **WARNINGS AND LIMITATIONS**

Our devices use high-quality electronic components and plastic materials that are highly resistant to environmental deterioration. However, after 10 years of continuous operation, it is advisable to replace the devices in order to minimize the risk of reduced performance caused by external factors. Ensure that this device is only used with compatible control panels. Detection systems must be checked, serviced, and maintained on a regular basis to confirm correct operation.

Smoke sensors may respond differently to various kinds of smoke particles, thus application advice should be sought for special risks. Sensors cannot respond correctly if barriers exist between them and the fire location and may be affected by special environmental conditions. Refer to and follow national codes of practice and other internationally recognized fire engineering standards.

Appropriate risk assessment should be carried out initially to determine the correct design criteria and updated periodically.

## **WARRANTY**

All devices are supplied with the benefit of a limited 5 years warranty relating to faulty materials or manufacturing defects, effective from the production date indicated on each product.

This warranty is invalidated by mechanical or electrical damage caused in the field by incorrect handling or usage.

Hyfire Wireless Fire Solutions Limited – Unit B12a, Holly Farm Business Park, Honiley, Warwickshire, CV8 1NP – United Kingdom



The product must be returned via your authorized supplier for repair or replacement together with full information on any problem identified.

Full details on our warranty and product's returns policy can be obtained upon request.

EN 54-17:2005

EN 54-18:2005


HFI-IO-404-01 HFI-IO-422-01  
HFI-IO-602-01

For use in compatible fire detection and alarm system


## WIRING THE MULTI-MODULE – GENERALITIES

- The multi-module must be:
  - connected to the analog loop, as any other analog device
  - connected to the monitored and/or controlled auxiliary device (or devices).
- In picture 9 are illustrated the terminal block's schemes of the various types of multi-modules.
- Picture 10 illustrates specifically the connection of the M1 terminal block's set, common to all multi-modules devices, for the connection to the analog-intelligent loop.


HFI-IO-404-01

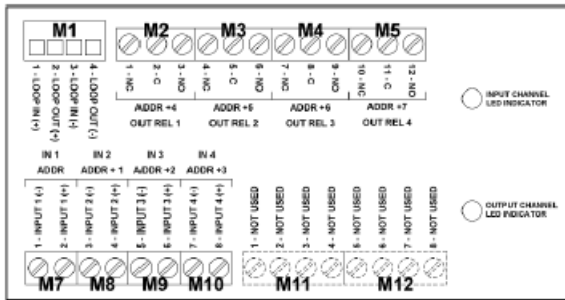

HFI-IO-422-01

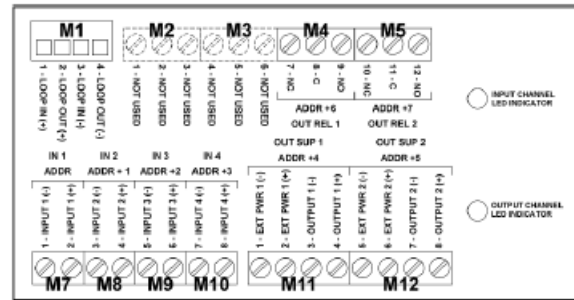

HFI-IO-602-01

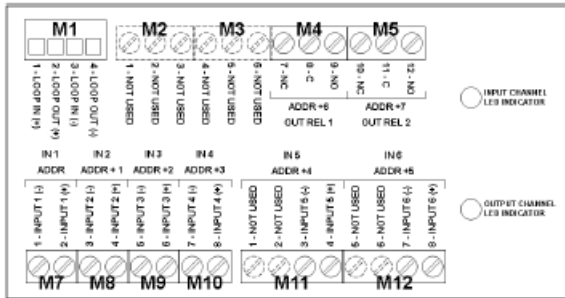


Picture 9 - terminal block's schemes for the multi-module's family


**CAUTION**

Disconnect loop power before installing the multi-modules.

**CAUTION**

- Electrostatic Sensitive Device.
- Observe precautions when handling and making connections.

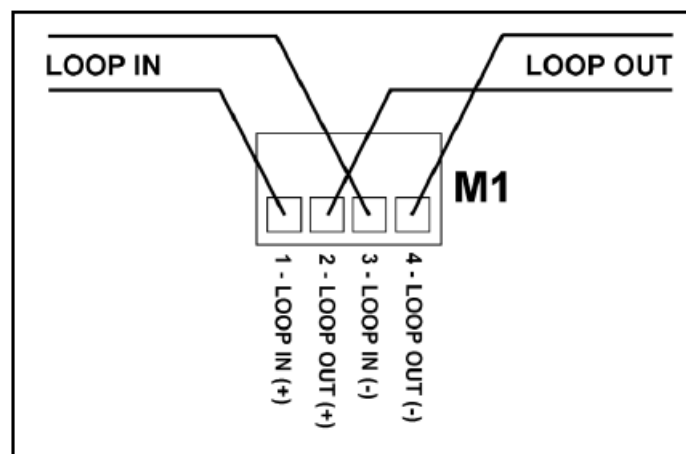
**THE SUPERVISED INPUT CHANNEL AND ITS WIRING**

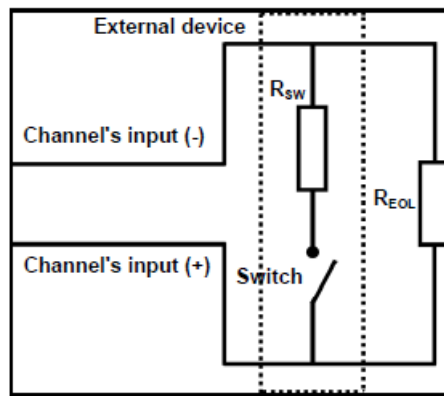

Picture 11 - supervised input channel's wiring

- This channel provides monitoring of normally open contact fire alarm devices (picture 11).
- This channel is capable of supervising an adequate “end of the line” resistor (REOL) fitted into its terminals; the purpose of this supervision is to distinguish between the following conditions:
  - Normal condition.
  - Alarm condition.
  - Short circuit fault condition.
  - Open circuit fault condition.
- RSW guarantees the alarm current when the switch is closed.

## THE SUPERVISED OUTPUT CHANNEL AND ITS WIRING

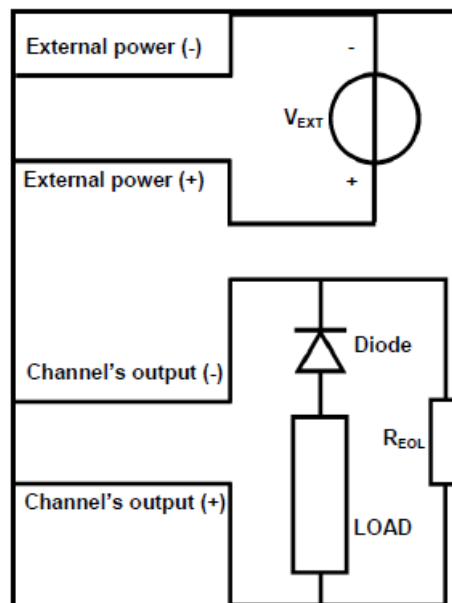


Picture 12 - supervised output channel's wiring

- This channel (picture 12) provides control of external, loop-unrelated auxiliary devices such as fire shutters; it performs two main functions:
  - supervises the connection to the controlled external load through an “end of the line” resistor (REOL)
  - supervises the presence of an external power supply for the output.
- The purpose of the supervision functionality of this channel is to distinguish between the following conditions:
  - Normal condition.
  - Short circuit fault condition on the load’s “loop”.

- Open circuit fault condition on the load's "loop".
- External power supply shortage fault condition; this can be caused by a short or open circuit on the power supply "loop", or by the VEXT value under a certain threshold.

## THE FORM C OUTPUT CHANNEL AND ITS WIRING

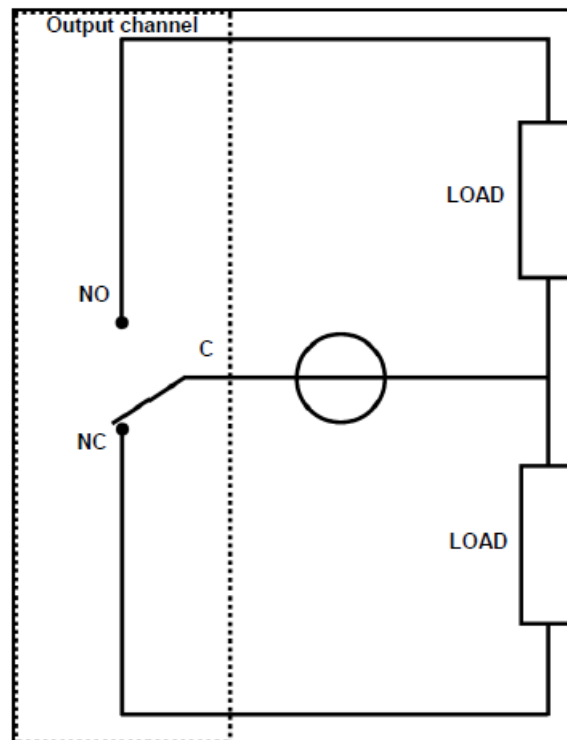

Picture 13 - form C output channel's wiring

- This output channel provides the relay's double pole contacts changeover for the control of auxiliary devices (picture 13 illustrates a wiring example). This non-supervised form C output is controlled and can be switched over by the control panel.
- This channel type is characterized by 3 terminals:
  - C: "common" terminal
  - NC: "normally closed" terminal
  - NO: "normally open" terminal
- By default, C is switched over to the NC terminal; when activated, C is switched over to the NO terminal.
- Please note that due to the non-supervised nature of this output, only techno-logic devices can be connected to it (fire shutters hold / release devices and so on).

## TESTING

- In order to try out the functionality of the installed multi-module, the following tests must be performed:
- All active output channels – alarm test: trigger an alarm condition on the control panel (by a call-point or sensor in the installed system): the control panel will activate or switch over the multimodule's output (or outputs).
- All active input channels – alarm test: activate the external device: the control panel must trigger a system alarm.
- All active supervised input and output channels – fault tests: generate open and short circuit conditions on the supervised channel's loops: the control panel must signal one or more fault conditions.

- After each test, the device must be reset by the specific command on the control panel (see the RESET paragraph).
- All devices must be tested after installation and, successively, on a periodic basis.


## RESET

To reset the multi-module from an alarmed or a faulty condition, it is necessary to:

1. solve the cause of the abnormal condition.
2. reset the system from the control panel.

Hyfire Wireless Fire Solutions Limited – Unit B12a, Holly Farm Business Park, Honiley, Warwickshire, CV8 1NP – United Kingdom. [www.hyfirewireless.com](http://www.hyfirewireless.com). [info@hyfirewireless.co.uk](mailto:info@hyfirewireless.co.uk).

## Documents / Resources

	<p><a href="#">Hyfire HFI-IO-404-01 Vega Multi-Modules</a> [pdf] Instruction Manual L20-VMICX-1400-vA.3, HFI-IO-404-01, HFI-IO-422-01, HFI-IO-602-01, HFI-IO-404-01 Vega M ulti-Modules, Vega Multi-Modules, Multi-Modules, Modules</p>
---	---

## References

-  [Hyfire Wireless Fire Solutions](http://www.hyfirewireless.com)