



hype FB-RCS1 Phone Remote Controller Instruction Manual

[Home](#) » [HYPE](#) » hype FB-RCS1 Phone Remote Controller Instruction Manual 

hype FB-RCS1 Phone Remote Controller



Contents

- 1 Thank you
- 2 PACKAGE CONTENTS
- 3 KEY FEATURES
- 4 SAFETY INSTRUCTIONS
- 5 DIAGRAM
- 6 PAIRING THE REMOTE CONTROL
- 7 OPERATING THE REMOTE CONTROL
- 8 SPECIFICATIONS
- 9 REMINDER
- 10 CARE AND MAINTENANCE
- 11 FCC STATEMENT
- 12 RF Exposure Information
- 13 CUSTOMER SUPPORT
- 14 Documents / Resources
 - 14.1 References

Thank you

Thank you for purchasing the Phone Remote Control.
Please read all instructions carefully before using and retain this manual for future use and reference.

PACKAGE CONTENTS

- Phone Remote
- Operation Manual

KEY FEATURES

- Compatible with Bluetooth®-enabled devices
- Multi-functional Remote
- Social Media interaction
- Portable Size
- Hands-free

SAFETY INSTRUCTIONS

If you are not using the remote for an extended period of time, remove the battery to prevent corrosion in the event of battery leakage.

When disposing of batteries, please take into account the protection of the environment and strictly follow your local laws and regulations for disposal of these batteries.

Risk of explosion if the battery is replaced with an incorrect type. Use only an identical battery or equivalent.

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not puncture or harm the exterior surface of the product in any way.


Keep the unit free from dust, lint, etc.

Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device.

This product is not a toy. Keep out of reach of children.

Do not expose batteries, battery pack, or batteries to installed to excessive heat, such as direct sunlight, or open flame.

DIAGRAM

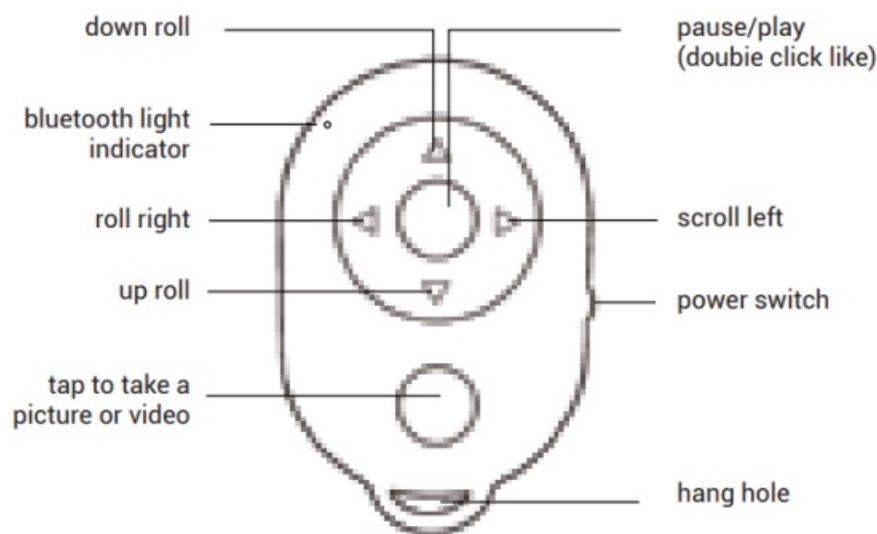

Special note: This product is only applicable to short video APP, such as Tiktok, short video, etc., but also can be used for mobile phone built-in camera and video control, when using the remote control operation, the indicator light will be lit.

PAIRING THE REMOTE CONTROL

1. When using this product for the first time, please remove the battery insulation sheet, turn on the remote control power switch (ON for open, OFF for off), and then the remote control indicator blue light flashes.
2. Place the remote control and the Bluetooth® device to which you would like to pair it within the operating distance.
We recommend keeping the two devices no further than 3 feet apart.
3. Ensure Bluetooth is enabled on your device. Refer to the manufacturer's instructions for how to enable Bluetooth on your device.
4. Turn on the Bluetooth of the mobile phone and search for the pairing name "FB-RCS". The device will automatically search for your device indicated by light flashing. When pairing is complete, the indicator turns off.

OPERATING THE REMOTE CONTROL

This product is compatible with Apple and Android systems. If individual Apple phones cannot be controlled, you need to open the auxiliary function to open or shut down the auxiliary touch button to reconnect and pair.

For IOS users

Open settings – Accessibility – Touch – Assistive Touch- On Scroll down to find “Tracking Sensitivity”. Press the remote controller Camera Button and adjust the sensitivity so that the cursor (small dot) is centered below the screen.

For Android users

Most Android phones can directly use the remote control function after connecting with the remote controller.

If you need to enable the cursor follow these steps:

Settings- System Version number – Click on developer option seven times to enter developer mode – Search in settings to enter developer option – Open display Touch operation – Press the remote controller Camera Button to confirm the cursor.

SPECIFICATIONS

- **Bluetooth® Version:** V5.4
- **Battery:** Button Cell CR2032
- **Transmission Distance:** 10M
- **Bluetooth frequency :** 2402-2480MHz
- **Weight:** 0.024 lb/0.011 kg

REMINDER

1. If your unable to connect or use the device properly, delete or disconnect the device, and try connecting again.
2. When taking photos or recording a video, if the cursor does not stay on the phones photo button area, adjust the position of the small dot by simultaneously pressing the Camera Button and up/down/left-right button.
3. Turn the device off after use to avoid battery power consumption
4. This product contains a button cell battery. Please keep battery out of the reach of children.

CARE AND MAINTENANCE

- Do not expose the unit to excessive heat or humidity to avoid damage to the product’s internal circuitry.
- Do not use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts.
- Do not dispose of the unit in fire as they may explode or combust.
- Do not expose the unit to contact with sharp objects as this will cause scratches and damage.
- Do not let the unit fall from high places, as doing so may damage the internal circuitry.
- Do not attempt to disassemble the unit.

FCC STATEMENT



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This

device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

<div> WARNING</div>	
<div><ul style="list-style-type: none">• INGESTION HAZARD: This product contains a button cell or coin battery.• DEATH or serious injury can occur if ingested.• A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours• KEEP new and used batteries OUTOF REACH of CHILDREN• Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.</div>	<div></div>

 **WARNING:** TO AVOID BATTERY LEAKAGE

1. Be sure to insert the battery correctly, and always follow the toy/ game and battery manufacturers’ instructions.
2. Always remove a weak or dead battery from the product.
3. Remove the battery if the product is left unused for a long period of time.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used importable exposure condition without restriction.

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.

- Call a local poison control center for treatment information.
- The nominal battery voltage: 3V
- Non-rechargeable batteries are not to be recharged
- Do not force discharge, disassemble, heat above 80°C or incinerate. Doing so may result in injury due to venting, leaking or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and –)
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries. Remove and immediately recycle or dispose of the batteries from equipment not used for an extended period of time according to local regulations
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries and keep them away from children.

CUSTOMER SUPPORT

Company name: DGL Group, LTD.

Address: 2045 Lincoln Highway, Edison, NJ, 08817, USA.

www.dglusa.com


Tracking number: DG011425

FCC ID: 2AANZFB-RCS

MADE IN CHINA



Documents / Resources

	<p>hype FB-RCS1 Phone Remote Controller [pdf] Instruction Manual 2AANZFB-RCS, FB-RCS1 Phone Remote Controller, FB-RCS1, Phone Remote Controller, Remote Controller, Controller</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.