

HYPER TOY NDT3001-R Nano Drift Twist RC User Manual

Home » HYPER TOY » HYPER TOY NDT3001-R Nano Drift Twist RC User Manual




Contents

- 1 Nano Drift Twist RC NDT3001-
- R
- 2 CONTENTS
- **3 BATTERY INSTALLATION**
- **4 FUNCTIONS**
- **5 SOLUTIONS TO PROBLEMS**
- **6 Battery Safety Information:**
- **7 FCC Statement**
- 8 Documents / Resources
- 9 Related Posts


Nano Drift Twist RC NDT3001-R




USER MANUAL

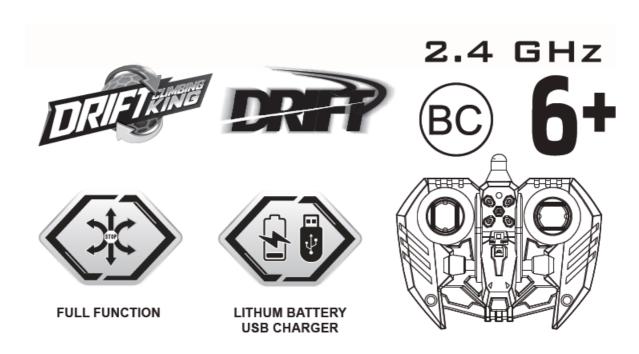


CONTENTS

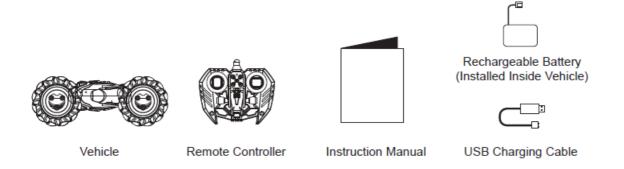

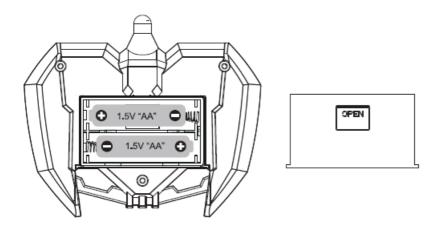

Back of Remote Controller

- 1. Push down and slide out the battery cover.
- 2. Put 2 1.5V AA batteries in the battery slots with correct polarity.
- 3. Close the battery cover.

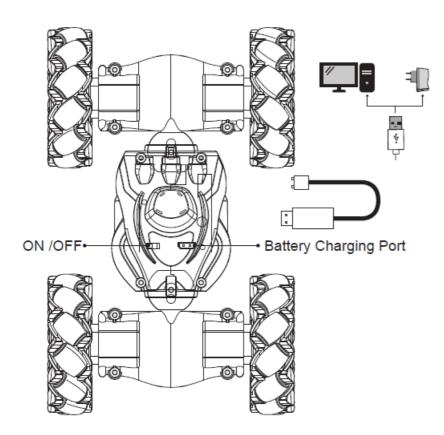

Bottom of Vehicle


Charging the Vehicle: 30 minutes

- 1. Connect USB to Vehicle charging port.
- 2. Charging power can be from wall plug / computer.
- 3. USB light stop when finish charging.

CAUTION:

Please do not force to change the vehicle height!

FUNCTIONS

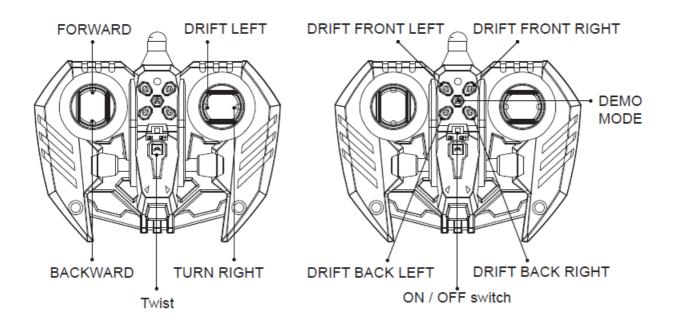

SOLUTIONS TO PROBLEMS

Problem	Cause	Processing Method
The remote control fails to function.	Make the on/off stay at the "OFF" position.	Make the on/off stay at the "ON" position.
	Fail to put the battery into the right electrodes.	Check and make sure that the battery is put in according to the signs of the electrodes on the battery box.
	3. Low battery.	3. Replace with new batteries.
	Out of the controllable distance.	Keep the remote control within 30 meter and point at the remote control car.
	5. No pairing frequency between the remote controller and remote control car	Close remote control power supply first. Then, power off the remote control car, and then power them on. Finally, pull the control lever of the remote controller to conduct frequency pairing again.
The remote control car cannot be controlled	Make the on/off stay at the "OFF" position.	Make the on/off stay at the "ON" position.
	 The remote control car and rechargeable battery pack haven't been connected by correctly corresponding with the electrodes. 	Check and make sure that the battery pack is connected to the remote control car according to the right electrodes.
	3. Low battery.	Recharge or replace the battery pack when it is running low.
	The remote controller and remote control car haven't undergone frequency pairing	Close remote control power supply first. Then, power off the remote control car, and then power them on. Finally, pull the control lever of the remote controller to conduct frequency pairing again.

DO NOT MIX ALKALINE, STANDARD (CARBON ZINC) OR RECHARGEABLE (NICKEL CADMIUM) BATTERIES.

DO NOT MIX OLD AND NEW BATTERIES.

DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.

WARNING:

CHOKING HAZARD-Small parts. Not for children under 3 years.

PLEASE DO NOT RETURN TO STORE

For more information please email Consumer Services: help@hypertoys.com

COLORS AND DECORATIONS MAY VARY. KEEP CONTENT DETAILS FOR FUTURE REFERENCE.

This device complies with Industry Canada licence-exempt RSS 210 standard. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Battery Safety Information:

- Ensure that battery polarity is correct.
- Use only batteries of the type recommended (or equivalent).
- · Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- · Rechargeable batteries are to be recharged by Adult only.
- · Remove used-up batteries immediately.
- Do not recharge non-rechargeable batteries.
- · Do not short-circuit terminals.
- Dispose of batteries safely. Do not dispose of batteries (or products containing non-rechargeable batteries) in fire, as batteries may explode or leak.

FCC Statement

This device complies with the Part 15 of the FCC rules. Operation is subject to the following two conditions: (1)Th is device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.







DISTRIBUÉ PAR: HYPER TOY COMPANY 1-866-204-9737 Numéro de téléphone sans frais ou 177 Malaga Park Dr. Malaga, NJ 08328

© Copyright 2021 HyperToys
©Tous droits réservés 2021. Hyper Toy Company

Documents / Resources



HYPER TOY NDT3001-R Nano Drift Twist RC [pdf] User Manual NDT3001-R, NDT3001R, 2AMOVNDT3001-R, 2AMOVNDT3001-R, NDT3001-T, NDT3001T, 2AMOVNDT3001-T, 2AMOVNDT3001-R Nano Drift Twist RC, Nano Drift Twist RC, Twi st RC, RC

Manuals+,