



HYPER TOY WMC-UNI-2000 RC Dinosaur User Manual

[Home](#) » [HYPER TOY](#) » HYPER TOY WMC-UNI-2000 RC Dinosaur User Manual 

Contents


- [1 HYPER TOY WMC-UNI-2000 RC Dinosaur](#)
- [2 BATTERY INSTALLATION](#)
- [3 FUNCTIONS](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

RC DINO

HYPER TOY WMC-UNI-2000 RC Dinosaur



CONTENTS

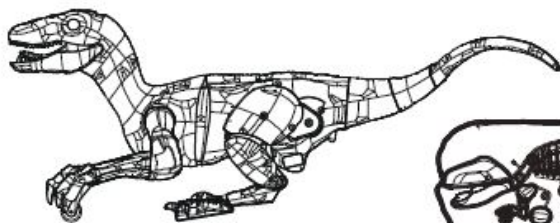


RC Dinosaur



Remote Controller



 Instruction Manual




3.7V 600 mAh
Rechargeable Battery



USB Charging Cable


BATTERY INSTALLATION

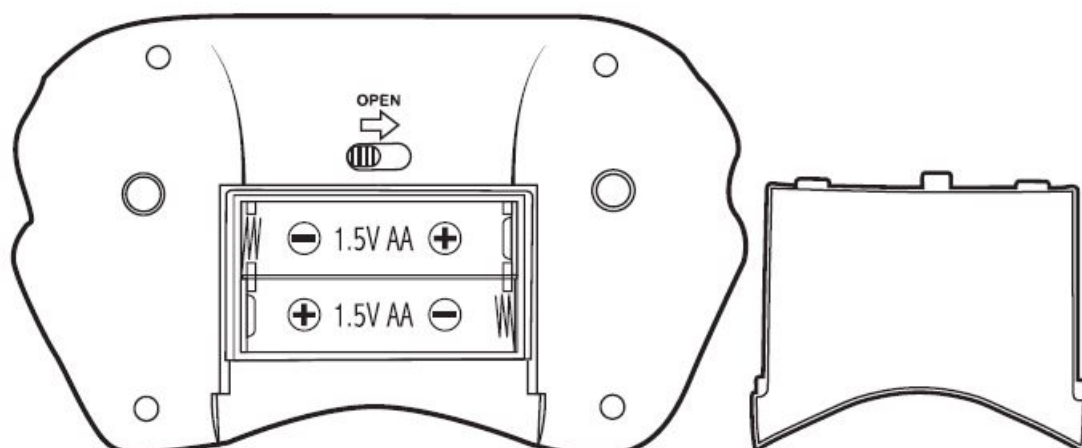


Back of Remote Controller

1. Slide the open button to right side and slide the battery cover down to open.
2. Put 2 1.5V AA batteries in the battery slots with correct polarity.


3. Close the battery cover.

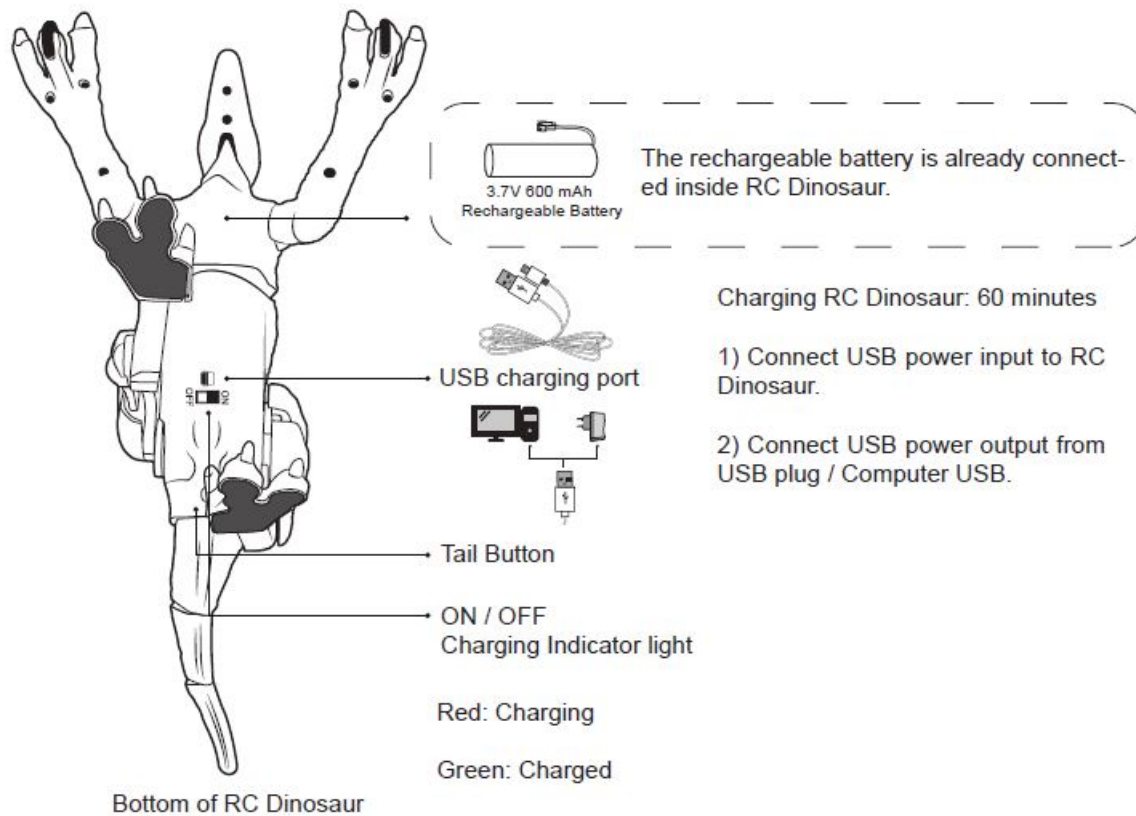

FUNCTIONS

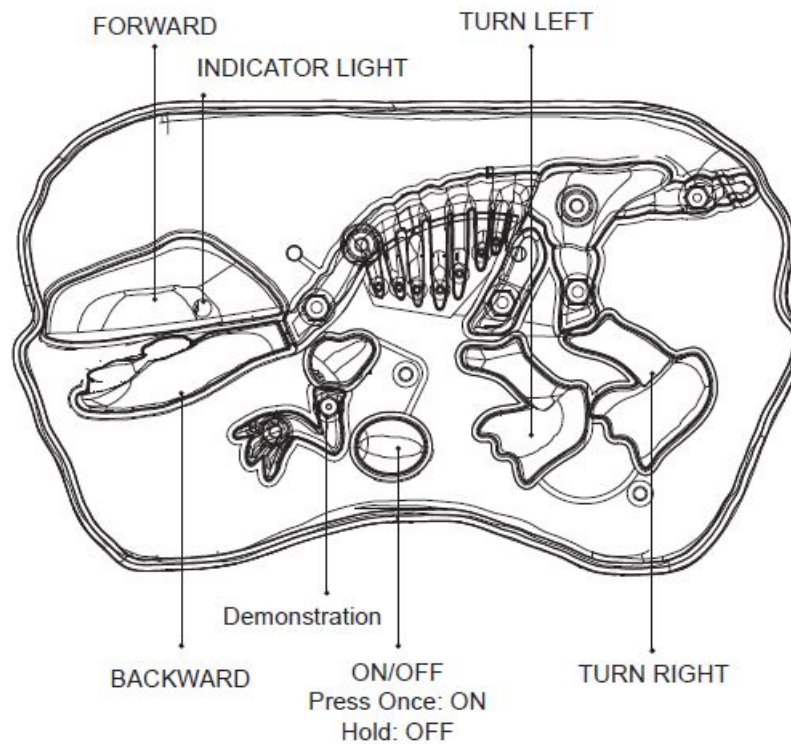

Remote controller and RC Dinosaur will turn OFF automatically when it idle over 5 minutes.

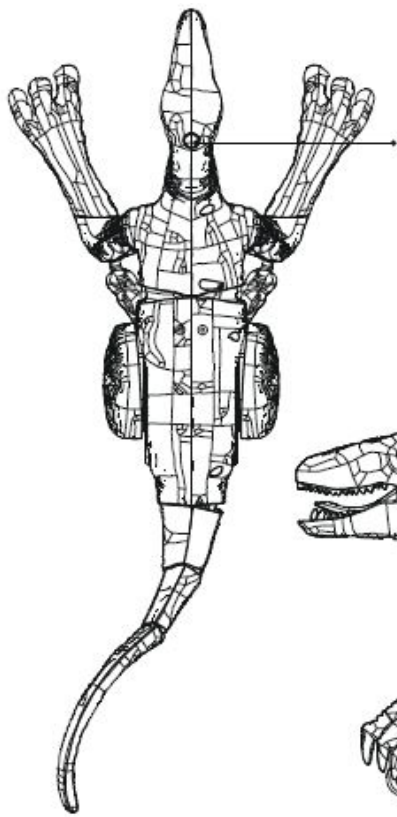


Button

Press Once: Demonstration Mode

RC Dinosaur walks around and shows what it can do; Mouth light effect and sound effects.

Hold for 3 seconds: Sleep Mode

Press once again to wake up RC Dinosaur, and turn on remote controller to controll the RC Dinosaur.

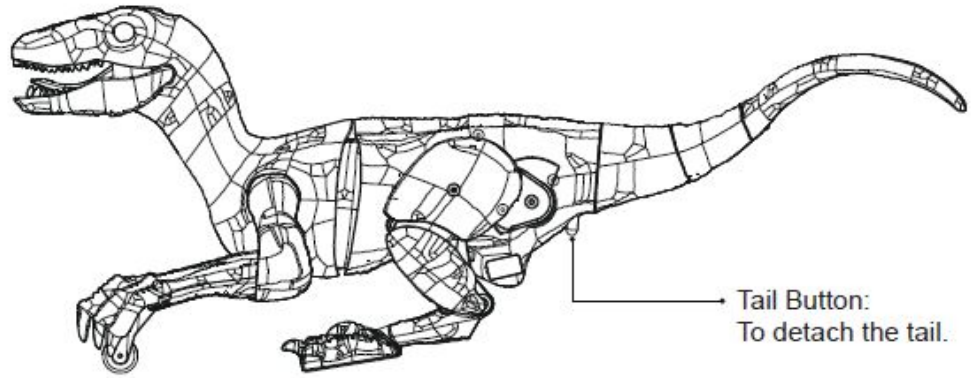

Tail Button:
To detach the tail.

Documents / Resources

	HYPER TOY WMC-UNI-2000 RC Dinosaur [pdf] User Manual UNI2000-T, UNI2000T, 2AMOVUNI2000-T, 2AMOVUNI2000T, UNI2000-R, UNI2000R, 2AMOV UNI2000-R, 2AMOVUNI2000R, WMC-UNI-2000 RC Dinosaur, RC Dinosaur
---	---