



HYPERGEAR Chromium Wireless Gaming Mouse User Manual

[Home](#) » [HyperGear](#) » HYPERGEAR Chromium Wireless Gaming Mouse User Manual 

HYPERGEAR
PRO GAMING SERIES



User Manual


Contents

- [1 CHROMIUM WIRELESS GAMING MOUSE](#)
- [2 INSTRUCTIONS](#)
- [3 WARNING](#)
- [4 IMPORTANT](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

CHROMIUM WIRELESS GAMING MOUSE



- 1. **Left Click**
- 2. **Anti-Skid Scroll Wheel**
- 3. **Right Click**
- 4. **3-Level DPI Switch**
- 5. **Forward**
- 6. **Backward**
- 7. **Micro USB Charging Port Port**

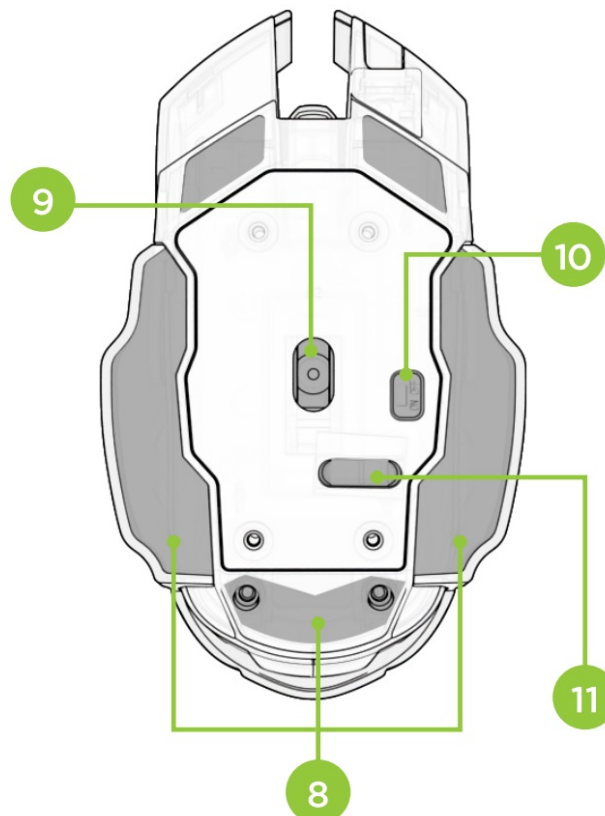

- 8. **Smooth-Slide Base**
- 9. **Gaming Grade Optical Sensor**
- 10. **On/Off Switch**
- 11. **Bluetooth USB Dongle for PC**

INSTRUCTIONS

Fully charge the mouse before first use.

How to Charge

Connect to your PC or a USB power source using the included Micro USB charging cable.

How to Use

1. Plug the USB Wireless Dongle into your PC.
2. Turn on the mouse
3. The mouse will automatically connect to the Dongle and be ready for use.

WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirements the device can be used in portable exposure conditions without restriction

IMPORTANT

Read all safety instructions and warnings prior to using this product. Improper use and failure to follow safety guidelines could result in hazards, injury, and/ or property damage that is not the manufacturer's responsibility. The user is responsible for maintaining this product with care for maximum use.

1. Do not attempt to modify, disassemble, or repair this product.
2. Do not expose to water, moisture, or extreme temperatures (below 40°F or above 90°F).
3. Under any circumstances, if you find this product rapidly increasing in temperature, emitting an odor, or demonstrating an abnormal phenomenon, discontinue use immediately.

Need help?

Visit www.myhypergear.com for additional product information or email info! a myhypergear.com





Contact info@myhypergear.com to submit a warranty claim. Proof of purchase is required.



www.myhypergear.com

Documents / Resources

	<p>HYPERGEAR Chromium Wireless Gaming Mouse [pdf] User Manual PJT-DMS2007, PJTDMS2007, 2A2V2-PJT-DMS2007, 2A2V2PJTDMS2007, Chromium Wireless Gaming Mouse, Chromium, Wireless Gaming Mouse</p>
	<p>HYPERGEAR CHROMIUM Wireless Gaming Mouse [pdf] User Manual CHROMIUM, Wireless Gaming Mouse, CHROMIUM Wireless Gaming Mouse, Gaming Mouse, Mouse</p>