

 


HYPERGEAR Go-Glo Light-Up LED Wireless Speaker User Manual

[Home](#) » [HyperGear](#) » HYPERGEAR Go-Glo Light-Up LED Wireless Speaker User Manual 

HYPERGEAR

Glo Light-Up LED Wireless Speaker
User Manual

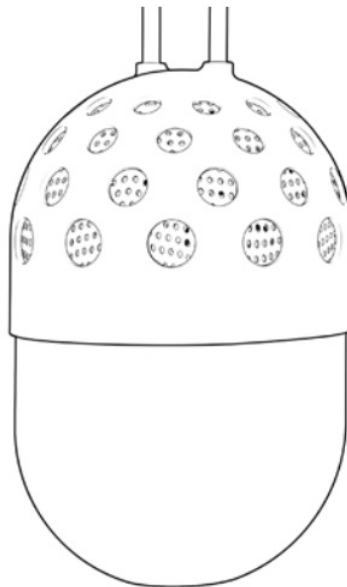


Contents

- [1 Go-Glo Light-Up LED Wireless Speaker](#)
- [2 PAIRING INSTRUCTIONS](#)
- [3 PARTY MODE INSTRUCTIONS](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

Go-Glo Light-Up LED Wireless Speaker


NOTE: Always secure the silicone cover over the charging port to ensure the Go-Glo is sealed and water-resistant. The Go-Glo is certified IPX4. It's resistant to water splashes from any direction, but CAN NOT be submerged.

 Fully charge your speaker before first use. Connect to a USB power source using the included Micro USB charging cable.

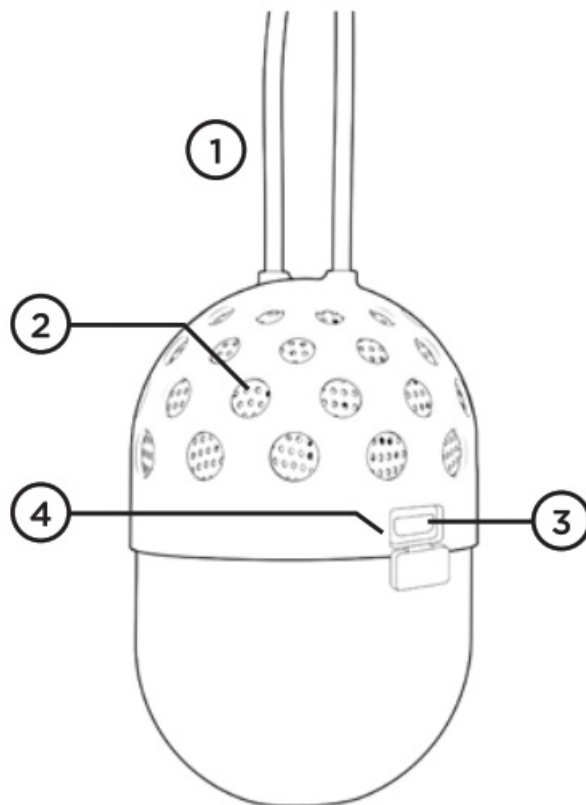

Need help? Visit www.myhypergear.com for additional product information or contact info@myhypergear.com

1. Built-In Tie Cord
2. Speaker
3. Covered Charging Port
4. Charging Indicator Light

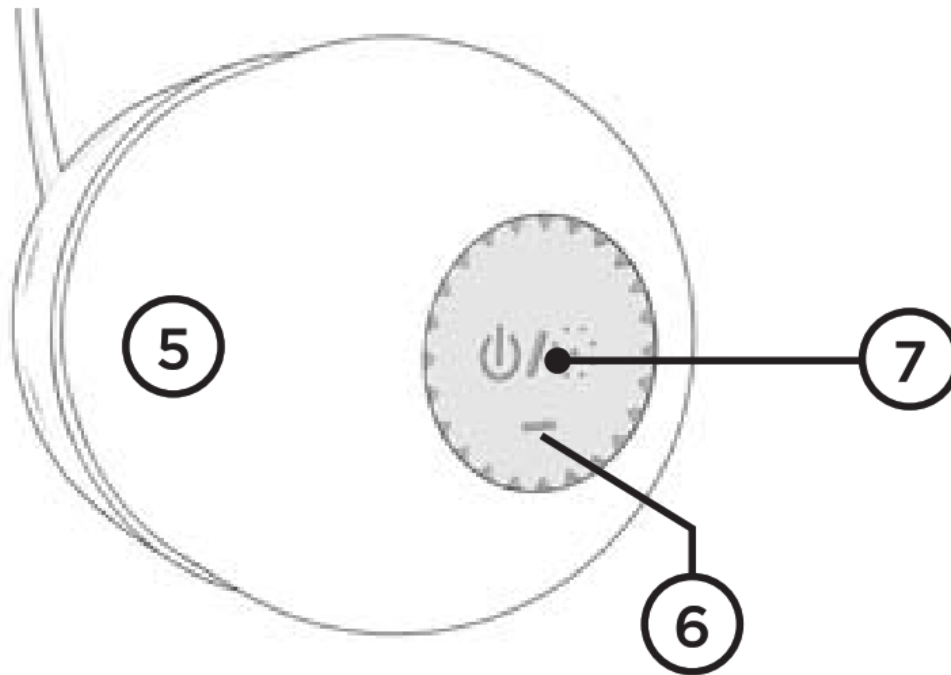

Charging



Fully Charged (approximately 1 hour)

- 5. Multicolor LED
- 6. Microphone
- 7. Multi-Function Button

Hold (3 Seconds)	Power On
Press	Pause/Resume.Answer/End Call
Double Press	Change LED
Hold (3 Seconds)	Effect Turn OFF
Hold (5 Seconds)	LED Power OFF
Double Press	Turn LED ON

PAIRING INSTRUCTIONS

HOW TO PAIR


1. Power on your speaker by holding the button for 3 seconds. The LED will flash BLUE to indicate that it is ready to pair.
2. Open the Bluetooth menu on your phone, tablet, or computer. Enable searching for nearby Bluetooth devices.
3. Select "HyperGear Go-Glo" to pair your speaker. 4. Once paired, you will hear a tone confirming the successful connection. The LED will begin cycling colors in Multi-Color Mode.

NOTE: Your speaker must remain within 33 feet (10 meters) of your device or the Bluetooth connection will be lost.

Your speaker will automatically pair to your phone, tablet, or computer the next time you turn your speaker on. If you wish to pair your speaker to a different phone, tablet, or computer, find your speaker in your device's Bluetooth menu and select "Forget This Device" or "Forget".

LED COLOR EFFECTS

Double-Press your speaker's button to change to the next LED color effect.

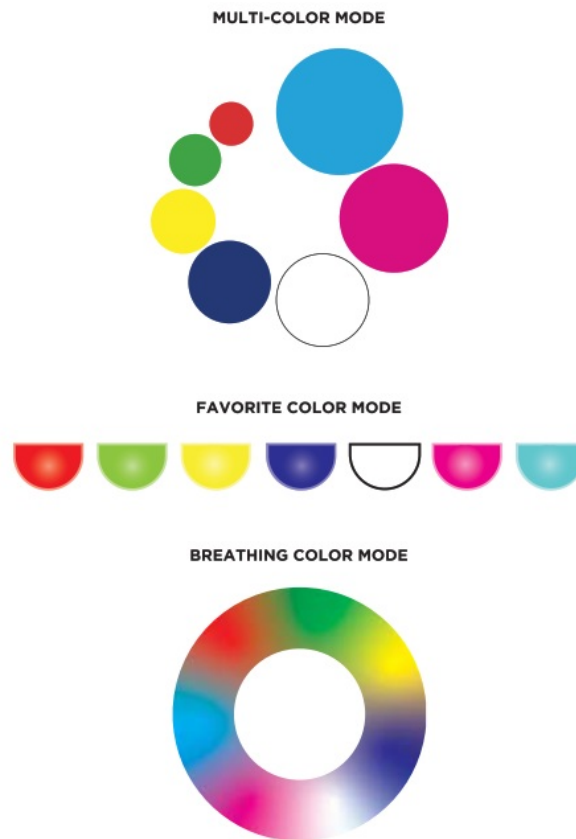

PARTY MODE INSTRUCTIONS

HOLD ON!

NOTE: You must pair your speakers together every time you want to use Dual-Pairing Party Mode. If one of your speakers is already paired to your phone, tablet, or computer, open your device's Bluetooth menu and disconnect the speaker by selecting "Forget This Device" or "Forget".

HOW TO DUAL-PAIR

1. Power on both speakers at the same time. They will both flash BLUE to indicate that they are both in pairing mode.
2. Choose ONE speaker to be your MAIN. Press your MAIN speaker's button once.
3. You will hear a tone confirming your MAIN speaker has linked to the secondary speaker. Both speakers' LEDs will synchronize and begin cycling colors in Multi-Color Mode.

NOTE: DO NOT press the button on the secondary speaker.

4. Open the Bluetooth menu on your phone, tablet, or computer. Enable searching for nearby Bluetooth devices.
5. Your MAIN speaker will appear in your Bluetooth menu as "HyperGear Go-Glo".
6. Select "HyperGear Go-Glo" to connect and pair. You will hear a tone from the MAIN speaker confirming the successful Party Mode connection.

PARTY MODE RULES

Your MAIN speaker will control the secondary speaker. Use your MAIN speaker's button to control your calls, music, and the LED effects of both dual-paired speakers. See Page 3 for controls.

PARTY FOULS

Do not press the button on the secondary speaker. Your MAIN speaker's button will control both dual-paired speakers. Your MAIN speaker must remain within 33 feet (10 meters) of your device. The secondary speaker

must also remain within 33 feet (10 meters) of your MAIN speaker.

IMPORTANT

Read all safety instructions and warnings prior to using this product. Improper use and failure to follow safety guidelines could result in damage, excess heat, toxic fumes, fire, explosion, electrical shock, or other hazards causing serious and/or fatal injury and/or property damage that is not the manufacturer's responsibility. The user is responsible for maintaining this product with care for maximum use.

1. Permanent hearing loss may occur if you listen at high volumes. Set the volume to a safe level.
2. Maintain volume levels that will allow you to hear sounds around you and be alerted to potentially hazardous situations.
3. The unit is not waterproof. Do not submerge or expose to corrosive materials. Do not clean with harsh chemicals, soaps, or detergents.
4. Recharge your speaker with the included Micro USB charging cable and an SW USB charger. More powerful chargers are not necessary for this unit and may damage/overheat the battery or cause a fire hazard.
5. Do not store in a depleted state. Battery cells may be damaged. Charge your unit at least once every 3 months even when not in use.
6. Do not store at extreme temperatures (below 40° F or above 90° F). Battery cells may be damaged.
7. Do not attempt to modify, disassemble, or repair this product.
8. Avoid excessive drops, bumps, and abrasions.
9. If the device has dents, punctures, tears, deformities, or corrosion, discontinue use and contact the manufacturer or dispose of in an appropriate method.
10. If you find this product rapidly increasing in temperature, emitting an odor, deformed, abraded, or demonstrating an abnormal phenomenon, discontinue use immediately.
11. Do not use in the vicinity of flammable liquids or gases, propane tanks, large engines, high-voltage devices, or heat sources such as radiators and ovens.
12. Disposal of the unit in the garbage is unlawful under state and federal environmental laws and regulations.



Contact: Info@rnyhypetgear.com to submit a warranty claim. Proof of purchase is required.



www.myhypergear.co

Documents / Resources

A small image of the HyperGear Go-Glo Light-Up LED Wireless Speaker, showing its circular shape and LED lights.	<p>HYPERGEAR Go-Glo Light-Up LED Wireless Speaker [pdf] User Manual 15716, 2AQ5C-15716, 2AQ5C15716, Go-Glo Light-Up LED Wireless Speaker, Light-Up LED Wireless Speaker, LED Wireless Speaker, Wireless Speaker, Speaker</p>
---	--