

HYPERKIN N64 Controller Adapter User Guide

Controller Adapter for N64° Controller QUICK START GUIDE Compatibility switch

Contents

- [1 Using the Adapter with Your Console](#)
- [2 Remapping your Button Inputs](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)

Using the Adapter with Your Console

The Controller Adapter allows you to switch between Console mode and PC/Mac® mode. Make sure that your anode is configured before plugging your adapter into a evince.

Console Mode for Nintendo Switch®

1. Make sure the compatibility switch on your adapter is set to CONSOLE Mode.
2. Plug in your controller for N64° into the adapter controller port.
3. Insert the USB end of the adapter into a free port on your dock.

Note: Controller inputs and functionality may vary depending on game compatibility. The Controller Adapter is not compatible with extension port accessories.

Remapping your Button Inputs

You can enable alternate button layouts by holding either the L button, R button, L and R buttons, C-Up button, C-Down button, C-Right button, or C-Left button on your controller as you insert your adapter into a USB ort on your dock. If you do not hold down any of the buttons, your button layout will be in the default layout.

- You can also change your inputs in your game's settings if your game allows it.
- The remapping function only works when plugging in the adapter. If you switch controllers via the controller port on the adapter, the button layout will not change.
- Unplugging the adapter from the dock, turning off Hour console, or your console going into Sleep mode we cause the button input remapping to revert to the default layout.

PC / Mac® Mode

1. Make sure the compatibility switch is set to PC Mode.
2. Plug in your controller for N64° into the adapter controller port.
3. Insert the USB end of the adapter into a free USB port on your PC or Mac®.
4. Make sure to configure your controller inputs via the game settings. Setup and functionality may vary depending on your device.

Note: You can also enable alternate button layouts by holding either the L button, R button, L and R buttons, C-Up button, C-Down button, C-Right button, or C-Left button on your controller as you insert your adapter into a USB port on your computer. The Controller Adapter is not compatible with extension port accessories. For troubleshooting, contact us at Support@Hyperkin.com.



Statement of Compliance with EU Directive

Hyperkin Inc., located at 1939 West Mission Blvd, Pomona, CA 91766, declares under our sole responsibility that the product, Controller Adapter for N64° Controller Compatible with Nintendo Switch®/PC/Mac®, is in compliance with the essential requirements and other relevant provisions of Low Voltage Directive (LVD) 2014/35/EU, RoHS Directive 2011/65/EU, and carries the CE marking.

The full Declaration of Conformity can be requested by emailing:


Email: compliance@hyperkin.com

Company Name: Hyperkin Inc.

Address: 1939 West Mission Blvd, Pomona, CA 91766

© 2020 Hyperkin Inc. Hyperkin® is a registered trademark of Hyperkin Inc. Nintendo Switch® and N64® are registered trademarks of Nintendo® of America. Mac® is a registered trademark of Apple Inc. This product is not designed, manufactured, sponsored, endorsed, or licensed by Nintendo® of America Inc. nor Apple Inc. in the United States and/or other countries. All rights reserved. Made in China.

Documents / Resources

<div><div><div>Controller Adapter for N64® Controller</div><div>QUICK START GUIDE</div></div><div><div>Compatibility switch</div><div></div></div><div><div>Using the Adapter with Your Console</div><div>The Controller Adapter allows you to switch between Console mode and PC/PS2 mode. Make sure that your mode is configured before plugging your adapter into a device.</div><div>Console Mode for Nintendo Switch®</div><div>1. Make sure the compatibility switch on your adapter is set to CONSOLE mode.</div><div>2. Plug your controller for N64® into the adapter controller port.</div><div>3. Insert the USB end of the adapter into a free port on your dock.</div><div>Note: Controller inputs and functionality may vary depending on game compatibility. The Controller Adapter is not compatible with extension port accessories.</div></div></div>	<div><div>HYPERKIN N64 Controller Adapter [pdf] User Guide</div><div>N64, N64 Controller Adapter, Controller Adapter, Adapter</div></div>
--	---

References

- [User Manual](#)