

HYPERKIN PS4 Wireless Controller Instructions

Home » HYPERKIN » HYPERKIN PS4 Wireless Controller Instructions



Contents

- 1 HYPERKIN PS4 Wireless
- Controller
- **2 Product Information**
- 3 Specifications
- **4 Product Usage Instructions**
- **5 Controller Buttons and Functions**
- **6 FAQ (Frequently Asked Questions)**
- 7 FCC Warning
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts



HYPERKIN PS4 Wireless Controller



Product Information

Specifications

- Bluetooth controller for PS4 hosts
- · Online distance of over 10MM
- · 6-axis functional sensor
- Capacitive touch function
- Built-in speaker
- Can be connected to 3.5MM headphones and microphones

Product Usage Instructions

Connecting the Controller

To connect the wireless controller to the PS4 host, follow these steps:

- 1. Ensure that the host is turned on and in pairing mode.
- 2. Press and hold the PS button on the controller to turn it on.
- 3. Once the controller is turned on, press the PS button again to initiate the pairing process.
- 4. The controller will automatically search for available hosts and establish a connection.

Charging the Controller

To charge the controller, follow these steps:

- 1. Connect the charging box of the controller to the host using the USB cable provided.
- 2. The host can also be awakened through Bluetooth.
- 3. Ensure that the host is turned on and connected to a power source.
- 4. Place the controller into the charging box, ensuring proper alignment.
- 5. The controller will start charging automatically.
- 6. Wait for the controller to fully charge before use.

Controller Buttons and Functions

The wireless controller features various buttons and functions:

- Share, Option, L1, L2, L3, R1, R2, and R3 buttons are command keys in the game.
- The RGB light on the handle serves as the channel indicator, with different colors assigned to different users on the host.

FAQ (Frequently Asked Questions)

Q: Can I connect the controller to other devices besides the PS4 host?

A: No, this Bluetooth controller is specifically designed for use with PS4 hosts and may not be compatible with other devices.

Q: How far can the wireless controller be used from the PS4 host?

A: The wireless controller has an online distance of over 10MM, providing a reliable connection within a reasonable range from the host.

Q: Can I use the controller while it is charging?

A: Yes, you can use the controller while it is charging. However, it is recommended to fully charge the controller before extended gaming sessions.

Q: How do I know when the controller is fully charged?

A: The controller's charging indicator light will turn off once it is fully charged. You can also check the battery level on the PS4 host's interface

This is a Bluetooth controller applied to PS4 hosts. The Bluetooth controller has an online distance of over 10MM, is equipped with a 6-axis functional sensor, capacitive touch function, and built-in speaker, and can be connected to 3.5MM headphones and microphones. The charging box of the controller can be connected to the host through a USB cable, and the host can also be awakened through Bluetooth. After long pressing the PS button on the controller to turn it on, a short press to connect to the host. The Share, Option, L1, L2, L3, R1, R2, R3, and other buttons are command keys in the game. The RGB light on the handle is the channel indicator light, which is distinguished by different colors for different users on the host.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance 0cm between the radiator and your body.

Documents / Resources

Market and the second and the second

<u>HYPERKIN PS4 Wireless Controller</u> [pdf] Instructions PS4 Wireless Controller, PS4, Wireless Controller, Controller

References

• User Manual

Manuals+,