




HYPERLITE BWSTL-R4-5-D LED String Work Light Instruction Manual

[Home](#) » [HYPERLITE](#) » HYPERLITE BWSTL-R4-5-D LED String Work Light Instruction Manual 

Contents

- [1 HYPERLITE BWSTL-R4-5-D LED String Work Light](#)
- [2 DIMENSION](#)
- [3 FEATURES & SPECIFICATIONS](#)
- [4 PACKAGING INFORMATION](#)
- [5 CONNECTING STRING LIGHT](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)




HYPERLITE BWSTL-R4-5-D LED String Work Light



A good & brand new product. Congrats! Enjoy brighter life now. Feel free to contact us

- Email: service@hi-hyperlite.com
- Toll-free number: +1(855) 688 7879

DIMENSION

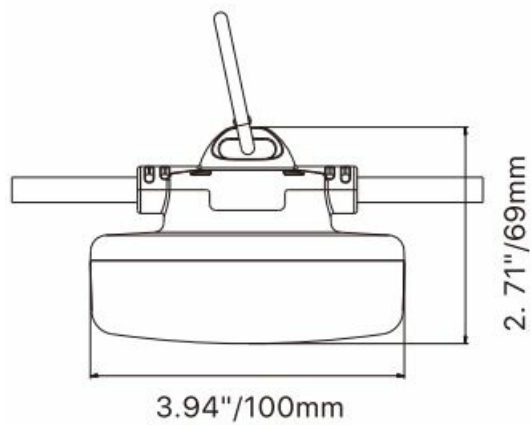


FEATURES & SPECIFICATIONS

Performance Data		BWSTL-R4-5-D	BWSTL-R4-10-D
General	Lumens	8125 lm	16250 lm
	Efficacy	125lm/w	
	CCT	5000K	
	CRI	≥80	
	Color finish	Yellow	
Electrical	Power	65W	130W
	Input voltage	AC 120V	
Physical & Listing	Length	50 ft	100 ft
	Listing	ETL	
	IP rating	IP 65	
	Warranty	3 Years	

PACKAGING INFORMATION

Model	Wattage	Qty/Ctn	Net Weight	Gross Weight	CTN Size
BWSTL-R4-5-D	65W	1	3.5 ± 1lbs	4.6 ± 1lbs	9.3"*9.3"*7.5"
BWSTL-R4-10-D	130W	1	7.5 ± 1lbs	8.8 ± 1lbs	16.6"*10.2"*7.5"

CONNECTING STRING LIGHT

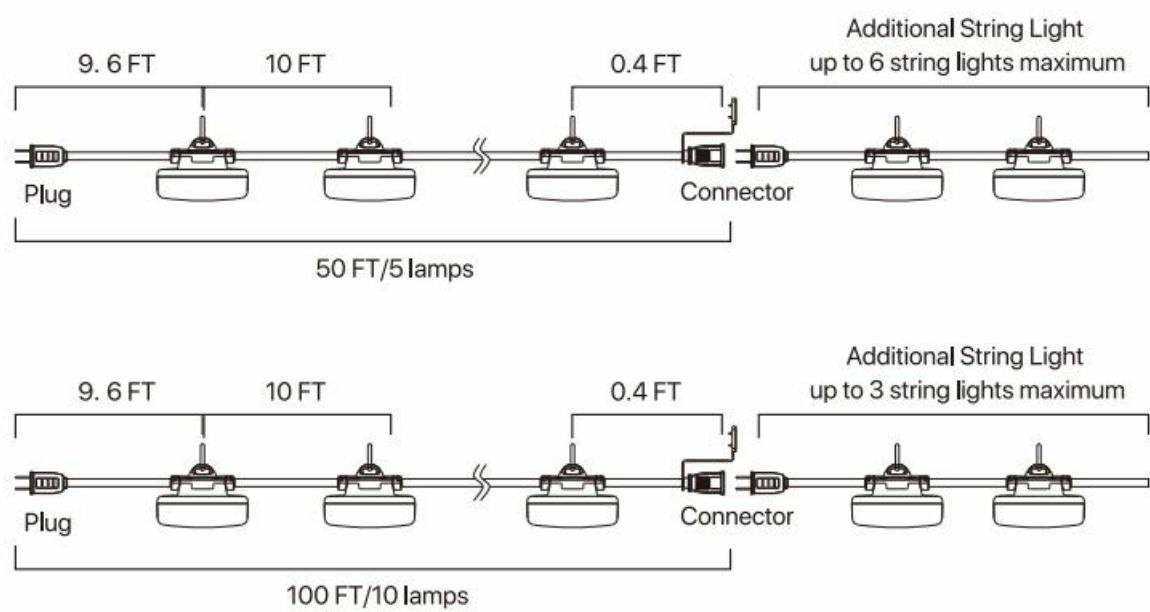

Note: Total connection do not exceed 300FT or 30 Lamps

NOTE!

- This equipment is only for professional installation. Non-professional personnel shall not remove or install the equipment.
- To avoid damage, falling, electric shock or fire, please do not modify the lamp or replace accessories without


confirming with the supplier.

- Maintenance/installation and replacement the lamps, please confirm to cut off the power supply, and the lamps have set up a cooling. Please make sure the lamps properly installed before processing power.
- Ensure an accurate and reliable connection.
- Ensure that the product around the vent, of the lamp does not violate any fire prevention regulations when using.

Carefully read these instructions before installing product and keep it for future reference. If you do not understand these instructions, before starting any work, contact service@hi-hyperlite.com or (855) 68 8-7879.

- **Web:** www.hi-hyperlite.com
 - **Email:** service@hi-hyperlite.com
 - **Tel:** +1(855) 688 7879
-

Documents / Resources

	HYPERLITE BWSTL-R4-5-D LED String Work Light [pdf] Instruction Manual BWSTL-R4-5-D LED String Work Light, BWSTL-R4-5-D, LED String Work Light, String Work Light, Work Light, Light
---	---

References

- [User Manual](#)