

HYPERLITE CES-LS-VN-30W MARS Series LED Flood Light User Manual

Home » HYPERLITE » HYPERLITE CES-LS-VN-30W MARS Series LED Flood Light User Manual







Contents

- 1 FEATURES & SPECIFICATIONS
- 2 DIMENSIONS
- 3 INSTALLATION
- **INSTRUCTIONS**
- 4 MORE PRODUCTS...
- **5 Documents / Resources**
 - **5.1 References**
- **6 Related Posts**

FEATURES & SPECIFICATIONS








The MARS series LED floodlight is designd to provide a cost-effective, energy-effificient solution for illuminating building facades, sign lighting, wall washing building exteriors, landscape lighting. MARS luminaires deliver a uniform, wide flood distribution.


Model	CES-LS-VN-30W	CES-LS-VN-50W	CES-LS-VN-70W	CES-LS-VN-100 W
Lumens	3300LM	6000LM	8400LM	12000LM
Efficacy	110LM/W			
Model	CES-LS-VN-150W	CES-LS-VN-200W	CES-LS-VN-240W	
Lumens	18000LM	24000LM	28800LM	
Efficacy	120LM/W			
ССТ	3000K 4000K,5000K			
CRI	>70			
Beam Angle	120°			
L70@24°C	>60,000hours			
Mounting	(1/2")Knuckle, Trunnion, U-bracket, Slipfitter			
Color	Bronze			
Input Voltage	120Vac			
Power factor	>0.9			
Operating Temperature	-86°F to 122°F			
Listings	cUL			
IP Rating	IP 65, Suitable for wet location			
Warranty	24 months			


DIMENSIONS

Trunnion Mount


U-bracket Mount

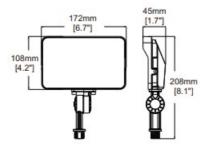


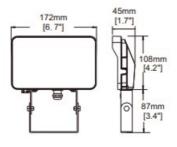


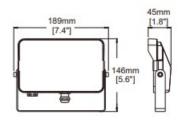


CES-LS-VN-30W

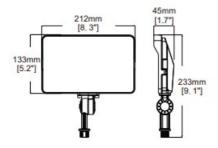


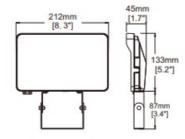


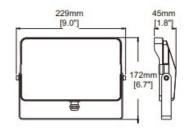

CES-LS-VN-50W

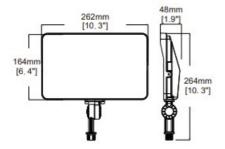

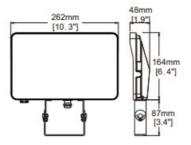

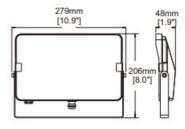

CES-LS-VN-70W

Knuckle Mount Trunnion Mount U-bracket Mount 307mm [12, 1"] 307mm [12, 1*] 211mm [8, 3"] 211mm [8, 3"] CES-LS-VN-100W Slipfitter Mount 351mm [13.8"] 351mm [13.8"] CES-LS-VN-150W 431mm [17.0"] [17.0"] [17.0"]

CES-LS-VN-200W/240W

INSTALLATION INSTRUCTIONS

READ THOROUGHLY BEFORE INSTALATION

WARNING! FIXTURES MUST BE GROUNDED and installed in accordance with the National Electrical Code and all local codes. Failure to do so may increase the RISK OF PERSONAL INJURY, PROPERTY DAMAGE, FIRE AND DEATH.

WARNING! Dangerous voltage exist within the unit and all precautions usually observed in handling high voltage equipment should be observed when replacing light engine or otherwise servicing luminares. Disregarding this warning could result in electrical shock and possible injury to the individual installing or servicing this equipment. Installation, service and maintenance of luminaires should be done by a qualifified licensed electrician.

CAUTION!

To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards please read all warnings and instructions included with and on the fixture box and all fixture labels.





- This equipment is only for professional installation. Non-professional personnel shall not remove or install the equipment.
- To avoid damage,falling,electric shock or fire, please do not modify the lamp or replace accessories without confirming with the supplier.
- Maintenance/installation and replacement the lamps, please confirm to cut off the power supply, and the lamps have set up a cooling. Please make sure the lamps properly installed before processing power.
- Ensure the accurate and reliable connection.
- Ensure that the product around the vent, the lamp cannot violate any fire prevention regulations when using.

Carefully read these instructions before installing product and keep it for future reference. If you do not understand these instructions, before starting any work, contact service@hi-hyperlite.com or (855) 688-7879.


1/2 Knuckle Mount (Only available on 30w, 50w, 70w, 100w light)

- 1. Open junction box and run wiring into box.
- 2. Thread light body onto junction box using the 1/2-14 threads on knuckle
- 3. Connect wiring.
- 4. Adjust light head to desired angle and tighten Hexagon screw.

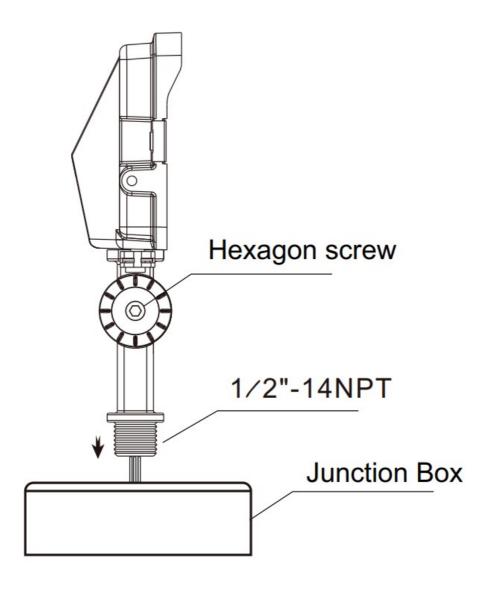

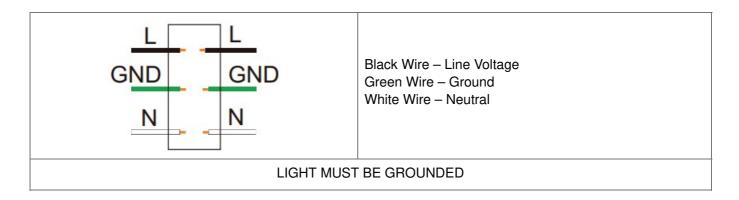


1/2 Wall Mount (Only glass lenses have this installation)

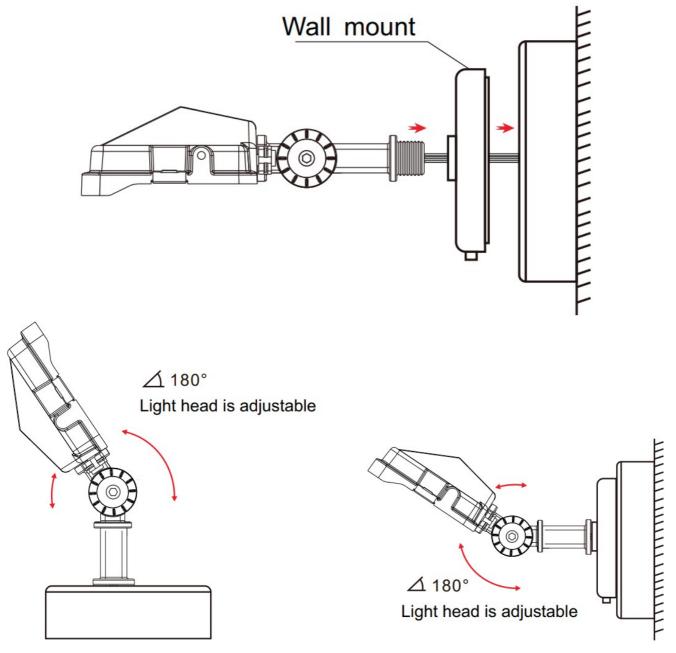


Trunnion Mount


- 1. Loosen light head adjustment screws with hex key.
- 2. Securely attach light to wall and connect wiring.
- 3. Connect wiring.
- 4. Rotate light head to desired angle and tighten adjustment screws.

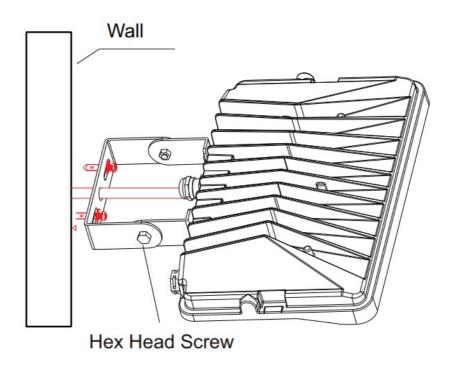





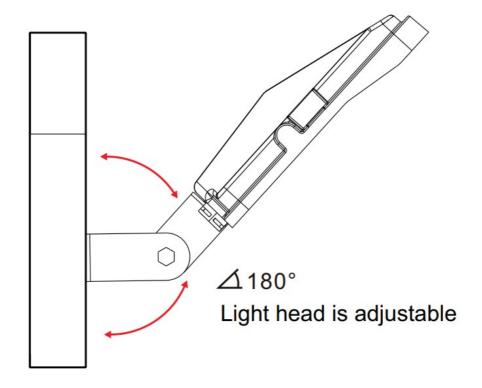


- 1. Loosen light head adjustment screws with hex key.
- 2. Securely attach light to wall and connect wiring.
- 3. Adjust light head to desired angle and tighten Hexagon screw.

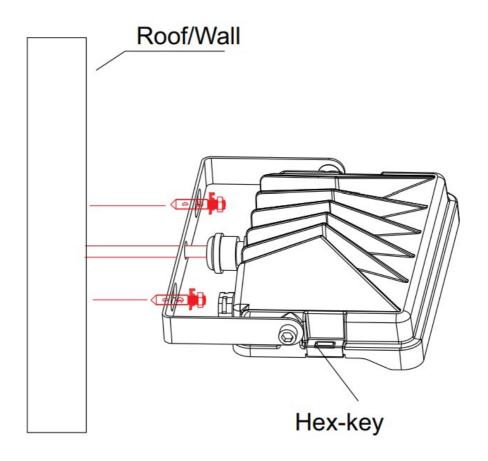


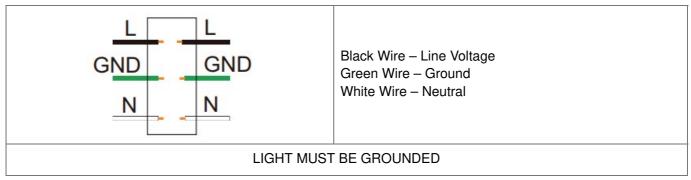

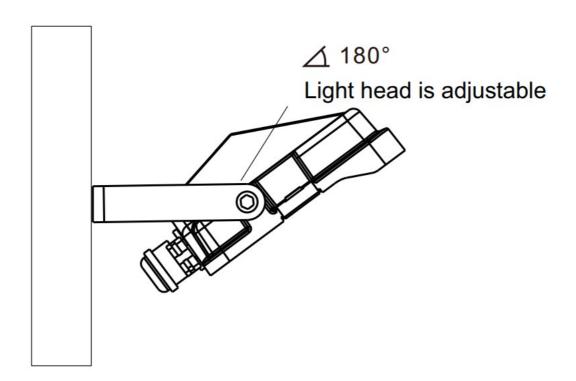


- 1. Attach the slipfitter mounting kit onto the light head.
- 2. Rotate light head to desired angle and tighten adjustment screw.
- 3. Connect wiring.
- 4. Securely attach light to pole/post. The maximum pole/post diameter is 2.36 in.

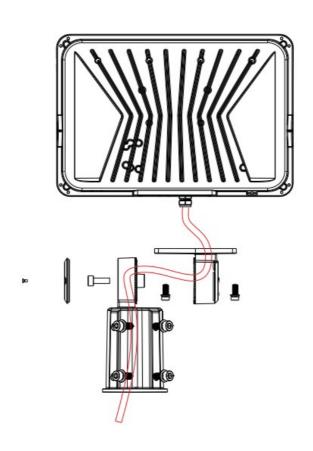

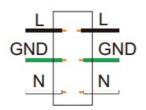

Black Wire – Line Voltage Green Wire – Ground White Wire – Neutral

LIGHT MUST BE GROUNDED

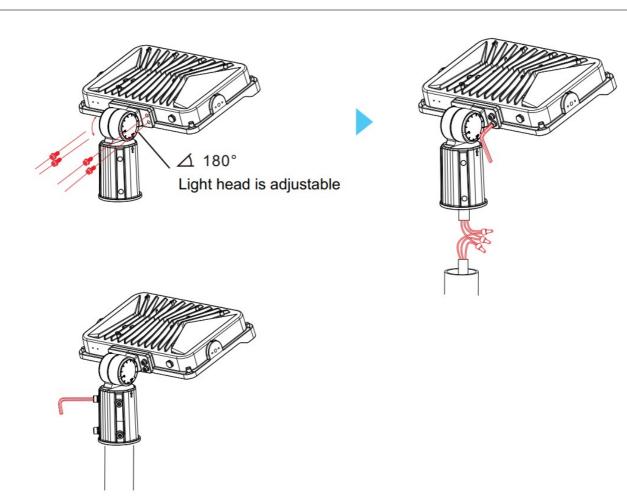

MORE PRODUCTS...

• LED High Bay Light



Hero Black Series
• LED Flood Light



Hero White Series



Tale Series



Will Series



Eyes Series

• Area Light & Canopy Garage Light



Guarder Series



Max Series



Ares Series



Vega Series

• LED Grow Light



Groplanner O Series

• LED Wall Pack Light



Wall. E Series



Moon Series

• LED Vapor Tight Light



Capsule Series

• Temporary Work Light



Hive Series

• LED Recessed Downlight



Halo Series



Dove Series



Use hyperlite LED flood light, enjoy brighter life now If you need more information about our lights, please email us or call us

Email: <u>service@hi-hyperlite.com</u> Toll-free number: +1(855) 688 7879



HYPERLITE CES-LS-VN-30W MARS Series LED Flood Light [pdf] User Manual CES-LS-VN-30W MARS Series LED Flood Light, CES-LS-VN-30W, MARS Series LED Flood Light, LED Flood Light, Flood Light, Light

References

- W Hyperlite Wake
- H Hyperlite LED | Best Shop Lights | Indoor & Outdoor LED Lighting
- User Manual

Manuals+, Privacy Policy