

HYPERVOLT Go 2 Portable Percussion Massager Instruction Manual

Home » Hypervolt » HYPERVOLT Go 2 Portable Percussion Massager Instruction Manual



Contents

- 1 HYPERVOLT Go 2 Portable Percussion
- Massager
- **2 IMPORTANT SAFETY INSTRUCTIONS**
- **3 SPECIFICATIONS**
- **4 WARRANTY**
- 5 Documents / Resources
 - **5.1 References**
- **6 Related Posts**

Hypervolt

HYPERVOLT Go 2 Portable Percussion Massager



IMPORTANT SAFETY INSTRUCTIONS

DANGER

To reduce the risk of electric shock:

- Always unplug this device from the electrical outlet immediately after using and before cleaning.
- Do not reach for a device that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store device where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.

WARNING

- A device should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- This device can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Use this device only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this device if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has gotten wet. Return the device to a service center for examination and repair.
 Do not carry this device by supply cord or use cord as a handle.
- Keep the cord away from heated surfaces.
- Never operate the device with the air openings blocked. Keep the air openings free of lint, hair, or any substance which may impair the flow of air.

- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) devices are being used or where oxygen is being administered.
- Never operate on a soft surface such as a bed or couch where the air openings may be blocked.
- Do not use device in close proximity to loose clothing or jewelry.
- Keep long hair away from device while in use.
- Cleaning and user maintenance shall not be done by children without supervision.
- Do not remove screws or attempt to disassemble.
- Do not operate continuously for more than one hour. After one hour use, allow device to rest for 30 minutes before re-using.
- Unplug the device after charging or prior to use.
- Use device only according to Operating Instructions.
- When using the Hypervolt Go 2 use only on dry, clean surfaces of the body by lightly pressing and moving across the body for approximately sixty(60) seconds per region. The Hypervolt Go 2 should only be used on soft tissue areas of the body and should not be used on any hard or bony areas of the body, including the head. Please immediately stop use of the Hypervolt Go 2 upon experiencing any pain or discomfort, apart from light muscle soreness. Bruising can occur from use of the Hypervolt Go 2, regardless of the pressure setting, and if bruising does occur you should not use the Hypervolt Go 2 on the bruised area until the bruise is fully healed. Use of the Hypervolt Go 2 should also be avoided on all bruises, contusions, rashes or irritated or injured areas of the skin until they are fully healed. When using the Hypervolt Go 2 be sure to keep fingers, toes, hair, and other body parts away from the back of the attachment head to avoid pinching or hair entanglement. The Hypervolt Go 2 should only be charged with the double insulated, 18VDC Hyperice charger (model number MX24Z2-1801000) that was supplied with the device. Do not charge the Hypervolt Go 2 overnight or leave the Hypervolt Go 2 unattended when charging or in use. Please do not use the Hypervolt Go 2, or any percussion device without first obtaining approval from your
 - Please do not use the Hypervolt Go 2, or any percussion device without first obtaining approval from your physician if any of the following apply:
- Pregnancy, diabetes with complications such as neuropathy or retinal damage, wear of pacemakers, recent surgery or injury, epilepsy or migraines, herniated disks, spondylolisthesis, spondylolysis, or spondylosis, recent joint replacements or IUD, metal pins or plates or any concerns about your physical health. Frail individuals and children should be accompanied by an adult when using any percussion or vibration device. These contraindications do not mean that you are not able to use a percussion or vibration device but we advise that before doing so you consult your physician. Ongoing research is being done on the effects of percussion massage for specific medical disorders that may result in the shortening of the list of contraindications as shown above.

The Hypervolt Go 2 contains a battery that must be complied with safely at an appropriate e-waste disposal or recycling facility.

CAUTION

The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 100° C or incinerate. Dispose of used battery promptly. Keep away from children. Do not disassemble and do noSAt dispose of in fire.

SAVE THESE INSTRUCTIONS

The Hypervolt Go 2 is a handheld percussion massage device that delivers targeted pulses of pressure to care for muscles, relieve tension, provide a relaxing massage, accelerate warmup and recovery, and help maintain

flexibility and range of motion.

Operating

Press down the power/speed button on the back of the device. Hold for two seconds until the battery level indicator (LED band) illuminates, then release. Your Hypervolt Go 2 is now ready for use. Choose your desired speed (1-3) by pressing the power/speed button once per speed. The white lights on the back will indicate speed setting. To power off, simply hold the power/speed button down for two seconds.

Changing head attachments

Only change attachments after speed setting is turned to off and head attachment stopped moving. To change head attachments, pull the existing head attachment straight out to remove and insert the desired head directly into the opening while pushing firmly. For the Forkhead attachment align the tab on the fork with the groove on the opening and push firmly.


Charging

Fully charge battery for up to four hours before first use. To charge, connect the DC end of the supplied 18V charger to the charging port on the bottom of the handle and plug the charger into a wall outlet. The LED light band will pulsate to show battery level and indicate active charging. The LED light band colors correspond to the charge level ranging from red (low) to green (fully charged). Full charge is indicated when the LED band remains green and fully illuminated. The battery may be recharged at any time and at any battery level. It is not recommended to fully deplete the battery to the red LED level. The average runtime is 2+ hours depending on speed level and pressure applied during use. It is recommended to turn the device OFF while the it is not in use or during storage and travel.

Cleaning and storage

Make sure the power is OFF and the battery charger is not attached. Use a damp, clean cloth and gently wipe your Hypervolt Go 2. Store in a clean, cool place, out of direct sunlight, when not in use.

SPECIFICATIONS

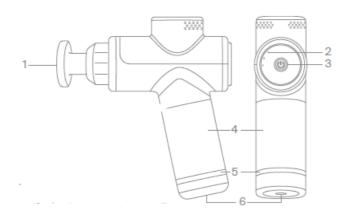

- 1. Interchangeable head attachments (2)
- 2. Speed indicators (3)
- 3. ON / OFF power button and speed setting button
- 4. Handle
- 5. Battery level indicator (LED band)
- 6. Charging port
- AC-DC Charger: 100-240V 50/60Hz 0.7A 18.0V1.0A 18.0 W Rechargeable lithium ion battery 2550mAh

• Frequency: Level 1 – 2200/36 Hz, Level 2 – 2750/45 Hz,

Level 3 – 3200/53 Hz
Weight: 1.5 lbs/0.68 kg

Designed in USA. Assembled in China.

WARRANTY

If within two years from the date of purchase, this device fails due to a defect in material or workmanship, Hyperice, Inc. will repair or replace the device, or necessary components, free of charge. This warranty excludes:

- damage caused by accident, abuse, mishandling, or transport;
- · devices subjected to unauthorized repair;
- devices not used in accordance with Hyperice care instructions;
- · damage exceeding the cost of the device;
- deterioration of the delivered device resulting from abnormal storage and/or safeguarding conditions on the client's premises, and
- failure to provide the dated proof of purchase.

 Some states and countries do not allow a limitation of damages, so the foregoing limitation may not apply to you. This warranty guarantees specific legal rights, and but other rights may vary from country to country and from state to state. This warranty service is available through the operating policies and procedures of Hyperice, Inc., and all Hyperice international distributors. If you are a client, please contact the appropriate Hyperice business entity, dealer, or retailer, from whom you directly purchased the device for warranty and return authorization procedures. This warranty is initiated and executed by Hyperice, Inc.

Documents / Resources

Hypervolt Go 2

El Cypoling Individual Ri Ribas Grapia

El Cypoling Individual Ri Ribas Grapia

El Commonwell of the Commonwell Ribas Grapia

El Commonwell of Commonwell Commonwell Ribas

El Commonwell of Commonwell of Commonwell Ribas

El Commonwell of Commonwell of Commonwell Ribas

El Commonwell of Commonwell of Commonwell Ribas

El Commonwell of El Commonwell of Commonwell Ribas

El Commonwell of El Commonwell of El Commonwell

El Commonwell of El Commonwell

El Commonwell of El Commonwell

HYPERVOLT Go 2 Portable Percussion Massager [pdf] Instruction Manual Go 2 Portable Percussion Massager, Go 2, Portable Percussion Massager

References

"
 hyperice.com

Manuals+.