



HyperX CP001WA Clutch Wireless Gaming Controller User Guide

[Home](#) » [HYPERX](#) » HyperX CP001WA Clutch Wireless Gaming Controller User Guide 

HyperX CP001WA Clutch Wireless Gaming Controller
User Guide

 


CP001WA Clutch Wireless Gaming Controller
User Guide

Contents


- [1 Overview](#)
- [2 Setup](#)
- [3 Pairing and Connecting](#)
- [4 Usage](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Overview

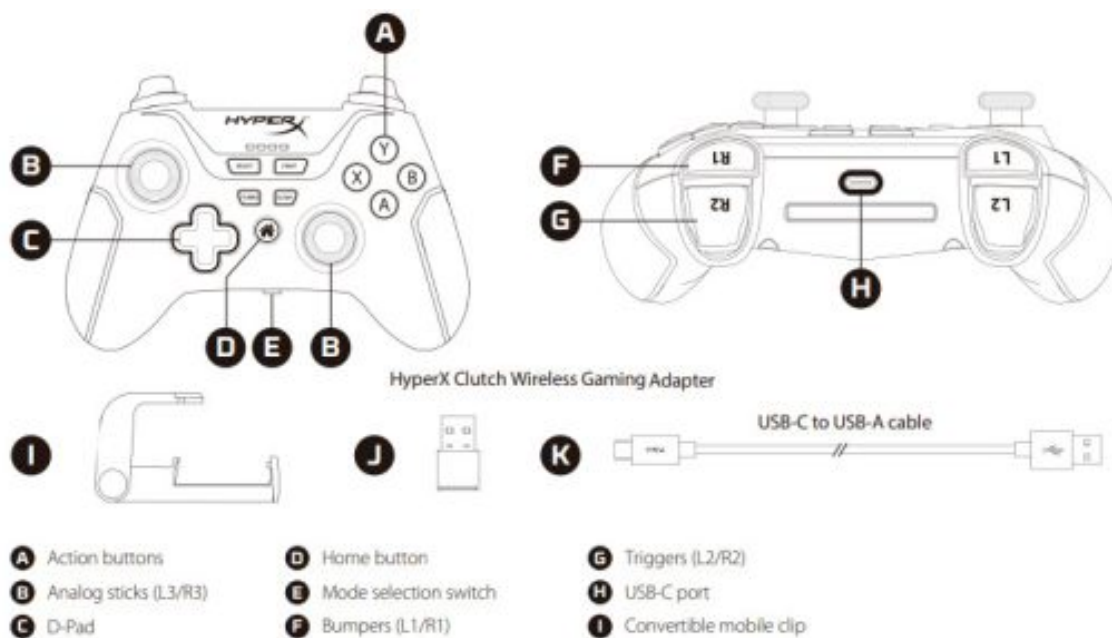


Setup

 Charging

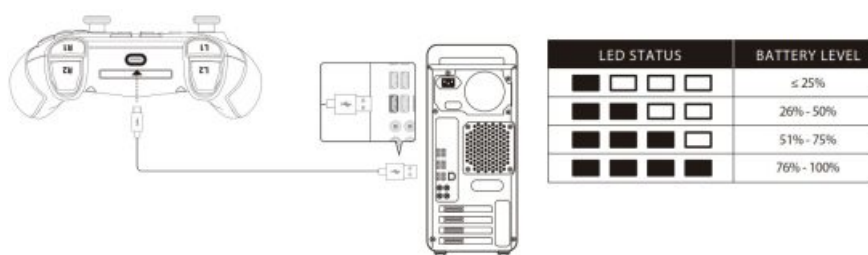

It is recommended to fully charge the controller before first use.

 Mode Selection

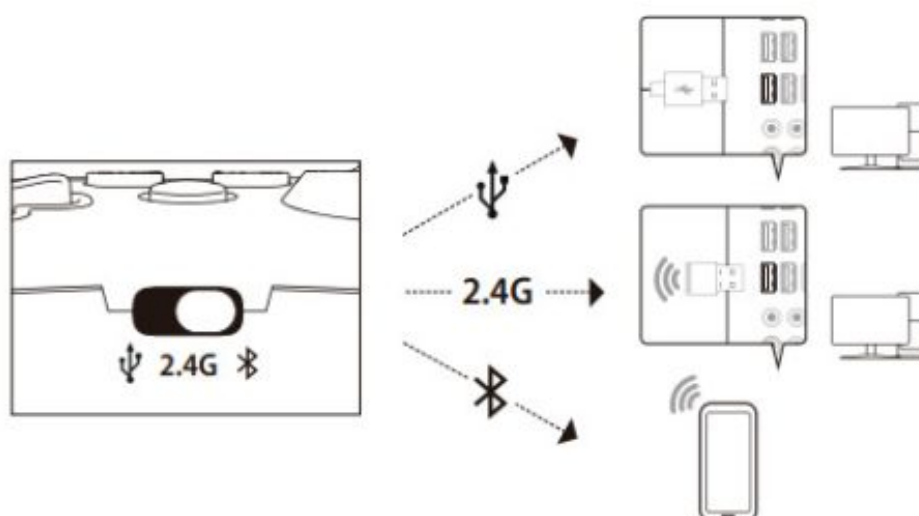

Pairing and Connecting

2.4G

1. Set the mode selection switch to 2.4G.
2. Connect the 2.4GHz wireless adapter to the PC.
3. Tap the Home button. The controller will power on and attempt to connect to the 2.4GHz wireless adapter.

Bluetooth

1. Set the mode selection switch to Bluetooth.
2. Press and hold the Home button for 6 seconds until the LEDs rapidly scroll to indicate pairing mode.
3. On your Bluetooth-enabled device, search and connect to “HyperX Clutch.”

 
Usage

Power – 2.4G or Bluetooth Mode

Press the Home button to power the controller. The controller will attempt to connect to your device. The controller will automatically shut off after 5 minutes of inactivity.


Handheld Mode

Attach the mobile clip and insert a phone.

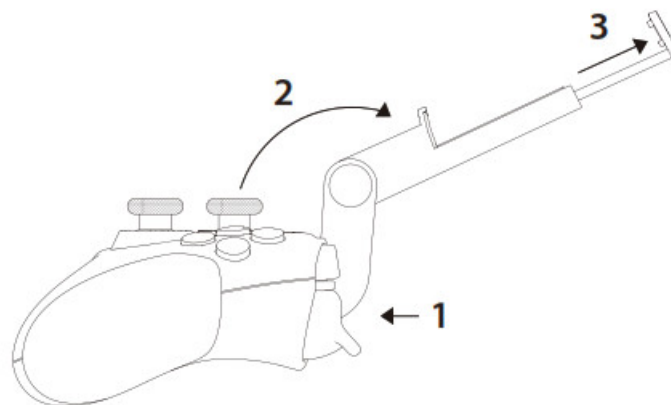

Tabletop Mode

 
Fold the clip to use as a phone or tablet stand.

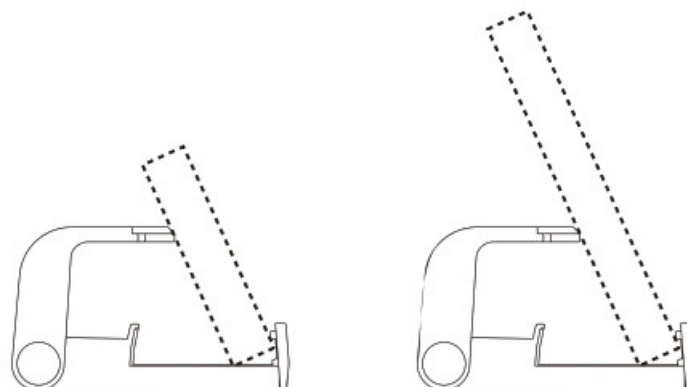

Questions or Setup Issues?

Contact the HyperX Support Team at: <http://www.hyperxgaming.com/support>

Documents / Resources

	<p>HyperX CP001WA Clutch Wireless Gaming Controller [pdf] User Guide CP001WA, B94-CP001WA, B94CP001WA, CP001WA Clutch Wireless Gaming Controller, Clutch Wireless Gaming Controller</p>
---	---

References

-  [HyperX | High Quality Gaming Gear](#)