



HX-HSCSC-BK HyperX Cloud Stinger Core Headset User Manual

[Home](#) » [HYPERX](#) » HX-HSCSC-BK HyperX Cloud Stinger Core Headset User Manual 

HX-HSCSC-BK HyperX Cloud Stinger Core Headset User Manual

 


Contents

- [1 Overview](#)
- [2 Headset Specifications](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

Overview

- A. Headband adjustment slider
- B. Rotating noise cancellation mic
- C. In-line audio control

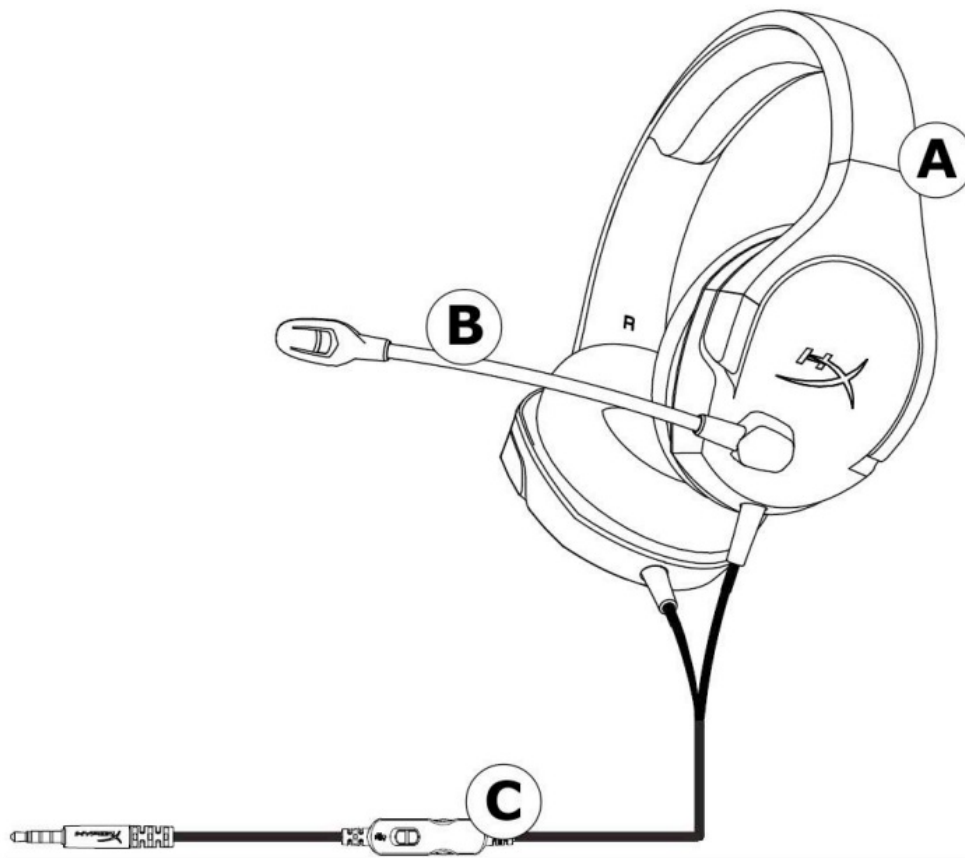


In-line audio control operation

The in-line audio control contains a volume wheel to adjust the headphone output volume and a microphone mute slider to mute the microphone.

To increase the headset volume, rotate the volume wheel clockwise (towards the + sign). To reduce the volume, rotate the volume wheel anticlockwise (towards the – sign).

 To mute the microphone, slide the microphone mute button to the down position. To activate the microphone, slide the microphone mute button to the up position.

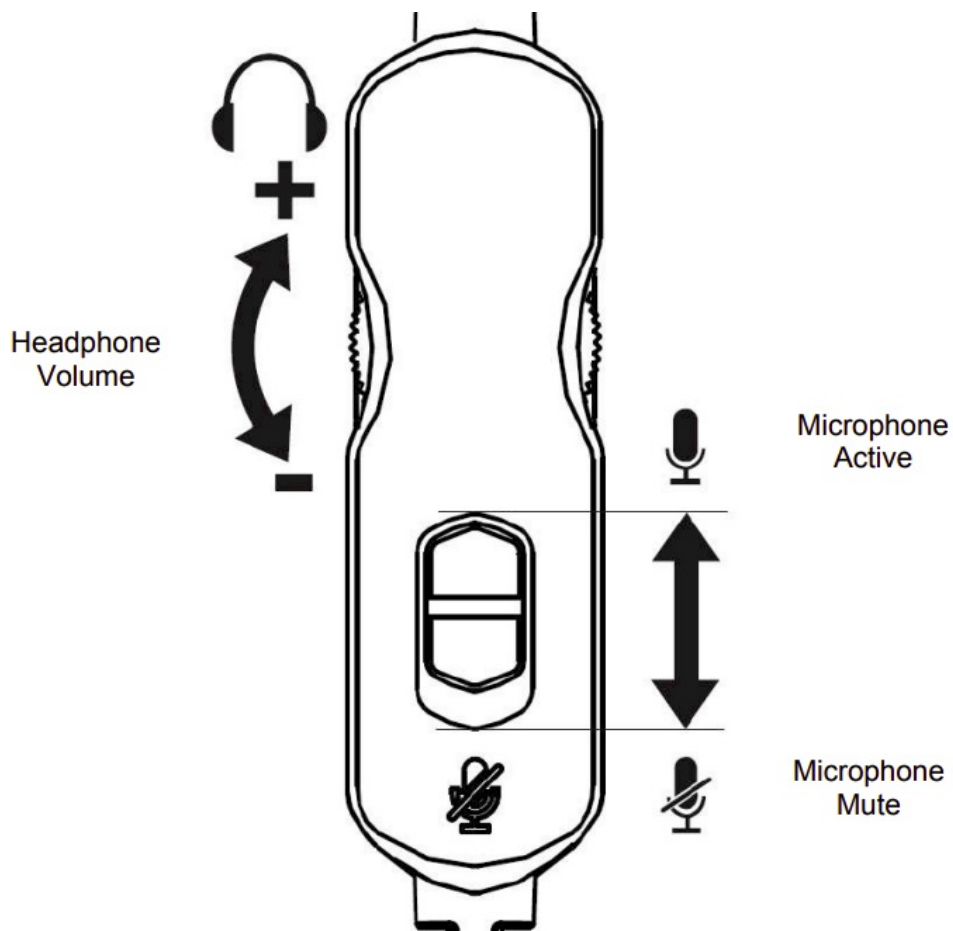


Usage (PS4™ & PS4™ Pro)

To use the headset with PlayStation™ 4 (PS4™), connect the 3.5mm plug on the headset directly to the PS4™ game controller and follow these steps:

1. Turn on your PS4™ game console.
2. Navigate to the 'Settings' menu and select it.
3. Highlight the 'Devices' menu option and select it.
4. Scroll down to 'Audio Devices' and select it.
5. Choose 'Output to Headphones' and select 'All Audio'.

 
Using with PS4™

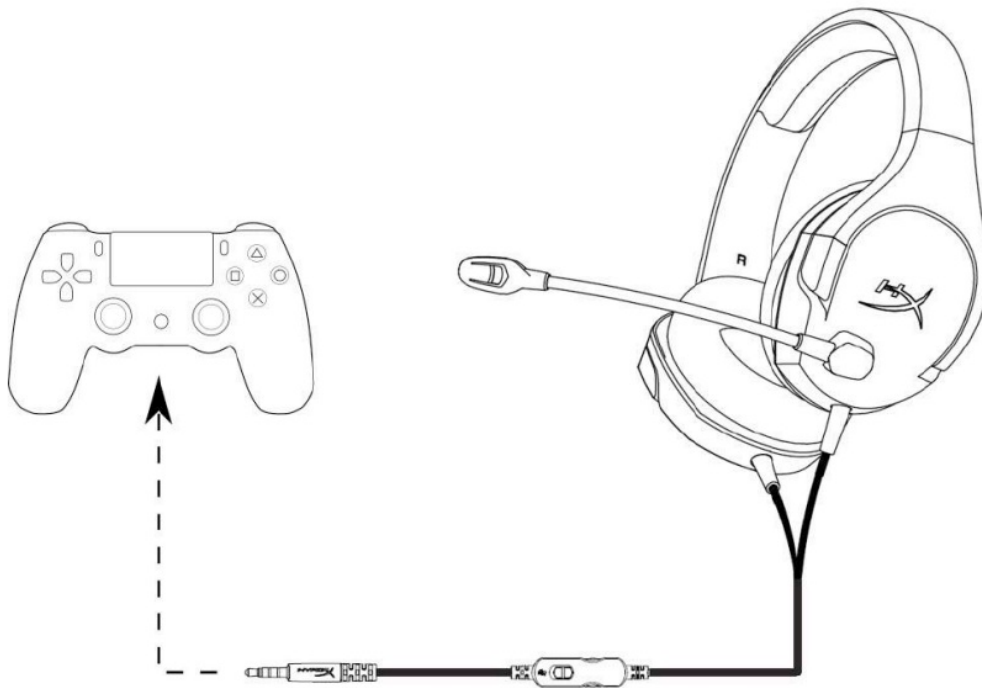

Usage (Xbox One™)

To use the headset with Xbox One™, connect the 3.5mm plug on the headset directly to the 3.5mm jack on the Xbox™ One controller*

 If your Xbox One™ controller does not have a 3.5mm jack, you will need the Xbox One™ Stereo Headset adapter (sold separately) that plugs into the Xbox One™ controller (pictured below).

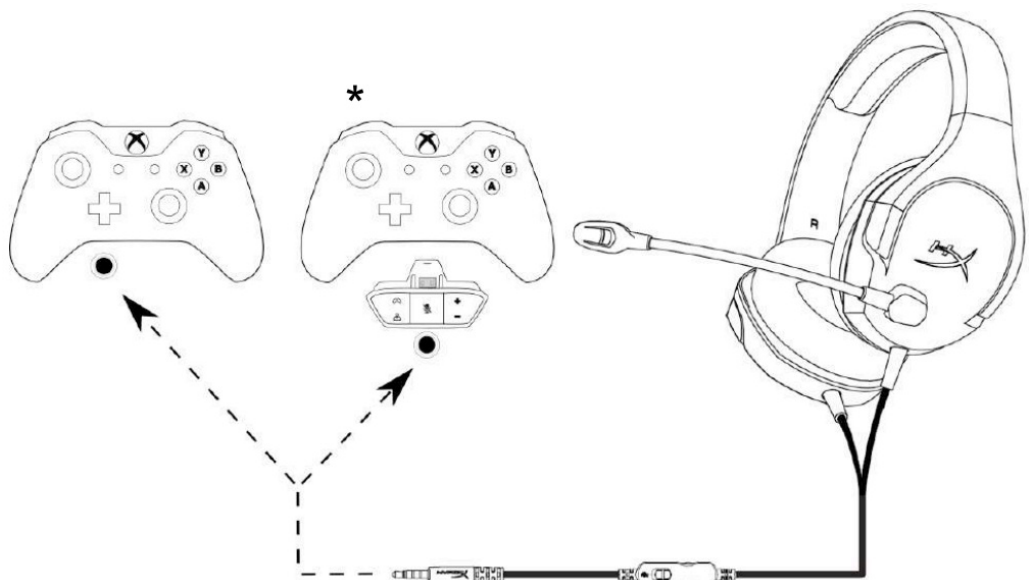


Using with Xbox One™

Usage (Nintendo Switch™)

To use the headset with Nintendo Switch™, connect the 3.5mm plug on the headset directly to the 3.5mm jack on the Nintendo Switch™.

 
Using with Nintendo Switch™

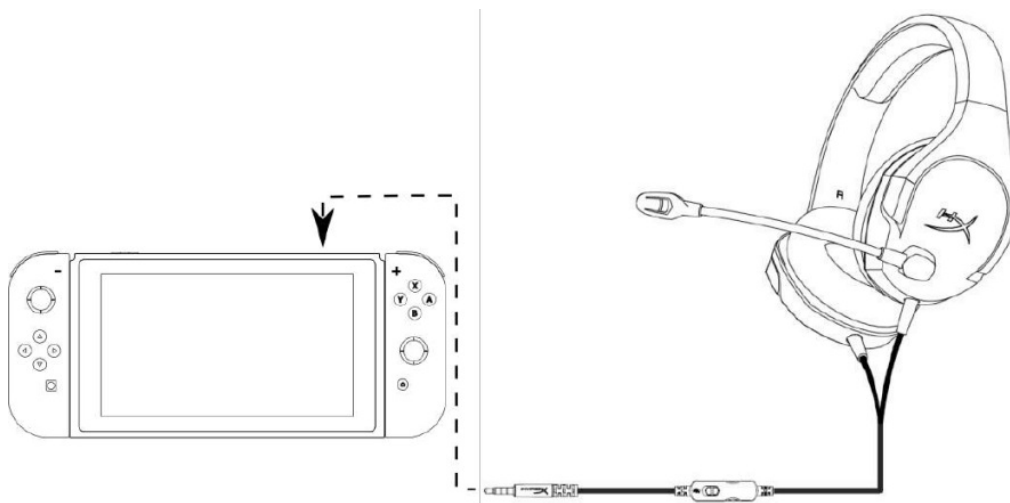

Usage (mobile device)

To use the headset with a mobile device (or other device) with a headset jack (4 pole CTIA), connect the 3.5mm plug directly into the headset jack on your device.

 Using with mobile device (phone, tablet or notebook)

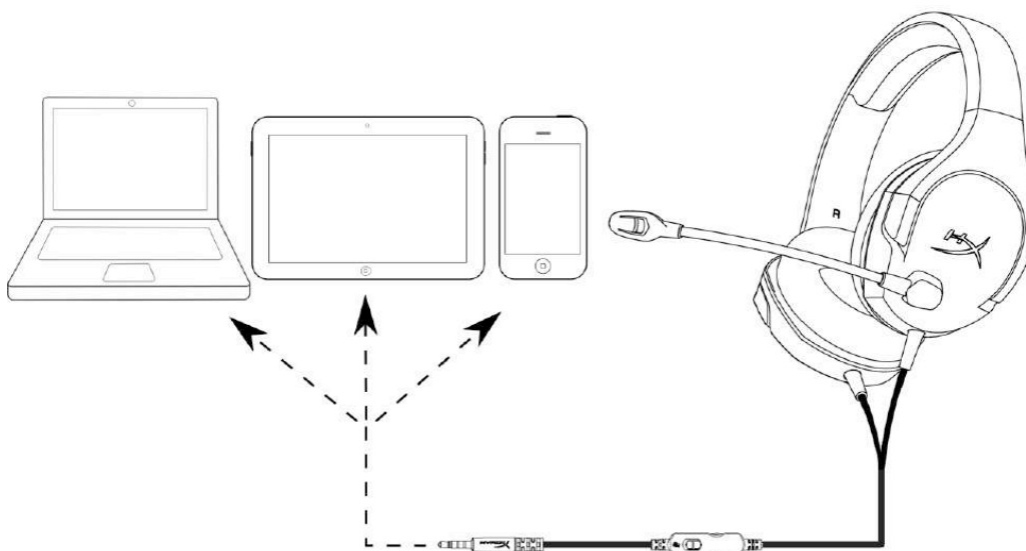

Headset Specifications

Headphone


- **Driver:** Dynamic, 40mm with neodymium magnets
- **Type:** Circumaural, closed back
- **Frequency response:** 20Hz-20,000Hz
- **Impedance:** 16 Ω
- **Sound pressure level:** 99dB SPL/mW at 1kHz
- **THD:** < 2%
- **Weight:** 215g
- **Cable length and type:** Headset (1.3m)
- **Connection:** Headset – 3.5mm plug (4 pole)

Microphone

- **Element:** Electret condenser microphone
- **Polar pattern:** Noise-cancelling
- **Frequency response:** 50Hz-18,000 Hz
- **Sensitivity:** -41.5dBV (0dB=1V/Pa,1kHz)



Documents / Resources

	<p>HYPERX HX-HSCSC-BK HyperX Cloud Stinger Core Headset [pdf] User Manual HX-HSCSC-BK, HX-HSCSC-BK HyperX Cloud Stinger Core Headset, HyperX Cloud Stinger Core Headset, Cloud Stinger Core Headset, Stinger Core Headset, Core Headset, Headset</p>
---	--