



HYPERX SoloCast USB Condenser Gaming Microphone User Manual

[Home](#) » [HYPERX](#) » HYPERX SoloCast USB Condenser Gaming Microphone User Manual 

 
HYPERX SoloCast USB Condenser Gaming Microphone User Manual



Contents

- [1 Overview](#)
- [2 Specifications](#)
- [3 Using with PC or Mac](#)
- [4 Using with PS4™](#)
- [5 Microphone Position](#)
- [6 Microphone Controls](#)
- [7 Using a Microphone Mount](#)
- [8 Questions or Setup Issues](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Overview

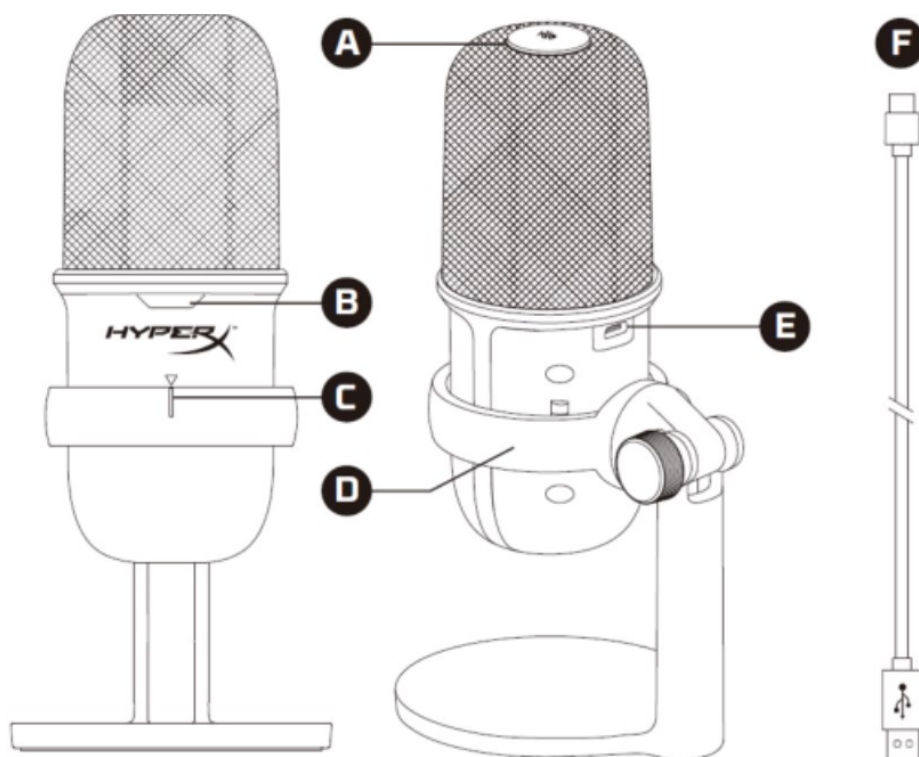

- A. Tap-to-mute sensor
- B. Microphone status LED
- C. Microphone alignment guide
- D. Microphone stand
- E. USB-C port
- F. USB cable

Specifications

General

Power supply: 5V/100mA (USB)

Working current: 47mA

USB Specification: USB 2.0 (full speed)

Sampling rates: 48kHz, 44.1kHz, 32kHz, 16kHz, 8kHz

Bit-depth: 16-bit

Compatibility: Windows 7 & above, Mac OS, PS4™

Cable length: 2m

Weight:

- Microphone: 261g
- Microphone stand: 125g
- Total with USB cable: 429.9g

Microphone

 
Element: Electret condenser microphone

Directivity pattern: Cardioid

Frequency response: 20Hz-20kHz

Sensitivity: -6dBFS (1V/Pa at 1kHz)

Noise (RMS): $\leq$ -74dBFS (A-weighted)

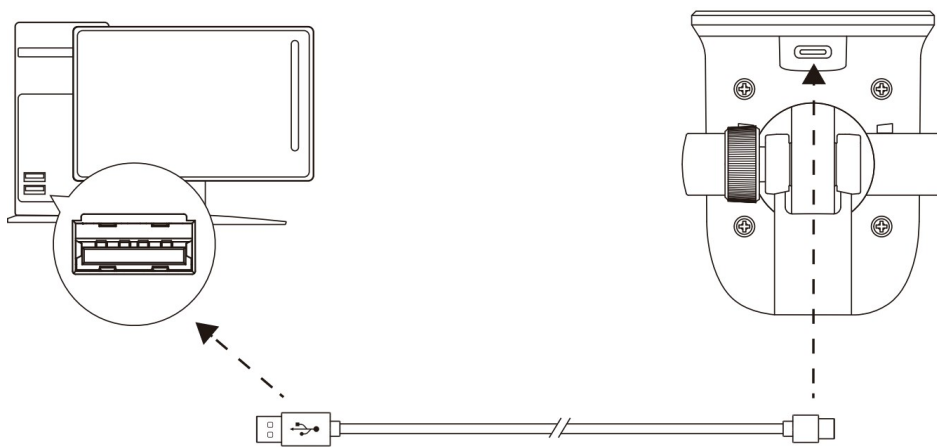
Using with PC or Mac

Connect the microphone to a USB port on the PC or Mac with the included USB cable.


Windows

To ensure the microphone is configured correctly on the PC, follow the steps below:

 
1. Right-click on the sound icon in the system tray and select Open Sound Settings.

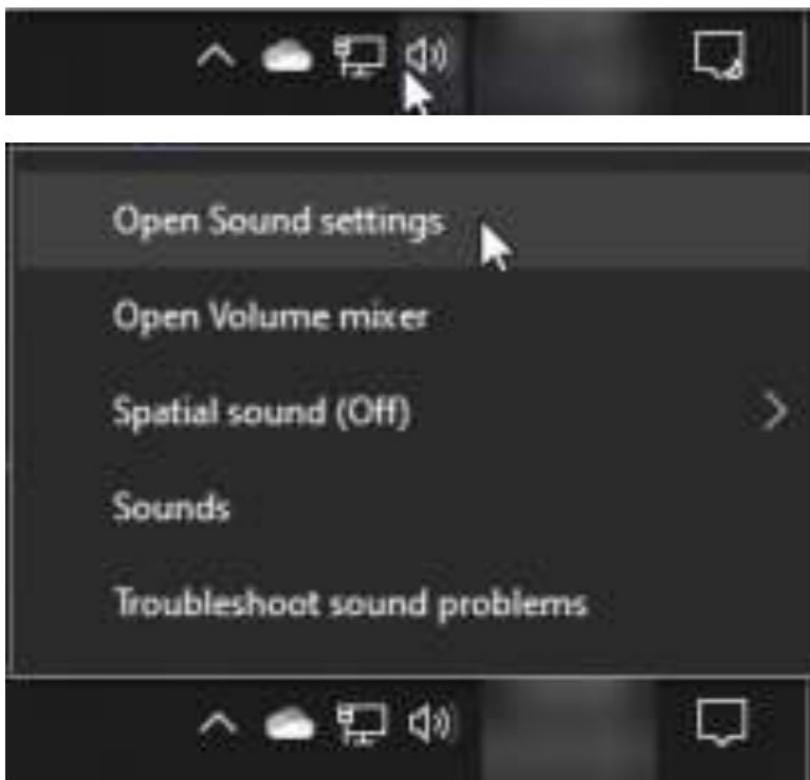

 2. Select Sound Control Panel.

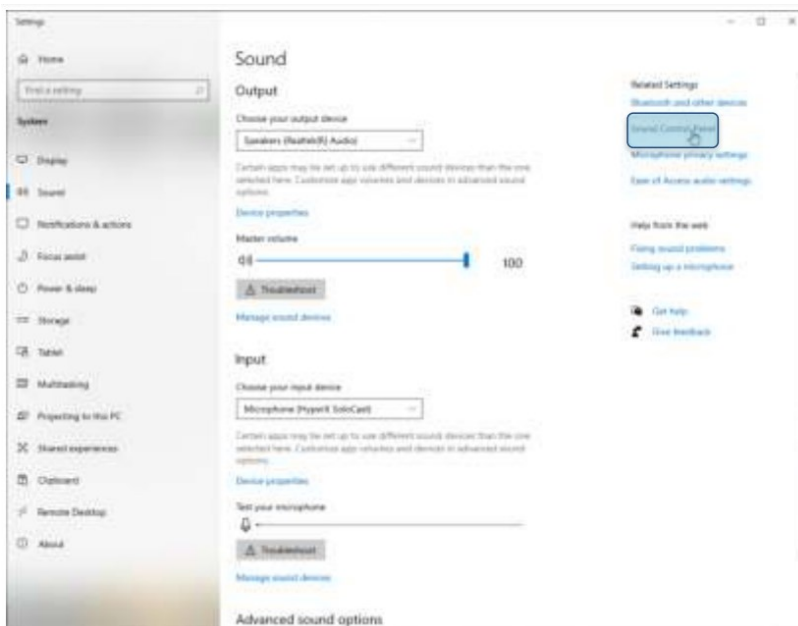

 3. On the Recording tab, select Microphone HyperX SoloCast and click on the Set Default button.

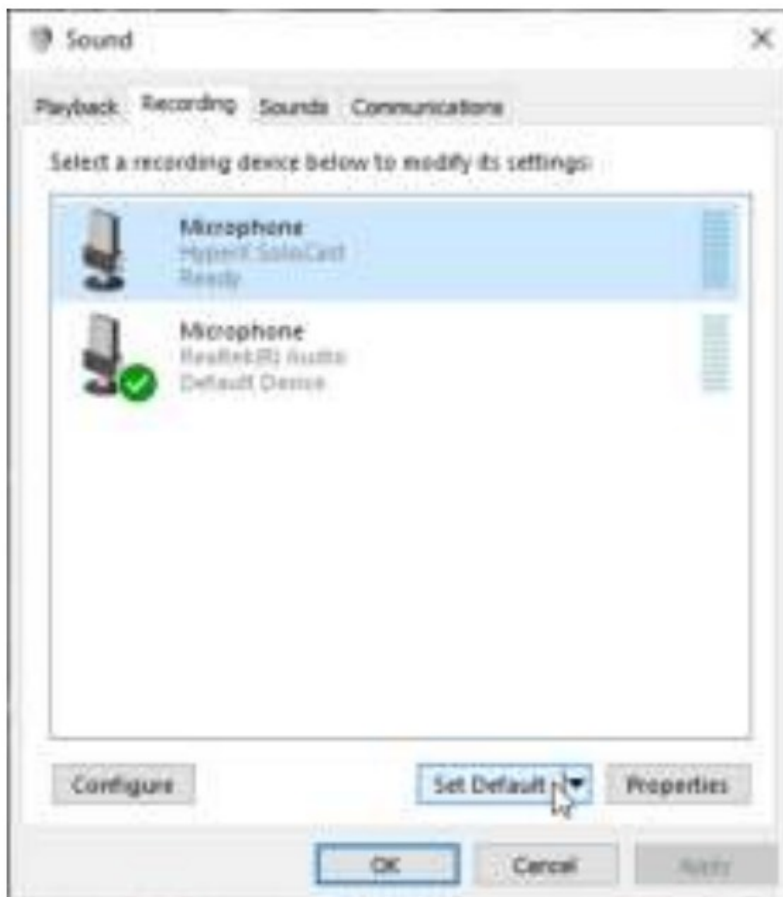

macOS

To ensure the microphone is configured correctly on the macOS, follow the steps below:

 
1. Open System Preferences and select Sound.



2. On the Input tab, select HyperX SoloCast.



Using with PS4™

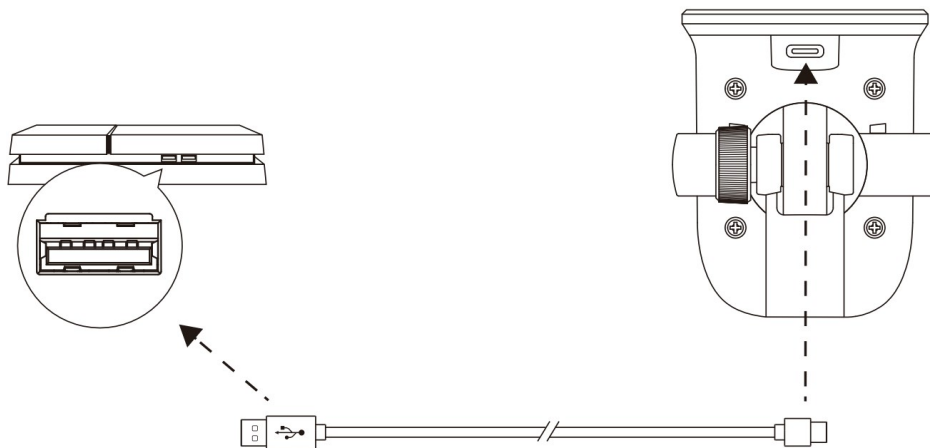

Connect the microphone to a USB port on the PS4™ with the included USB cable.

 
To ensure the microphone is configured correctly on the PS4™, follow the steps below:

1. From the PS4™ main menu, go to Settings > Devices > Audio Devices.
2. Set Input Device to USB Microsoft (HyperX SoloCast).




Microphone Position

SoloCast should be placed with the front of the microphone facing the sound source. This is indicated by the alignment guide on both the microphone and the stand.

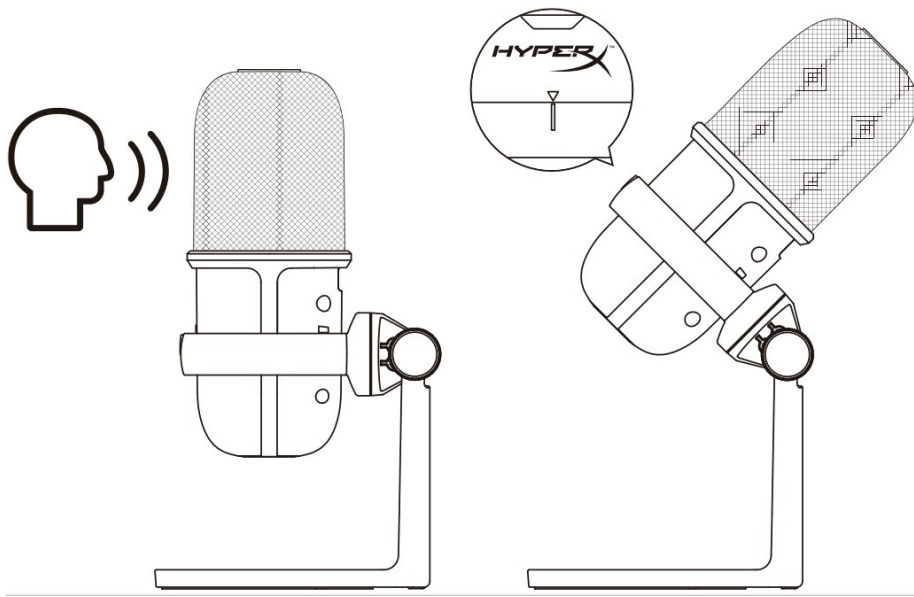


 SoloCast can be rotated to allow for easy placement under a monitor.

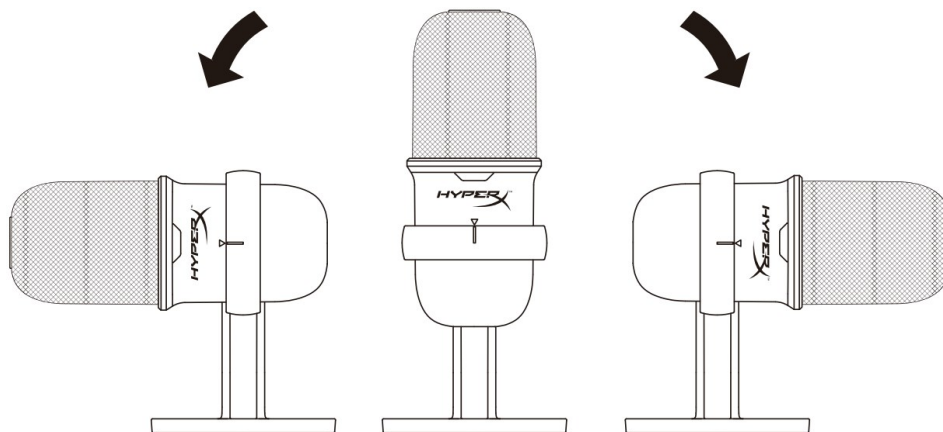

Microphone Controls

 Muting the Microphone

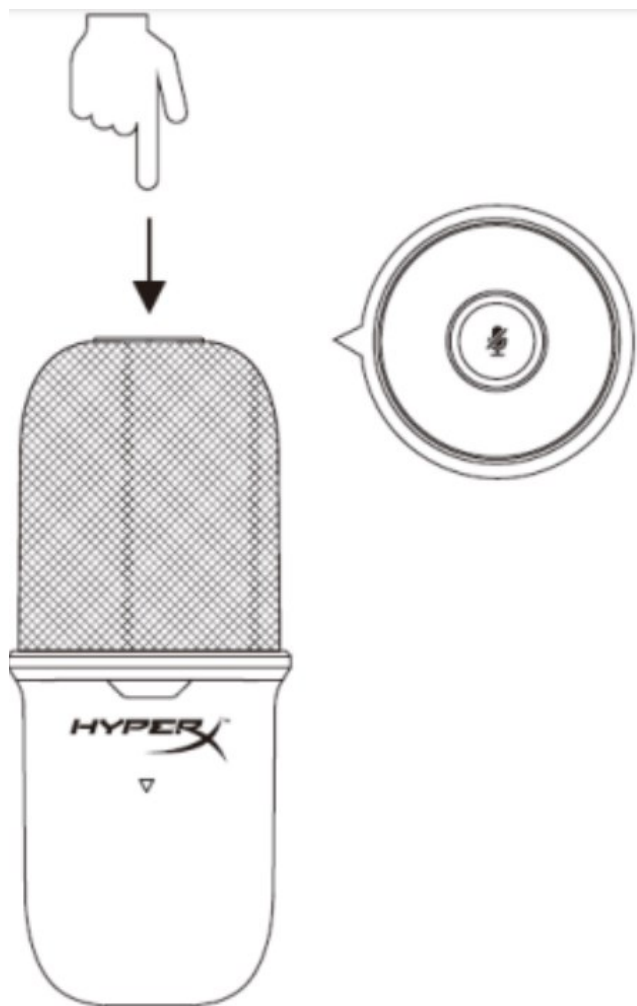

Tap the top of the microphone to mute/unmute the microphone. The microphone LED will indicate the current mute status of the microphone.

 
Microphone LED Mute Status

On Mute off

Flashing Mute on

Using a Microphone Mount

SoloCast can be removed from its stand and used with microphone mounts with either 3/8" or 5/8" threads.

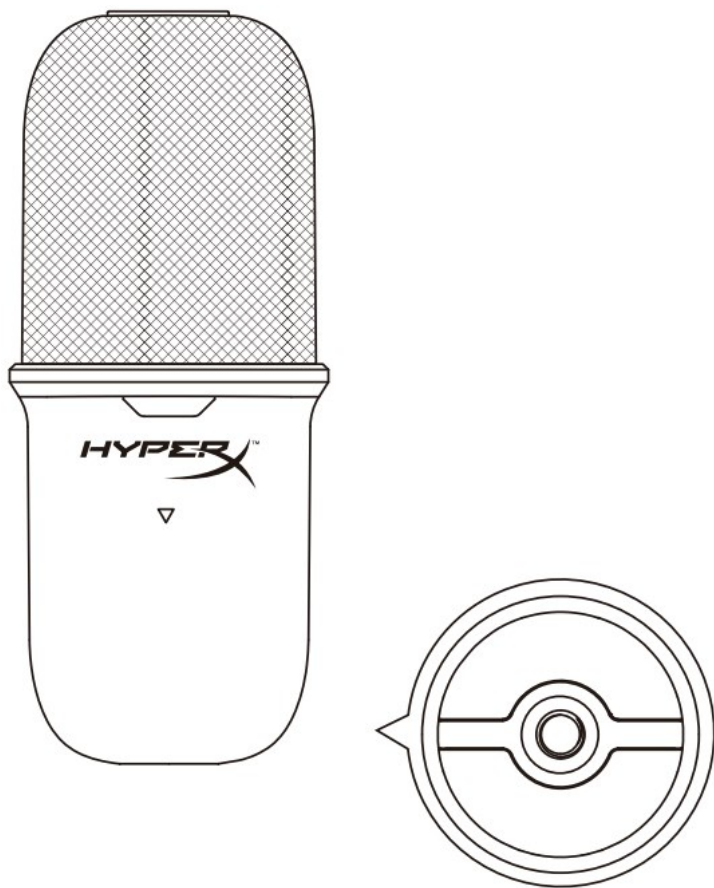

Questions or Setup Issues

Contact the HyperX support team at: hyperxgaming.com/support/microphones

Documents / Resources

	HYPERX SoloCast USB Condenser Gaming Microphone [pdf] User Manual SoloCast USB Condenser Gaming Microphone, SoloCast, USB Condenser Gaming Microphone, Gaming Microphone, Condenser Gaming Microphone
	HyperX SoloCast USB Condenser Gaming Microphone [pdf] User Manual SoloCast USB Condenser Gaming Microphone, SoloCast, SoloCast Gaming Microphone, USB Condenser Gaming Microphone, Gaming Microphone, USB Condenser Microphone, Microphone

References

- [HyperX | High Quality Gaming Gear](#)
- [Sign in to your account](#)