



[Home](#) » [i safe MOBILE](#) » **i safe MOBILE M53A01 Mining Plus GD Smartphone Instruction Manual**



i safe MOBILE M53A01 Mining Plus GD Smartphone Instruction Manual

July 7,
2025

Contents [[hide](#)]

1	i safe MOBILE M53A01 Mining Plus GD Smartphone Instruction Manual
2	INTENDED USE
3	EX MARKINGS
4	DEVICE OVERVIEW/FUNCTIONS
5	SAFETY
6	POSSIBLE USER ERRORS
7	SCOPE OF DELIVERY
8	INSTALLING THE BATTERY
9	INSERT/REMOVE SIM CARD
10	INSERT/REMOVE MICROSD CARD
11	CHARGING
12	CONNECTING APPROVED ACCESSORIES
13	CHANGING THE BATTERY
14	MAINTENANCE/REPAIR
15	CLEANING
16	STORAGE
17	RECYCLING
18	TRADEMARKS
19	Documents / Resources
20	Documents / Resources
20.1	References



Document No. 1029MM14REV00 Version: 2021-11-11

(c) 2021 i.safe MOBILE GmbH

i.safe MOBILE GmbH

i_Park Tauberfranken 10 97922 Lauda-Koenigshofen

Germany

Tel. +49 9343 60148-0

info@isafe-mobile.com

www.isafe-mobile.com

READ AND UNDERSTAND THE INSTRUCTIONS

PROTECT YOUR LIFE AND READ THE OPERATING MANUAL

This Operating Manual is part of the device IS530.M1 Mining +GD (model M53A01).

This Operating Manual provides important information for safe use of the device.

- Before using the device, read this Operating Manual carefully and pay particular attention to the “Safety” section and the warnings highlighted with the warning symbol.
- Also read the Safety Instructions before using the device.

- You can find these at www.isafe-mobile.com/en/support/downloads.
- Make sure you have access to this Operating Manual when you need it. You can find the current Operating Manual at www.isafe-mobile.com/en/support/downloads.
- Follow all instructions given on the device and on the packaging.
- Follow local safety regulations.

INTENDED USE

The IS530.M1 Mining +GD is an Internet-capable communication device for industrial use in explosion hazardous areas of Zone 1, 21, 2, 22, M1 and M2, in accordance with Directives 2014/34/EU, 1999/92/EC and the IECEx system, among others.

Only use the device as described in this Operating Manual. Any other use is considered impro-per and can lead to death, severe injuries and damage to the device.

The manufacturer i.safe MOBILE GmbH does not assume any liability for damage caused by improper use. The warranty expires in the event of improper use.

WARRANTY

You can find the warranty conditions at www.isafe-mobile.com/en/support/service. For any damage caused by computer viruses that you download while using the Internet functions responsibility is at your hand.

There is no right of recourse against i.safe MOBILE GmbH.

EU DECLARATION OF CONFORMITY

You will find the EU declaration of conformity at www.isafe-mobile.com/en/support/downloads.

FCC/IC STATEMENT

The FCC/IC declaration can be found at www.isafe-mobile.com/en/support/downloads.

EX MARKINGS

- **ATEX:**
- I M1 Ex ia I Ma IP64
- II 2G Ex ib IIC T4 Gb
- II 2D Ex ib IIIC T135°C Db IP6X

- **EU Type Examination Certificate:** EPS 19 ATEX 1 126 X
CE-designation: 2004
- **IECEEx:**
 - Ex ib IIC T4 Gb
 - Ex ib IIIC T135°C Db IP6X
 - Ex ia I Ma IP64
- IECEEx Certificate: IECEEx EPS 19.0062X
- **ANZEx:**
 - ANZEx Certificate: ANZEx 20.2002X
 - Ex ib IIIC T135°C Db IP6X
 - Ex ib IIC T4 Gb
 - Ex ia I Ma IP64
- **Temperature range:**
 - -20°C ... +60°C
- **Manufactured by: i.safe MOBILE GmbH**
 - i_Park Tauberfranken 10 97922 Lauda-Koenigshofen Germany

DEVICE OVERVIEW/FUNCTIONS



1. **STATUS LED:** Display for notifications and charging status.
2. **SOS KEY:** A long press of the SOS key sends an emergency call to a pre-saved emergency number (only in connection with a Lone Worker Protection app).
3. **LOUDSPEAKER**
4. **POWER KEY:** A long press switches the device on/off. A short press switches the stand-by mode on/off.

5. **FRONT CAMERA**
6. **ISM INTERFACE:** Connection for approved accessories. Also see section “Connecting approved accessories”.
7. **MAGNETIC CHARGER PORT:** Connection for the i.safe **PROTECTOR 3.0** Magnetic Charger Cable. Also see section “Charging”.
8. **SIDE KEY RIGHT:** Optional function, e.g. camera (function can be assigned via apps used).
9. **CURRENT APPLICATION:** Shows all open applications.
10. **HOME KEY:** Switch to the main screen.
11. **BACK KEY:** Go to the previous screen.
12. **USB INTERFACE:** Connection for the i.safe **PROTECTOR 2.0** Type C USB Cable or for connection to other devices. Also see sections “Charging” and “Connecting approved accessories”.
13. **MICROPHONE**
14. **LOUDNESS CONTROL:** Volume up/Volume down.
15. **SIDE KEY LEFT:** Optional function (can be assigned via apps used). 16 **SENSORS:** Proximity sensor, light sensor.
16. **LED FLASH**
17. **NOISE CANCELLING:** Noise cancelling microphone.
18. **LOUDSPEAKER:** Speaker for hands-free function.
21. **BACK CAMERA**
22. **BATTERY**

SAFETY

Read the “Safety” section of this Operating Manual carefully before using the device. If you do not follow these instructions or do not understand them, this could lead to death, severe injuries and damage to the device.

USER

Only trained users who are qualified in the use of Ex devices in explosion hazardous areas and who have read and understood this Operating Manual may use this device.

USE IN EXPLOSION HAZARDOUS AREAS

DANGER

Improper use can result in death or severe injuries!

- Only use the device in explosion hazardous areas of zones 1, 21, 2, 22, M1 and M2 or outside of explosion hazardous areas.
- Before entering a explosion hazardous area with the device,
- make sure the battery is screwed tight.
- make sure that all the labels on the device are readable,
- make sure the device is not damaged,
- make sure that no gap can be seen between the two halves of the device,
- make sure that only approved accessories are connected to the device, see section “Connecting approved accessories”,
- If you use the device in a explosion hazardous area, read and follow the instructions in the “Possible User Errors” section.
- Switch off the device immediately and leave the explosion hazardous area without delay if
- the labels on the device are no longer readable.
- you have exposed the device to excessive loads,
- you have damaged the housing of the device,
- malfunctions occur on the device,

USE OUTSIDE OF EXPLOSION HAZARDOUS AREAS

DANGER

Improper use can result in death or severe injuries!

- Do not use the device in places where its use is prohibited.
- Turn off the device in clinics or other medical facilities.
- Always keep a safety distance of at least 15 cm between the device and a pacemaker or hearing aid. The device can affect the functioning of medical devices such as pacemakers and hearing aids.
- When using the device while driving a motor vehicle, be sure to comply with applicable national laws.
- Make sure you prevent the user errors described in the section entitled “Possible User Errors”.
- Only charge the device as described in the “Charging” section.

CAUTION

When using earphones or headsets at the maximum volume setting, you can damage your hearing.

- First set the volume control on the device to 50 % of the maximum volume.
- Gradually adjust the volume.

NOTICE

Incorrect use can damage the device.

- Only use accessories approved by i.safe MOBILE, as described in the section on “Connecting approved accessories”.
- Protect the device and the Power Adapter from strong electrical magnetic fields as for example those emitted by induction cookers or microwave ovens, for example.
- Protect the device from oils, greases and hydraulic fluids.
- Protect the unit from high mechanical hazards, strong UV radiation and highly electrically charging processes.
- Do not touch the display with sharp objects.

POSSIBLE USER ERRORS

DANGER

Improper use can result in death or severe injuries! Follow the instructions below:

- Do not modify the device structurally.
- Do not expose the device to high temperatures.
- Do not expose the device to strong UV radiation.
- Do not expose the device to processes with high electrical charges.
- Do not expose the device to aggressive acids or bases.

When working in explosion hazardous areas, please note:

- Do not loosen the screws on the device.
- Do not connect any accessories to the device.
- Do not open any interface cover.
- Do not charge the device.
- Do not open the device.

- Do not damage the device.

SCOPE OF DELIVERY

Your device packaging contains the following:

- 1 x IS530.M1 Mining +GD
- 1 x Battery
- 1 x Quick Start Manual
- 1 x Safety Instructions
- 1 x Display Protection Foil
- 1 x i.safe PROTECTOR 2.0 Type C USB Cable
- 1 x i.safe PROTECTOR 3.0 Magnetic Charger Cable
- 1 x Power Adapter universal (power supply unit and various country-specific adapters)
- 1 x Torx Screwdriver
- 1 x Display cleaning cloth

CELL BROADCAST

The device supports cell broadcast. Cell broadcast is a cellular service for sending messages to all recipients within a cell.

INSTALLING THE BATTERY

DANGER

Installing the wrong battery in the device, poses a risk of explosion, which could result in death or serious injuries! Only fit the battery supplied or an approved replacement battery in the device outside of explosion hazardous areas. The approved replacement battery can be found on the website www.isafe-mobile.com/en/products.



- Place the battery in the battery compartment as shown.
- Hand-tighten the screws using the Torx Screwdriver provided.
- Check that the battery is seated correctly and securely.

INSERT/REMOVE SIM CARD

DANGER

An incorrect procedure in explosion hazardous areas poses a risk of death or severe injuries! Only open the device outside of explosion hazardous areas to insert or remove the SIM card.

NOTICE

Proceeding incorrectly when inserting/removing the SIM card can damage the device and the SIM card. Switch off the device before inserting or removing a SIM card. Do not charge the device while inserting or removing a SIM card.



- Loosen the screws on the battery using the Torx Screwdriver provided.
- Remove the battery from the battery compartment.

- Insert the SIM card into the slot. The device has two slots for one SIM card each. The slots are marked “SIM 1” and “SIM 2”.
- If you have inserted two SIM cards, select a favorite card. Information on operating the device can be found at www.isafe-mobile.com/en/support/service under the menu item „FAQ“.
- Reinstall the battery. See section “Installing the battery”.

INSERT/REMOVE MICROSD CARD

DANGER

An incorrect procedure in explosion hazardous areas poses a risk of death or severe injuries! Only open the device outside of explosion hazardous areas to insert or remove the microSD card.

NOTICE

Proceeding incorrectly when inserting/removing the microSD card can damage the device and the microSD card. Switch off the device before inserting or removing a microSD card. Do not charge the device while inserting or removing a microSD card.

- Loosen the screws on the battery using the Torx Screwdriver provided.
 - Remove the battery from the battery compartment.
 - Insert the microSD card into the slot provided. The device has a slot for a microSD card up to 128 GB. The slot is marked “microSD”.
- Reinstall the battery. See section “Installing the battery”.

CHARGING

DANGER

An incorrect procedure in explosion hazardous areas poses risk of death or severe injuries! Only charge the device outside of explosion hazardous areas. Do not charge the device in the vicinity of flammable substances.

NOTICE

Incorrect charging can cause damage to the device. Please note the following when charging:

- Only charge the device using the i.safe PROTECTOR 2.0 Type C USB Cable supplied or with the i.safe PROTECTOR 3.0 Magnetic Charger Cable supplied.
- Only charge the device at ambient temperatures between +5 °C to +35 °C (+41 °F to +95 °F).
- Charge the device under dry indoor conditions only.
- Do not charge the device in environments dusty or humid.

Your device package contains a power supply unit, various country-specific adapters, an i.safe PROTECTOR 2.0 Type C USB Cable and an i.safe PROTECTOR 3.0 Magnetic Charger Cable.

- Connect the adapter suitable for your country to the power supply unit.
- Connect the i.safe PROTECTOR 2.0 Type C USB Cable or the i.safe PROTECTOR 3.0 Magnetic Charger Cable to the power supply unit.
- Connect the i.safe PROTECTOR 2.0 Type C USB Cable to the USB interface of the device, or connect the i.safe PROTECTOR 3.0 Magnetic Charger Cable to the magnetic charging port on the device.

SWITCHING ON/OFF

- Press and hold the on/off key for about 3 seconds.
 - Enter the device or SIM PIN when the input dialog for the device or SIM PIN appears after switching on.
- Select the <Switch off> menu item if the power off menu appears when switching off.

USING THE DEVICE

When turning on the device for the first time, follow the instructions on the screen.

Further information on operating the device can be found at www.isafe-mobile.com/en/support/service under the menu item “FAQ”. Detailed information on operating the Android operating system can be found at: <https://support.google.com/android>.

CONNECTING APPROVED ACCESSORIES

Only connect accessories approved by i.safe MOBILE to the device. Accessories approved by i.safe MOBILE can be found at

www.isafe-mobile.com/en/products.

Approved accessories can be connected to any ISM interface and to the USB interface.

DANGER

Improper use can result in death or severe injuries! If you need approved accessories in explosion hazardous areas, please note the following before connecting:

- Connect approved accessories to the ISM interface of the device only outside of explosion hazardous areas.
- Operate approved accessories in explosion hazardous areas only on the ISM interface of the device. Wired connections via the USB interface are prohibited.
- Connect the plug of the accessory securely to the ISM interface on the device.
- Close the ISM interface with the cover provided when you are not using accessories.

ISM INTERFACE



- Loosen the screw on the ISM interface cover using the Screwdriver provided and remove the cover as shown. The Screwdriver is included in the accessory package.



- Connect the plug of the approved accessory to the ISM interface as shown.
 - Hand-tighten the screws using the Screwdriver provided.
- Check that the plug is seated correctly and securely.

USB INTERFACE

DANGER

Improper use can result in death or severe injuries! Only use USB interface outside of explosion hazardous areas. Under no circumstances should you open the cover of the USB interface in explosion hazardous areas.

The USB interface is used for charging and data transfer.

Connect approved accessories or other devices to the USB interface only by using the i.safe PROTECTOR 2.0 Type C USB Cable.

CHANGING THE BATTERY

WARNING

If you replace the battery with the wrong battery in the device, there is a risk of explosion, which could result in death or serious injuries! Only replace the battery with an approved replacement battery outside of explosion hazardous areas. An approved replacement battery can be found on the website www.isafe-mobile.com/en/products.



- Loosen the screws on the battery using the Torx Screwdriver provided.
 - Remove the battery from the battery compartment as shown.
 - Place the approved replacement battery in the battery compartment as shown.
- Hand-tighten the screws using the Torx Screwdriver provided.
 - Check that the battery is seated correctly and securely.

POSSIBLE DEVICE PROBLEMS

You can find information on possible device problems and how to rectify them at www.isafe-mobile.com/en/support/service under the menu item “FAQ”.

If you have any further questions, please contact the i.safe MOBILE repair service at www.isafe-mobile.com/en/support/service.

MAINTENANCE/REPAIR

The device itself has no serviceable parts.

WARNING

Incorrect repairs present a risk of explosion or fire, which can result in death or severe injuries! Do not open the device or carry out any repairs yourself.

Contact the i.safe MOBILE repair service at www.isafe-mobile.com/en/support/service if the device is not working normally, if the device needs to be repaired or if a replacement part is required.

RETURN SHIPMENT

Contact the i.safe MOBILE repair service at www.isafe-mobile.com/en/support/service.

DISTRIBUTION PARTNER

You can find the specialist distribution partner responsible for your country at www.isafe-mobile.com/en/contact.

CLEANING

NOTICE

Incorrect cleaning can cause damage to the device. Please note the following when cleaning:

- Turn off the device before cleaning.
- Do not charge the device while cleaning.
- Do not use chemical agents for cleaning.
- Clean the device and the Power Adapter with a soft, moistened antistatic cloth.
- Clean the display screen regularly with a soft, antistatic cloth.

STORAGE

NOTICE

Incorrect storage can cause damage to the device. Store the device at ambient temperatures between +5 °C to +35 °C (+41 °F to +95 °F) and a humidity between 10 % to 60 %.

RECYCLING

NOTICE

Incorrect disposal of electronic products, batteries and packaging material puts the environment at risk. Please note the following when disposing of items:

- DO NOT throw away batteries with household waste.
- Always dispose electronic products, batteries and packaging material at the appropriate collection points. This way, you prevent uncontrolled waste disposal and

promote the recycling of material resources.

You can obtain further information from regional waste disposal companies, state authorities or the i.safe MOBILE service centre responsible for your country or region at www.isafe-mobile.com/en/support/service.

TRADEMARKS

i.safe MOBILE and the i.safe MOBILE logo are registered trademarks of the i.safe MOBILE GmbH.


EEA Version: Comes with the Google™ app and Google Chrome™

Google and Google Play are trademarks of Google LLC.

All other trademarks and copyrights are the properties of their respective owners.

Documents / Resources

Documents / Resources

	i safe MOBILE M53A01 Mining Plus GD Smartphone [pdf] Instruction Manual M53A01, M53A01 Mining Plus GD Smartphone, Mining Plus GD Smartphone, GD Smartphone
---	---

References

- [User Manual](#)

i safe

MOBILE

GD Smartphone, i safe MOBILE, M53A01, M53A01 Mining Plus GD Smartphone, Mining Plus GD Smartphone

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.