

I-TECH COMPANY NPW9240K-TCB Remove and Replace AD board and Inverter Instructions

Home » I-TECH COMPANY » I-TECH COMPANY NPW9240K-TCB Remove and Replace AD board and Inverter Instructions [™]

I-TECH COMPANY NPW9240K-TCB Remove and Replace AD board and Inverter



Model: NPW9240K-TCB

Contents

- 1 Instructions
- 2 Documents /

Resources

- 2.1 References
- **3 Related Posts**


Instructions

(1) Before your work, please make sure that the power is disconnected.

Step 1: Remove all the LCD panel screws (14 screws) then remove the LCD cover.




Step 2: Remove the LCD mounting screws (8 screws, 3 on each side, 2 on top).

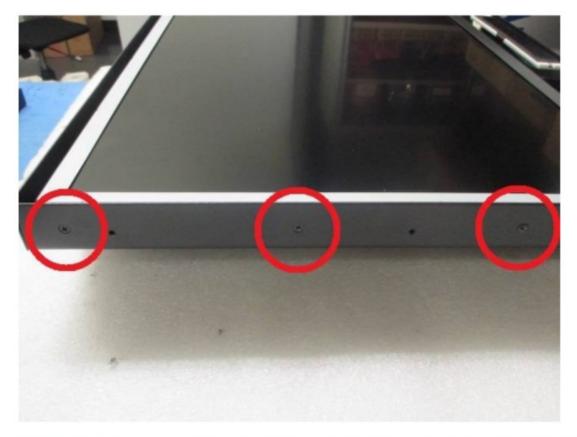





Step 3: Lift up the panel and disconnect the LVDS & inverter wire slowly and carefully for prevent the damage to both panel & wire, and remove the panel set out of its chassis.

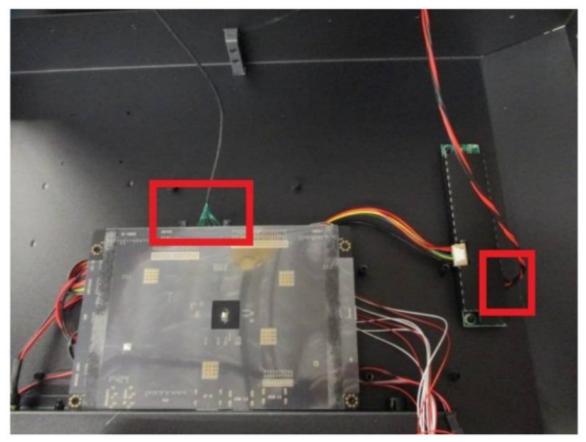

Step 4: Remove these 4 screws to release the AD board.

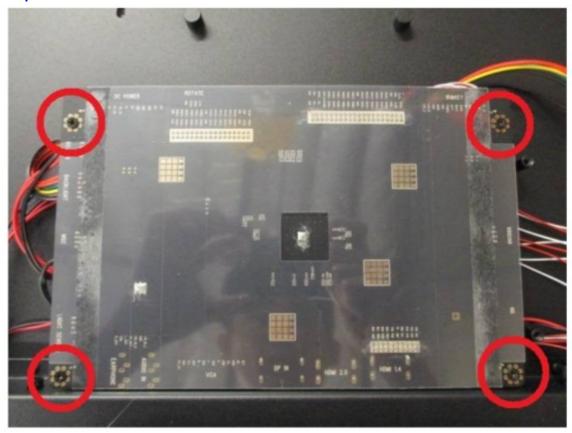

Step 5: Flip over the AD board and disconnect all the connected wires, and then replace with new AD board.

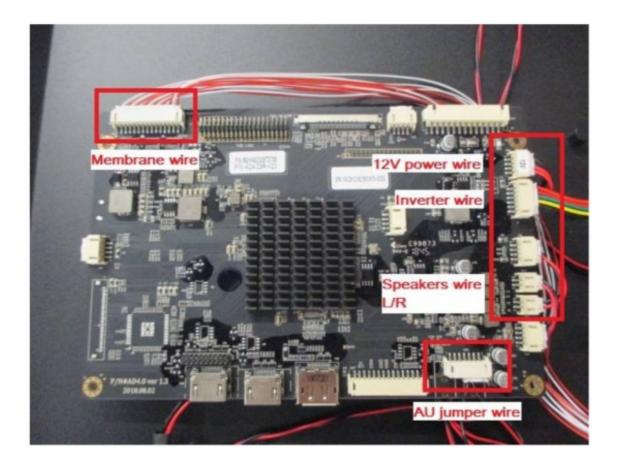

~~~Follow the step backwrds to complete assembly the unit~~~

## **Documents / Resources**



I-TECH COMPANY NPW9240K-TCB Remove and Replace AD board and Inverter [pdf] Instructions

NPW9240K-TCB Remove and Replace AD board and Inverter, NPW9240K-TCB, Remove and Replace AD board and Inverter

Cathonian Co. Harmon Co. Ingenior of an hour or

## References

• i <u>Under Construction</u>

Manuals+,