



## Ibiza Light Spray-Color-1000 Fog Machine with Led and Remote Controls 1000w Instruction Manual

[Home](#) » [ibiza LIGHT](#) » Ibiza Light Spray-Color-1000 Fog Machine with Led and Remote Controls 1000w Instruction Manual 

Ibiza Light Spray-Color-1000 Fog Machine with Led and Remote  
Controls 1000w Instruction Manual

ibiza  
LIGHT

# FOG MACHINE

WITH LED & REMOTE CONTROLS 1000

Re

SPRAY-COLOR-1000



# MANUAL

## Contents

- 1 UNPACKING INSTRUCTIONS
- 2 CONTENTS OF THE CARTON
- 3 EXPLANATION OF SYMBOLS ON THE SILKSCREEN
- 4 SAFETY RECOMMENDATIONS
- 5 DISCONNECT DEVICE
- 6 OPERATION
- 7 CLEANING AND USING FREQUENCY OF THE PRODUCT
- 8 OTHERS INSTRUCTIONS :
- 9 SPECIFICATIONS
- 10 Documents / Resources

## UNPACKING INSTRUCTIONS

Immediately upon receiving a fixture, carefully unpack the carton, check the contents to ensure that all parts are present and have been received in good condition. Notify the freight company immediately and retain packing material for inspection if any parts appear to be damaged from shipping or the carton itself shows signs of mishandling. Keep the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

## CONTENTS OF THE CARTON

- 1 pc. SPRAY-COLOR-1000
- 1 pc wired remote control
- 1 pc wireless remote control
- 1 pc. user manual
- 1 pc. power cable

## EXPLANATION OF SYMBOLS ON THE SILKSCREEN



The triangle containing a lightning symbol is used to indicate whenever your health is at risk (due to electrocution, for example).



An exclamation mark in a triangle indicates particular risks in handling or operating the appliance.



The unit complies with UK standards



For indoor use only



Keep a safety distance of at least 1m from walls or any other inflammable objects and/or surfaces



Protection class I. Requires an earth connection



Please read this manual carefully before operating this product.

## SAFETY RECOMMENDATIONS

- If the device has been exposed to temperature changes due to environmental changes, do not switch it on immediately. The arising condensation could damage the device. Leave the device switched off until it has reached room temperature.
- It is essential that the device is earthed. A qualified person must carry out the electric connection. · Make sure that the available voltage is not higher than stated at the end of this manual.
- Make sure the power cord is never crimped or damaged. If it is damaged, ask your dealer or authorized agent to replace the power cord.
- Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.
- During initial start-up, some smoke or smell may arise. This is normal and should decrease gradually.
- Be very careful during installation. Since you will be working with a dangerous voltage you can suffer a life-threatening electric shock when touching live wires.
- Please be aware that damages caused by manual modifications to the device are not subject to warranty. Keep away from children and non-professionals.
- The Fog machine doesn't include any spare parts for repair, please check if all the parts are well installed and screws are fitted tightly before operating. Do not use the fog machine when the cover is open.
- This device is allowed for indoor use only.
- Do not shake the device. Avoid brute force when installing or operating it.
- Operate the device only after having familiarized yourself with its functions. Do not permit operation by person not qualified for operating the device. Most damages are the result of unprofessional operation.
- For safety reasons, please be aware that all modifications on the device are forbidden. Furthermore, any other operation may lead to short-circuit, burns, electric shock, lamp explosion, crash, etc. If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the warranty becomes void.
- When you use the fog machine on a wooden floor or ground with carpet, the machine should never be directly in contact with the ground. The machine should keep a distance with the ground of 50cm at least. It's not allowed to put flammable and explosive objects within 1 meter.

## **DISCONNECT DEVICE**

Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

## **IMPORTANT NOTES**

- Before filling the fog liquid, please unplug the unit from the mains.
- In order to prevent short circuits, please don't let fog liquid flow into the inner part of the machine before filling, you can also take out the liquid bottle and fill in the fog liquid outside the unit.
- The fog machine must be installed on the ground. It's not allowed to slope the unit or place it upside down · After use, switch the fog machine off and unplug it from the mains
- The fog machine isn't waterproof. If moisture or fog liquid enters inside the machine, you must unplug it immediately from the mains and contact your dealer.
- It's forbidden to spray directly towards persons. Keep far away from flammability and explosive objects
- The fog spray is very hot, please keep a distance of at least 5 meters when using it

- Please don't touch the surface of the fog machine during the use because the housing will reach 40-80°C
- When the machine doesn't work, please check if the fuse is burnt out or not. If it is, replace it by an identical fuse, find out the fault and restart the machine. But please note: the repair must be handled by professional.

## OPERATION

### WIRELESS REMOTE CONTROL

Plug the supplied receiver into the WIRELESS REMOTE CONTROL socket. The buttons on the supplied wireless remote control have following functions:

1. Press to spray fog, release to stop fog
2. Press to illuminate the 2 groups of LEDs in different colours
3. Sound mode: The 2 groups of LEDs light up to the rythm of the music. Press again to produce a strobe effect
4. Keep pressed to switch the LEDs on. At every press, the LEDs light up in a different colour. At the last press, the LEDs are switched off.

### WIRED REMOTE CONTROL

When the fog machine is heating up, the LED on the wired remote control is off. When the LED lights up in red, the machine is ready for use. Press the red button to produce fog. Release the button to stop fog.

## CLEANING AND USING FREQUENCY OF THE PRODUCT

Please clean the fog machine periodically in order to keep it in good condition.

- The fog liquid should be clear and not polluted. The bottle cap should be screwed tightly after filling in the fog liquid.
- When the fog machine worked 40 hours continuously, please use 80% of distilled water and 20% of white vinegar to clean the impurities which accumulated inside the heating tube
- Remove the nozzle before the fog machine is warming up. Use vinegar to clean it and keep clear
- Pour out the fog liquid and fill the tank with the distilled water/vinegar mix as above. Switch on the power and the machine will warm up. · Operate the fog machine in a well ventilated area until the distilled water/vinegar mix has been used up. Fill the unit again with fog liquid and operate it in an open space until the vinegar smell has disappeared.

## OTHERS INSTRUCTIONS :

- Fog machines may jam easily because of impurities in the fog liquid. Therefore, a periodical maintenance will lengthen the life time of the machine.
- Please use a dry cloth for cleaning, please clean the machine thoroughly before you store it.

## SPECIFICATIONS

Voltage.....220V-240V~  
 50/60Hz  
 Power  
 .....  
 1000W

## Fuse

..... ?A	
Warm up time .....	3-5minutes
Max. continuous operating time .....	15-20 seconds
Max. spray height .....	Approx. 5-8m
Fog output.....	
Approx. 850m3	
LED source.....	12 x 3W RGB
Remote control battery.....	Alkaline E23A / 12V
Tank capacity .....	1.2L
Weight.....	
..... 4.2Kg	
Dimensions .....	290 x 230 x 170mm

## Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



<https://www.lotronic.net/SPRAY-COLOR-1000>

View the product on our website



<https://www.facebook.com/IbizaLightSound/>

Any questions or problems?  
Contact us on Facebook


Imported from China by LOTRONIC S.A.  
Avenue Zénobe Gramme 9  
B-1480 Saintes



[www.ibiza-light.com](http://www.ibiza-light.com)

©Copyright LOTRONIC 2022

## Documents / Resources

	<p><a href="#">Ibiza Light Spray-Color-1000 Fog Machine with Led and Remote Controls 1000w</a> [pdf] Inst ruction Manual</p> <p>Spray-Color-1000 Fog Machine with Led and Remote Controls 1000w, Spray-Color-1000, Fog Machine with Led and Remote Controls 1000w, Remote Controls 1000w, Controls 1000w</p>
---	--

[Manuals+.](#)