



# iclever BK50 Wireless Keyboard User Manual

[Home](#) » [iclever](#) » iclever BK50 Wireless Keyboard User Manual 

Contents

1 iclever BK50 Wireless Keyboard

2 Specifications

3 Product Overview

4 Guide to Use

5 Hot keys and Media Keys

6 FAQ

7 FCC Statement

8 Documents / Resources

8.1 References

9 Related Posts



## iclever BK50 Wireless Keyboard



## Package Contents

- 1 x Keyboard
- 1 x USB-C Charge Cable
- 1 x User Manual

### Specifications

Connection Type	Bluetooth 5.1
Dimensions	298.3*131.1*20.7mm
Connected Devices	Up to 3
Layout Compatibility	Windows/Mac
Lithium Battery Capacity	180 mAh
Charge Time	2 hours (USB-C charge)
Uninterrupted Work Time	> 22 days
Key Life (scissor switch)	5 million clicks
Material	ABS
Frequency Band	2402MHz - 2480MHz
Maximum Transmission Power	0 dBm

### Compatibility

- iOS 9.0 or later iPad/iPhone
- macOS 10.12 or later Mac/iMac
- Windows 8 or later PC/laptop/tablet
- Android 6.0 or later Android Smartphone/tablet

### Note

Not fully compatible with Bluetooth adapter, Samsung Smart TV, Xbox, and Nokia phones.

### Product Overview



#### 1. CD Power & Bluetooth Indicator:

- Power indicator:  
when powering on the keyboard, it will be on for 3 seconds.
- Blue tooth Indicator:  
press "fnD + "Z", the indicator will flash to Bluetooth pairing mode.

#### 2. Caps Lock Indicator:

press "caps lock" key to switch between uppercase and lowercase letters,

- when the indicator is on, it is uppercase letters.  
**Note:** the indicator may be off when used in Android.
- when the indicator is off, it is lowercase letters.

#### 3. Fn Lock Indicator:

press "fnD + "esc" to activate the fn lock function.

- when the indicator is on, F1-F12 works as F1-F12.
- when the indicator is off, F1-F12 works as multi-media function.

#### 4. Charging Indicator:

- stay in red when charging.
- turn off after fully charged (about 2 hours fully charged).

#### 5. Power Switch: slide the power switch to "I" to power it on.

#### 6. USB-C Charging Port: for charging.

## Guide to Use

### How to pair with Bluetooth devices?

#### Pair with the 1st device

- Step 1. Charge the keyboard for 2 hours.
- Step 2. Slide the power switch to power on.
- Step 3. Press "fn• + "Q" to channel 1 and press "fn" + "Z" to Bluetooth pairing mode, and the Bluetooth indicator will keep flashing.
- Step 4. On your Bluetooth device, find the Bluetooth name "iClever BK50 Keyboard" and click to connect it.

### How to find the Bluetooth Name in different system:

#### For Windows 10:

Click Win > Setting > Devices > Bluetooth & other devices > Add Bluetooth or other device > Bluetooth > Click "iClever BK50 Keyboard" to connect.

#### For MacBook:

Click System Preferences > Bluetooth > Click "iClever BK50 Keyboard" to connect.

#### For iPad/iPhone:

Click Setting > Bluetooth > Click "iClever BK50 Keyboard" to connect.

### Notes:

- the Bluetooth pairing name may be shown as "Keyboard".
- auto re-connect function: the keyboard will connect with the last-used device automatically.

- do not connect it via a Bluetooth adapter.
- if fail to connect, please read the FAQ.

### **Pair with the 2nd device**

- Step 1. Press “In” + “W” to channel 2 and press “In” + “Z” to Bluetooth pairing mode, and the Bluetooth indicator will keep flashing.
- Step 2. On your Bluetooth device, find the Bluetooth name “iClever BKS0 Keyboard” and click to connect it.

### **Pair with the 3rd device**

- Step 1. Press “fn” + “ED to channel 3 and press “fn” + “Z” to Bluetooth pairing mode, and the Bluetooth indicator will keep flashing.
- Step 2. On your Bluetooth device, find the Bluetooth name “iClever BK50 Keyboard” and click to connect it.

### **How to switch among the connected devices?**

Press “fn” + Q/W/E to switch among the connected devices.

### **How to re-pair?**

- Step 1. Press “fn” + Q/W/E to choose the channel 1/2/3 you want to re-pair.
- Step 2. Press “In” + “Z” to re-pair AGAIN.

### **Power Saving Mode**

The keyboard will enter power saving mode after 30 minutes of inactivity. Press any key to activate it.

**Note:** there a delay when wake up the keyboard.

### **Charge the Keyboard**












 
Charge the device with the included USB cable.

Do not charge with a charger with a voltage exceeding 7V.












(Output: DC 5V/120mA; USS charger is not included)

### **Hot keys and Media Keys**

The table below describes special key combinations for different systems.

Function Keys	iPad OS iOS	Mac OS	Android	Windows	Windows Mac OS
Way to use	Press F-Keys	Press F-Keys	Press F-Keys	Press F-Keys	Press fn +
 F1	Brightness -	Brightness -	Brightness -	Brightness - (Windows 10)	F1
 F2	Brightness +	Brightness +	Brightness +	Brightness + (Windows 10)	F2
 F3	Home	Mission Control	Home	Web browser	F3
 F4	N/A for iPhone	Switch apps	N/A	Switch apps	F4
 F5	Search	Search	Search or N/A	Search	F5
 F6	Previous track	Previous track	Previous track	Previous track	F6
 F7	Play/pause	Play/pause	Play/pause	Play/pause	F7
 F8	Next track	Next track	Next track	Next track	F8
 F9	Mute	Mute	Mute	Mute	F9
 F10	Volume -	Volume -	Volume -	Volume -	F10
 F11	Volume +	Volume +	Volume +	Volume +	F11
 F12	Screenshot	Screenshot	Screenshot	Screenshot	F12

- Press F-keys” means press F1-F12 keys.
- press fn +” means press fn and F1- F12 keys.

Special Key	Description
	Press "fn" + "esc" to turn on/off fn lock function. Your keyboard has by default access to the Media and Hotkeys such as Volume Up, Play/Pause, Mute and so on. If you prefer to have direct access to your F-keys simply press
	Press "fn" + "delete" to work as screen lock.
	Press "fn" + "Q" to Bluetooth Channel 1.
	Press "fn" + "W" to Bluetooth Channel 2.
	Press "fn" + "E" to Bluetooth Channel 3.
	Press "fn" + "Z" to Bluetooth pairing, and the indicator will flash.
	It works as "win" when your system is Windows or Android. It works as "option" when your system is iOS or Mac OS.
	It works as "alt" when your system is Windows or Android. It works as "command" when your system is iOS or Mac OS.
	It works as "ctrl" when your system is Windows or Android. It works as "option" when your system is iOS or Mac OS.
	Hidden function: fn + ↑ = page up, fn + ↓ = page down, fn + ← = home, fn + → = end
	The "fn" key is used in combination with other keys to access special features.

## FAQ

Delay when typing1 stop working, and frequently get disconnected

Restart your device. Charge the keyboard for 2 hours. Make sure that your iClever device and computer are within close proximity of each other. Try moving away at least 8 inches from: ---- Any device that could emit wireless waves: Microwave, cordless phone, baby monitor, wireless speaker, garage door opener, WiFi router --- Computer power supplies, Metal or metal wiring in the wall Do not use your wireless keyboard on metal surfaces. Check if there are any updates running in the background. Check your computer memory, insufficient memory may cause the delay. Try on a different APP/device to connect.

My keyboard fails to connect.

Charge the keyboard for 2 hours. If you can not find the iClever BK50 Keyboard , it may be shown as a keyboard image, please click this image to connect. Make sure that your iClever device and computer are within close proximity of each other. Try moving away at least 8 inches 20 cm from metal and other sources of wireless signal. Delete all the Bluetooth connection records. For example, for iPad, click Settings > Bluetooth > under MY DEVICE to delete all the Bluetooth connection records On your device, turn off the Bluetooth and turn it on again to Refresh. For example, for iPad, click Settings > Bluetooth > if the on-screen switch beside

Bluetooth currently shows as ON, tap it twice to refresh it Connect it again.

How to fix keyboard typing multiple letters on Mac?

On a Mac, choose the Apple menu > System Preferences, click Keyboard, and choose the Keyboard tab. Locate the Key Repeat slider setting and adjust it to the Off position.

How to fix keyboard typing multiple letters on Windows 10?

Click win key > Settings > Ease of Access > Keyboard > find Use Filter Keys, turn it on.

Bluetooth device doesn't work after computer wakes from sleep mode in Windows system.

In the Device Manager, change the Bluetooth wireless adapter power settings: Go to Control Panel > System and Security > System > Device Manager ,In Device Manager, expand Bluetooth Radios, right-click on the Bluetooth wireless adapter (ex. Dell Wireless 370 adapter), and then click Properties. In the Properties window, click the Power Management tab and uncheck Allow the computer to turn off this device to save power. Click OK. Restart your computer to apply the change.

## **Tips**

- Keep away from oil, chemical, liquid, and snacks.
- Keep away from sharp objects.
- Keep away from metal and other sources of wireless signal.

## **Contact**

For more questions, please contact us by [support@iclever.com](mailto:support@iclever.com)

## **FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions


1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

### IC Caution

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

## Documents / Resources

	<a href="#">iclever BK50 Wireless Keyboard</a> [pdf] User Manual BK50 Wireless Keyboard, Wireless Keyboard, Keyboard
---	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.