

iclever IC-BK08 Multi Device Foldable Wireless Keyboard



iclever IC-BK08 Multi Device Foldable Wireless Keyboard User Manual

[Home](#) » [iclever](#) » iclever IC-BK08 Multi Device Foldable Wireless Keyboard User Manual 

Contents

- 1 iclever IC-BK08 Multi Device Foldable Wireless Keyboard
- 2 Product Information
- 3 Operating Guidelines
- 4 Connect your device
 - 4.1 Pairing with devices
- 5 Features
- 6 Touchpad Function and Compatibility
- 7 FAQs
- 8 Touchpad issues
- 9 Touchpad Sensitivity
- 10 Documents / Resources
 - 10.1 References



iclever IC-BK08 Multi Device Foldable Wireless Keyboard



Product Information

Specifications

- Product Name: Multi-device Foldable Wireless Keyboard
- Model Number: IC-BK08
- Catalog Number: N/A
- Charging Port: USB-C

Pairing with 1st device:

1. Unfold the keyboard to power it on, the indicator light will turn blue for 3 seconds.
2. Hold and press the key of *[key]* for 5 seconds to enter pairing mode in channel 1 until the indicator light flashes blue quickly.
3. On your device, go to Bluetooth settings and find the Bluetooth name “iClever IC-BK08 Keyboard” and click to connect.
4. The indicator light will turn off once paired successfully.

Pairing with 2nd device:

1. Hold and press the key of *[key]* for 5 seconds to enter pairing mode in channel 2 until the indicator light flashes blue quickly.
2. On your device, go to Bluetooth settings and find the Bluetooth name “iClever IC-BK08 Keyboard” and click to connect.
3. The indicator light will turn off once paired successfully.

Pairing with 3rd device:

1. Hold and press the key of *[key]* for 5 seconds to enter pairing mode in channel 3 until the indicator light flashes blue quickly.
2. On your device, go to Bluetooth settings and find the Bluetooth name “iClever IC-BK08 Keyboard” and click to connect.
3. The indicator light will turn off once paired successfully.

Switch among connected channel:

Press *[key]*, *[key]*, or *[key]* to switch among the connected devices.

Re-pairing connected channels:

Hold and press the key of *[key]*, *[key]*, or *[key]* for 5 seconds to enter pairing mode again. On your device, find the Bluetooth name “iClever IC-BK08 Keyboard” and click to connect.

Features

Function Keys:

Corresponding System	Way to use		
iOS	Press Fn + Home: Search	Press Fn + Lightness: Increase Lightness	Press Fn + Lightness + Previous track: Play/pause
Android	Press Fn + Home: Search in browser or N/A	Press Fn + Lightness -: Decrease Lightness	Press Fn + Lightness + Previous track: Play/pause
Windows	Press Fn + Home: Web browser Search	Press Fn + Lightness -: Decrease Lightness (win10)	Press Fn + Lightness + Previous track: Play/pause
Mac OS	Press Fn + Home: Mission Control Search	Press Fn + Lightness -: Decrease Lightness	Press Fn + Lightness + Previous track: Play/pause
Windows	Press Fn+Shift+F1: Next track	Press Fn+Shift+F2: Next track	...

FAQs

Bluetooth connectivity issues:

- Connection failed / Unable to connect
- Keystroke delay / Character repetition / Frequent disconnections
- Keyboard not appearing in the match list
- The output does not match the key symbols

For Windows/iOS/Mac OS users:

- Make sure the keyboard is in pairing mode and follow the pairing instructions in the user manual.
- Check that Bluetooth is enabled on your device.
- Restart your device and try to pair again.

For Android users:

- Ensure that the keyboard is compatible with your Android device.
- Make sure the keyboard is in pairing mode and follow the pairing instructions in the user manual.
- Check that Bluetooth is enabled on your device.
- Restart your device and try to pair again.

Touchpad issues:

- Touchpad not working
- Touchpad sensitivity
- Touchpad scrolling direction

Does not hold a charge:

- Make sure you are using the correct charging cable and adapter.

- Try charging the keyboard for a longer period of time.
- If the issue persists, contact iClever support for further assistance.

Compatibility issues and scope of compatibility:

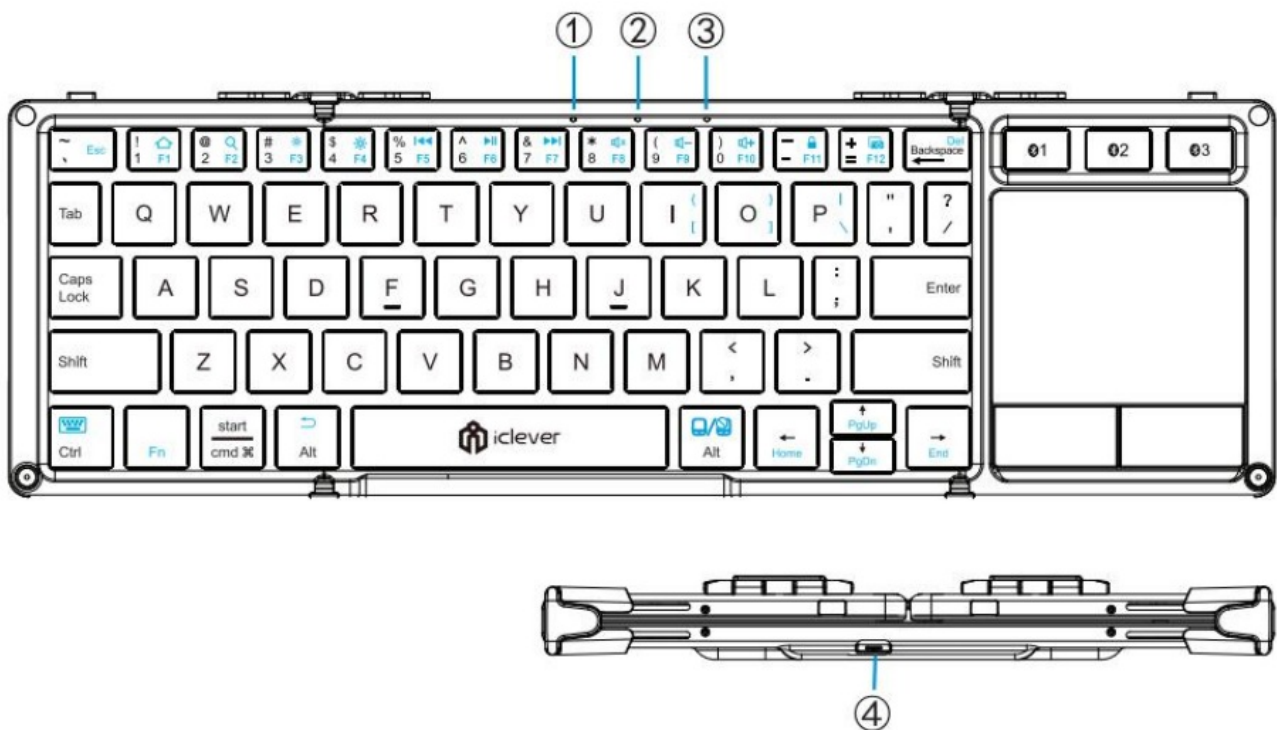 
- Ensure that the keyboard is compatible with your device's operating system.
- Refer to the user manual or contact iClever support for specific compatibility information.

Contact us

iClever support

Operating Guidelines

Indicator Light Descriptions



- Power on status: indicator ①②③ will light up in blue for 3 seconds when power on.
- Charging status: indicator ① will stay in red when charging and turn off once fully charged.
- Low battery status: indicator ①②③ will flash in red when it is time to charge.
- Bluetooth status: indicator ①/②/③ flash in blue when it is in Bluetooth pairing status and turn off once paired successfully.
- ④ Charging port: for charging only.

Note The charging port is USB-C port.


Connect your device



Pairing with devices


Pairing with 1st device

1. Unfold the keyboard to power it on, ①②③ indicator will turn to be blue for 3 seconds.


2. Hold and press key of  for 5 seconds to enter pairing mode in channel 1 until the indicator ① flash blue quickly.
3. On your device, under Bluetooth, find the Bluetooth name “iClever IC-BK08 Keyboard” and click to connect.
4. The indicator ① will turn off once paired successfully.

You can also make the connection to your new keyboard by watching our video tutorial.




Pairing with 2nd device

1. Hold and press key of  for 5 seconds to enter pairing mode in channel 2 until the indicator ② flash blue quickly.
2. On your device, under Bluetooth, find the Bluetooth name “iClever IC-BK08 Keyboard” and click to connect.
3. The indicator ② will turn off once paired successfully.

Pairing with 3rd device

1. Hold and press key of  for 5 seconds to enter pairing mode in channel 3 until the indicator ③ flash blue quickly.
2. On your device, under Bluetooth, find the Bluetooth name “iClever IC-BK08 Keyboard” and click to connect.
3. The indicator ③ will turn off once paired successfully.

Switch among connected channel





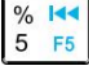




Press  /  /  to switch among the connected devices.






Re-pairing connected channels

Hold and press key of  /  /  for 5 seconds, it will enter pairing mode again. On your device find the Bluetooth name “iClever IC-BK08 Keyboard” and click to connect.


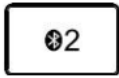





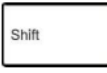
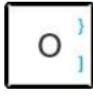



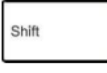




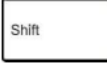

Features



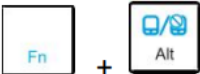

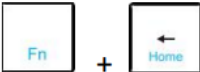
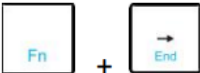
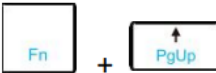
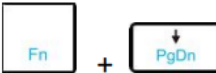
Functions Keys

Corresponding System	iOS	Android	Windows	Mac OS	Windows
Way to use	Press Fn +	Press Fn +	Press Fn +	Press Fn +	Press Fn+Shift+
	Home	Home	Web browser	Mission Control	F1
	Search	Search in browser or N/A	Search	Search	F2
	Lightness -	Lightness -	Lightness - (win10)	Lightness -	F3
	Lightness +	Lightness +	Lightness + (win10)	Lightness +	F4
	Previous track	Previous track	Previous track	Previous track	F5
	Play/pause	Play/pause	Play/pause	Play/pause	F6
	Next track	Next track	Next track	Next track	F7
	Mute	Mute	Mute	Mute	F8
	Volume -	Volume -	Volume -	Volume -	F9

	Volume +	Volume +	Volume +	Volume +	F10
	Screen lock	Screen lock	Screen lock	N/A	F11
	Screenshot	Screenshot	Screenshot	Screenshot	F12
	Esc or N/A	Esc or N/A	Esc	Esc	N/A
	Forward delete	Forward delete	Delete	Forward delete	N/A







Special Keys

Special Keys	iOS	Android	Windows	Mac OS
	Switching function: press to switch to channel 1. Pairing function: hold and press this key for 5s to enter pairing mode.			
	Switching function: press to switch to channel 2. Pairing function: hold and press this key for 5s to enter pairing mode.			
	Switching function: press to switch to channel 3. Pairing function: hold and press this key for 5s to enter pairing mode.			
	Under English(US) input method,press  +  , the "[" can be typed out; press  +  + this key, the "{" can be typed out.			
	Under English(US) input method,press  +  , the "]" can be typed out; press  +  + this key, the "}" can be typed out.			
	Under English(US) input method,press  +  , the "\" can be typed out; press  +  + this key, the " " can be typed out.			
	This key is combination used with blue color key to preform special function.			

	This key work as "start" or "Win" under Windows, and it works as "command" under iOS and Mac OS.			
	Keyboard Display	N/A	N/A	N/A
	Lock Touchpad on/off	Lock Touchpad on/off	Lock Touchpad on/off	Lock Touchpad on/off
	Esc or N/A	Back	Back	Esc
	Page up	Home	Home	Home
	Page down	End	End	End
	N/A	Page up	Page up	Page up
	N/A	Page down	Page down	Page down

Touchpad Function and Compatibility

Touchpad Function

	Windows	Android
 One finger click	Mouse left button	Mouse left button
 Slide one finger	Move mouse pointer	Move mouse pointer
 One finger quick click to hold and drag	Left button to select target to drag	Left button to select target to drag
 Two fingers click	Mouse right button	Back
 Two fingers move vertically or horizontally	Vertical, horizontal scroll	N/A
 Two fingers move	Zoom In/Out	N/A

Note: under Android device, the left button work as mouse left button, but right button work as function of back.

Touchpad Compatibility

1. Support Android, Windows, Mac OS.
2. Do not support on iPhone.
3. Support part of iPad model:
 12.9-inch iPad Pro, 11-inch iPad Pro, 10.5-inch iPad Pro, 9.7-inch iPad Pro, iPad (5/6/7th generation), iPad mini (5th generation), iPad mini 4, iPad Air (3rd generation), iPad Air 2.



FAQs

Bluetooth connectivity issues

Connection failed / Unable to connect

Please follow the troubleshooting steps below:

1. Please Please make sure that your iClever device and computer are within close proximity of each other.
2. Try moving away at least 8 inches (20 cm) from metal and other sources of wireless signal.
3. Delete all Bluetooth connection records, turn Bluetooth off on the device and turn it back on to refresh.
4. Connect again.
5. Try a different device to test.

Keystroke delay / Character repetition / Frequent disconnections

Please follow the troubleshooting steps below:

1. Restart your device and keyboard.
2. Charge the keyboard for 2 hours.
3. Check if there are any updates running in the background that may cause the delay.
4. Make sure your operating system (OS) is up to date.
5. Try on a different device to test.
6. Try moving away from metal and other sources of wireless signal:
Bluetooth Speakers, TWS, headphone, WiFi router, Computer power supplies, Strong WiFi signals, Metal or metal wiring in the wall, any device that could emit wireless waves: Microwave, cordless phone, baby monitor, wireless speaker, garage door opener.

Keyboard are not searched in the match list

Here are some troubleshooting tips to ensure that your iClever device is ready to connect:

1. Restart your Bluetooth device.
2. Make sure you are in Bluetooth pairing mode (the keyboard Bluetooth indicator will keep flashing when you are in Bluetooth pairing).
3. The pairing name may be shown as a keyboard icon (like 7B:08:22:19:27:B9).
4. Remove the iClever previous connection records and pair it again.

The output does not match the key symbols

For Windows/iOS/Mac OS users

Please ensure your input method corresponds to the keyboard layout. For example, if you are using a English(US) keyboard, please choose the English(US) input method. If you have it this way but the problem still persists, please keep us updated.

For Android users

Please ensure your input method corresponds to the keyboard layout by setting the Virtual Keyboard and the Physical Keyboard on your device.

1. Virtual Keyboard:

Step 1: Find the language-switching button which is usually represented by a globe icon on the virtual keyboard.

Step 2: Choose your language from the virtual keyboard. This will change the virtual keyboard layout to match your language.

2. Physical Keyboard:

Step 1: Go to the Settings menu on your device.

Step 2: Find and choose "Language and Input" on your android device. You may need to follow a slightly different path depending on the brand of your device.

Step 3: Find the option related to the physical keyboard settings and choose your language layout for your physical keyboard.

Touchpad issues

Touchpad not working

Possible solution for not-working touchpad:

1. Press "Fn+right Alt" to activate the touchpad.
2. If it doesn't make a difference, please reset the keyboard by pressing "fn+left shift+backspace" for 5 seconds.
3. Remove the Bluetooth record of the keyboard from your device's Bluetooth list. Turn off Bluetooth on your device, then turn it back on, and re-pair.
4. Reboot your device to refresh the system.
5. Ensure that your device's operating system is up to date.
6. Try connecting the keyboard to another device to verify if the issue persists.

Please note that for iOS and iPad OS users, you may need to enable Assistive Touch for accessing the touchpad,

please go to Settings > Accessibility > Touch > Assistive Touch.

Touchpad Sensitivity

Mac OS/Windows:

Please note that touchpad sensitivity adjustment is not available on Mac and Windows systems.

iOS:

Setting > General > Trackpad & Mouse > follow on-screen instructions.

Android:

possible solution:

Settings – Mouse & touchpad- Additional mouse options – Pointer Options- Move “Select a pointer speed” to fast, tick “Enhance pointer precision”.

Please note that the exact settings may vary depending on the device brand and Android version.

Touchpad scrolling direction

Please note that the scrolling direction of the touchpad can't be changed in any operating system.

Does not hold a charge

1. Try using another USB cable and connect it to a different power source to charge for 2 hours (e.g., USB port on a computer or a different charging adapter).
2. Make sure that the voltage of the charger you are using is not greater than 5V. Higher voltage can potentially cause the keyboard to shut down.

Note: the charging indicator will turn green once the battery is fully charged and please unplug the cable.

Compatibility issues and scope of compatibility

Incompatible range at this stage:

- Devices: Steam deck, PlayStation (PS4, PS5), XBOX, Smart TV
- System: Linux all, Ubuntu all
- Other: 3rd party Bluetooth adapters 4.0 and below, remote desktop software

Range of compatibility at this stage:

- System version: Windows 8 or later, Mac OS 10.12 or later, iOS 9.0 or later, Android 6.0 or later , Chrome OS

Contact us


iClever support

Your feedback is important to us.

If you have any question or idea want to share, please contact our team by:

iclever@support.com

Documents / Resources

 <p>iclever IC-BK08 Multi Device Foldable Wireless Keyboard User Manual</p>	<p>iclever IC-BK08 Multi Device Foldable Wireless Keyboard [pdf] User Manual</p> <p>IC-BK08, IC-BK08 Multi Device Foldable Wireless Keyboard, Multi Device Foldable Wireless Keyboard, Device Foldable Wireless Keyboard, Foldable Wireless Keyboard, Wireless Keyboard, Keyboard</p>
--	---

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.