

iclever IC-BK10 Multi Device Connection Wireless Keyboard **User Manual**

Home » iclever » iclever IC-BK10 Multi Device Connection Wireless Keyboard User Manual



iclever IC-BK10 Multi Device Connection Wireless Keyboard User Manual



Multi-Device Connection Wireless Keyboard

IC-BK10

UK User Manual

Thank you for choosing iClever! Please read this user manual carefully before use and keep it on hand for future reference.

Contents


- 1 PACKAGE CONTENTS
- **2 SPECIFICATIONS**
- **3 PRODUCT OVERVIEW**
- **4 KEYS AND FUNCTIONS**
- **5 GRAY KEYS**
- **6 PAIRING INSTRUCTIONS**
- 7 HOW TO SWITCH THE LANGUAGE
- **8 HOW TO SET YOUR DESIRED**
- **LANGUAGE**
- **9 SYSTEM REQUIREMENTS**
- 10 CHARGE THE KEYBOARD
- **11 FAQ**
- 12 FRIENDLY TIPS
- 13 AFTER-SALES SERVICE
- 14 Documents / Resources
 - 14.1 References

- 1 x Keyboard 1 x Charging Cable 1 x User Manual

SPECIFICATIONS

| Bluetooth Version | Bluetooth 5.1 | |
|----------------------------|----------------------------------|--|
| Size | 366*125*16.2mm/14.41*4.92*0.64in | |
| Operating Range | <10m/32.81ft | |
| Charging Time | 4 Hours | |
| Working Time | 192 Hours | |
| Lithium Battery Capacity | 500 mAh | |
| Key Life | 3 Million | |
| Front Side Material | ABS | |
| Back Side Material | Stainless Steel | |
| Frequency Band | 2402MHz~2480MHz | |
| Maximum Transmission Power | 0 dBm | |

PRODUCT OVERVIEW

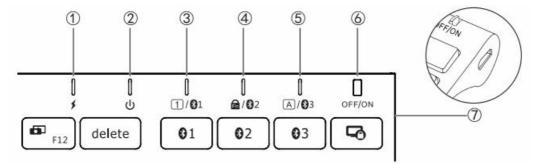

1 Charging Indicator.

It's in red while charging and turns green after fully charged.

2 Power Indicator.

When power on the keyboard, the indicator will be on for 3s. When power is low, the indicator will keep flashing. Press "fn" + F6" keys to check the battery (each flash represents 25% battery, 4 flashes in total).

3 Number Lock & Bluetooth Indicator.

Press the "numlk" key to activate or cancel number lock function. When the indicator is on, the number lock function is activated.

Press and hold key for 5s to Bluetooth pairing mode, and the indicator will keep flashing.

4 Fn Lock & Bluetooth Indicator.

Press "fn" + esc" keys to activate or cancel Fn lock function. When the indicator is green, the fn lock function is on.

Press and hold key for 5s to Bluetooth pairing mode, and the indicator will keep flashing.

⑤ Caps Lock & Bluetooth Indicator.

Press the "caps lock" key to switch between uppercase and lowercase.

Press and hold key for 5s to Bluetooth pairing mode, and the indicator will keep flashing.

6 Power Switch:

Slide the "OFF/ON" key to power off/on the keyboard.

Micro Charging Port: for charging.

KEYS AND FUNCTIONS

The table below describes special key combinations for different operating systems.

| Media Keys | Media Functions * For Windows 10 and Android users, press "fn" + F1~F12 keys to access media functions. |
|------------|--|
| F1 | Brightness - |
| F2 | Brightness + |
| F3 | Works as Home under iOS. Works as Web Browser under Windows. Works as Mission Control under Mac OS. |
| F4 | Works as Search (may not work in Android) |
| F5 | Battery Check (each flash represents 25% battery, 4 flashes in total) |
| F6 | Previous track |
| F7 | Play/pause |
| F8 | Next track |
| F9 | Mute |
| F10 | Volume - |
| F11 | Volume + |
| F12 | Screenshot (may not work in Android) |
| esc 🝙 | The "fn" key is used in combination with other keys to access special features. |
| fn | Press "fn" + "esc" keys to activate or cancel "fn" lock function. Your keyboard has by default access to the Media and Hotkeys such as Volume Up, Play/Pause, Volume down, and so on. If you prefer to have direct access to your F-keys simply press"fn"+"esc" on your keyboard to swap them. |

| Special Keys | Description | |
|-----------------|---|--|
| 0 1 | Press this key to switch to Bluetooth channel 1. Hold and press this key for 5s to enter Bluetooth pairing mode in Bluetooth Channel 1. | |
| @ 2 | Press this key to switch to Bluetooth channel 2. Hold and press this key for 5s to enter Bluetooth pairing mode in Bluetooth Channel 2. | |
| © 3 | Press this key to switch to Bluetooth channel 3. Hold and press this key for 5s to enter Bluetooth pairing mode in Bluetooth Channel 3. | |
| 8 | Press this key to work as screen lock. Note: It may not work for Android. | |
| numlk clear | This key will work as "number lock" when your system is Windows and "clear" when your system is Mac OS. | |
| win alt ~ | This key will work as "win" when your system is Windows and "option" when your system is iOS/Mac OS. | |
| alt cmd ≆ | This key will work as "alt" when your system is Windows/Android and "command" when your system is iOS/Mac OS. | |
| alt gr cmd # | This key will work as "alt gr" when your system is Windows/ Android and "command" when your system is iOS/Mac OS. | |
| ctrl alt ~ | This key will work as "ctrl" when your system is Windows/ Android and "option" when your system is iOS/Mac OS. | |
| 4 A P | Press "fn" + up arrow key to work as page up. Press "fn" + down arrow key to work as page down. Press "fn" + left arrow key to work as home. Press "fn" + right arrow key to work as end. | |

GRAY KEYS

Gray Keys are used for Mac OS and iOS users.

Before to use, please press change the input method to **British** (not PC-British). You can press ctrl+space keys to change the input method.

| Special gray key | iOS and Mac OS | Gray Key | iOS and Mac OS |
|--|----------------|---|----------------|
| 7 ± .18 | § | Shift+ | ± |
| ~ I # \ | \ | Shift+ = | Î |
| Shift+ □ ⊕ 2 € | @ | $\begin{bmatrix} \frac{\text{win}}{\text{alt}} \\ \end{bmatrix} + \begin{bmatrix} " & \textcircled{0} \\ 2 & \in \end{bmatrix}$ | € |
| $\begin{bmatrix} \frac{\text{win}}{\text{alt} \infty} \end{bmatrix} + \begin{bmatrix} £ \\ 3 \end{bmatrix} \#$ | # | Shift+ @ " | |
| 1- | | Shift+ | ~ |

Note: neans to press this key directly. Shift + related key means press shift and related keys simultaneously.

PAIRING INSTRUCTIONS

| a.How to pair with Bluetooth devices? Pair with the 1st device |
|---|
| Step 1. Slide the "OFF/ON" key to power on the keyboard. |
| Step 2. Press and hold e1 key for 5 seconds until the indicator keeps |
| flashing. Step 3. On your Bluetooth device, find the Bluetooth name "iClever IC-BK10 Keyboard" and click to connect it. |
| Step 4. The status indicator will turn blue after successful pairing. |
| Pair with the 2nd device |
| Step 1. Slide the "OFF/O <u>N" key</u> to power on the keyboard. |
| Step 2. Press and hold key for 5 seconds until the indicator keeps flashing. |
| Step 3. On your Bluetooth device, find the Bluetooth name "iClever IC-BK10 Keyboard" and click to connect it. |
| Step 4. The status indicator will turn blue after successful pairing. |
| Pair with the 3rd device |
| Step 1. Slide the "OFF/ON" key to power on the keyboard. |
| Step 2. Press and hold less key for 5 seconds until the indicator keeps flashing. |
| Step 3. On your Bluetooth device, find the Bluetooth name "iClever IC-BK10 Keyboard" and click to connect it. |
| Step 4. The status indicator will turn blue after successful pairing. |
| Note: |
| Each Bluetooth channel can pair with only 1 device. When you turn on the keyboard, it will connect with the last-used device automatically. If the connection fails, please try as below: On your device, delete the Bluetooth connection records of "iClever IC-BK10 Keyboard". On your device, turn Bluetooth off and turn Bluetooth on again and follow the above instructions for re-pairing. |
| b. How to switch the devices that have already been connected? |
| Press 01 / 02 / 03 key to switch among connected devices. |
| Note: Do not press and hold 1 / 02 / 03 key more than 5 seconds when you switch among connected devices. |

c.How to re-connect a Bluetooth channel that has been already connected?

- Step 1. Press 1 / 2 / 93 key to choose the Bluetooth channel 1/2/3 you want to re-connect.
- Step 2. Press and hold 1 / 02 / 03 key for 5 seconds to enter Bluetooth pairing mode again.
- Step 3. On your Bluetooth device, find the Bluetooth name "iClever IC-BK10 Keyboard" for connection.
- Step 4. The status indicator will turn blue after successful pairing.

HOW TO SWITCH THE LANGUAGE

Windows 10: win + space or alt + shift

Mac OS: ctrl + space iOS: ctrl + space

Note: there is no common way to switch input language for Android.

HOW TO SET YOUR DESIRED LANGUAGE

As this is a multilingual keyboard, set the language of the device to your desired language before use.

For iOS devices:

Settings > General > Keyboard > Keyboards > Add New Keyboard > Select desired language

For Windows devices:

Win > Settings > Time&Language > Language > Add a language > Select desired language

For Mac OS devices:

Apple > System Preferences > Keyboard > Input Sources > Click "+" > Select desired language

SYSTEM REQUIREMENTS

- 1. iOS 9.0 and above
- 2. Mac OS X 10.12 and above
- 3. Windows XP / Vista / 7 / 8 / 10, PC with a Bluetooth host.
- 4. Android 3.0 and above with Bluetooth HID profile (Smartphones and Tablets)

Note:

This keyboard is not fully compatible with Samsung Smart TV, Mac mini, iPad mini 5, Nokia phones and Bluetooth adapter.

CHARGE THE KEYBOARD

If the keyboard stops working, please use the included charging cable directly to connect the keyboard with the computer USB port for charging.

(Note: Output: DC 5V/200mA; USB charger is not included.)

FAQ

Q: Keyboard fails to connect.

- Charge the keyboard for 30 minutes.
- On your device, delete/remove the previous connection record of "iClever IC-BK10 Keyboard".
- On your device, turn Bluetooth off, and then turn Bluetooth on again.
- Make sure that your iClever device and computer are within close proximity of each other.
- Try on a different computer/smart phone/tablet.

Q: Keyboard frequently gets disconnected or laggy.

Typing lag most often occurs as the result of a lack of memory/system setting/PC poor performance/signal environment. Please try as blow to check:

- Restart your Bluetooth device.
- · Charge the keyboard for 30 minutes.
- Make sure that your iClever Bluetooth keyboard and computer are within close proximity of each other.
- · Do not use it on metal surfaces.
- Try to move it away from any device that could emit wireless waves, such as microwave, cordless phone, baby monitor, wireless speaker, garage door opener, WiFi router, Computer power supplies and metal
- Make sure your operating system (OS) is up to date.
- Check if there are any updates running in the background that may cause the delay.
- Try on a different computer/smart phone/tablet.

FRIENDLY TIPS

This keyboard is not splash, dust and water resistance, please avoid splashing water and drooping some snacks on the keyboard so as not to affect the normal use of the keyboard.

AFTER-SALES SERVICE

Email: support@iclever.com

Documents / Resources

<u>iclever IC-BK10 Multi Device Connection Wireless Keyboard</u> [pdf] User Manual IC-BK10, IC-BK10 Multi Device Connection Wireless Keyboard, Multi Device Connection Wireless Keyboard, Device Connection Wireless Keyboard, Connection Wireless Keyboard, Wireless Keyboard, Keyboard

References

• User Manual

Manuals+, Privacy Policy