

iClever IC-BK50 Multi-Device Connection Wireless Keyboard



iClever IC-BK50 Multi Device Connection Wireless Keyboard Instruction Manual

[Home](#) » [iclever](#) » iClever IC-BK50 Multi Device Connection Wireless Keyboard Instruction Manual 

Contents

- [1 iClever IC-BK50 Multi-Device Connection Wireless Keyboard](#)
- [2 Product Usage Instructions](#)
- [3 Indicator Light Descriptions](#)
- [4 Connect your device](#)
- [5 Features](#)
- [6 Special Keys](#)
- [7 FAQs](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



iClever IC-BK50 Multi-Device Connection Wireless Keyboard



Specifications

- **Product:** Multi-device Connection Wireless Keyboard
- **Model:** IC-BK50

Product Usage Instructions

Operating Guidelines

Indicator Light Descriptions

Connect Your Device

1. Charge the keyboard for 2 hours.
2. Slide the power switch to power on.
3. Press **fn + Q** to channel 1 and press **fn + Z** to enter Bluetooth pairing mode.
4. The Bluetooth indicator will flash.
5. On your Bluetooth device, find the Bluetooth name **iClever BK50 KB** and click to connect.
6. The Bluetooth indicator will turn off once paired successfully.

Pairing with 2nd and 3rd Devices

(Similar steps as above, replacing Q/W/E for different channels)

Switch Among Connected Channels

Press **fn + Q/W/E** to switch among the connected devices.

Re-pairing Connected Channels

1. Press **fn + Q/W/E** to choose the channel you want to re-pair.
2. Hold and press **fn + Z** to repair again.
3. On your Bluetooth device, find the Bluetooth name **iClever BK50 KB** and click to connect.

Features

- Detailed function key usage instructions for various operating systems.

Special Keys

- Description of special keys and their functions.

FAQs


Bluetooth Connectivity Issues

1. Connection failed / Unable to connect
2. Keystroke delay / Character repetition / Frequent disconnections
3. The keyboard is not found in the match list
4. The output does not match the key symbols
5. Compatibility issues and scope of compatibility

Contact Us

iClever support: For any further assistance or inquiries, please contact iClever support.

Indicator Light Descriptions

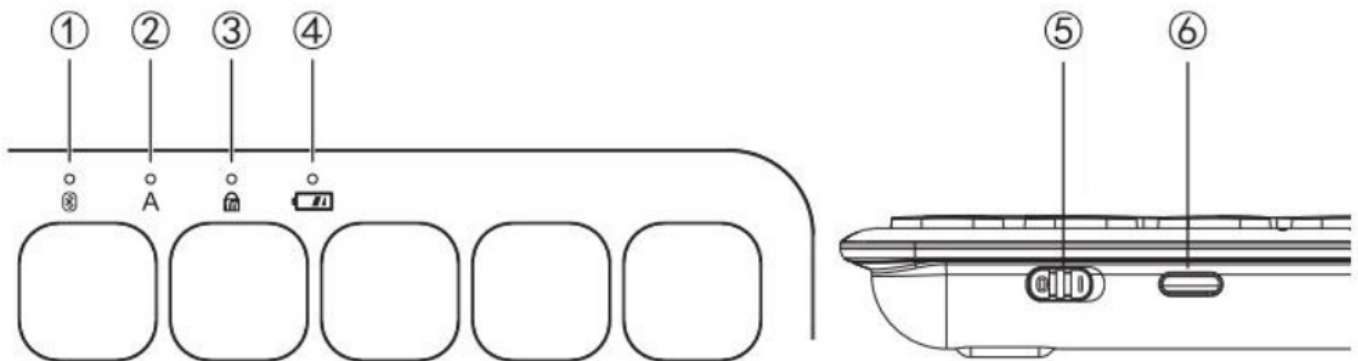

1. Power & Bluetooth Indicator

- **Power Indicator:** when powering on the keyboard, it will be on for 3 seconds.
- **Bluetooth Indicator:** press “fn” + “Z”, and the indicator will flash to Bluetooth pairing mode.

2. Caps Lock Indicator

- **Caps Lock Indicator:** press the “caps lock” key to switch between uppercase and lowercase. When the indicator is on, works as uppercase letters.
- **Note:** the indicator may be off when used in Android.
- When the indicator is off, works as lowercase letters.

3. Fn Lock Indicator

- **Fn Lock Indicator:** press “fn” + “esc” to activate the fn lock function.
- When the indicator is on, F1-F12 works as F1-F12.

- When the indicator is off, F1-F12 works as a multi-media function.

4. Charging Indicator

- **Charging Indicator:** stay in red when charging and turn off after fully charging.

5. **Power Switch:** slide the power switch to “I” to power it on.

6. **Charging Port:** for charging.

- **Note:** the charging port is a Type-C port.

Connect your device



Pairing with devices

Pairing with 1st device

1. Charge the keyboard for 2 hours.
2. Slide the power switch to power on.
3. Press “fn” + “Q” to channel 1 and press “fn” + “Z” to Bluetooth pairing mode, and the Bluetooth indicator will keep flash.
4. On your Bluetooth device, find the Bluetooth name “iClever BK50 KB” and click to connect it.
5. The Bluetooth indicator will turn off once paired successfully.

Pairing with 2nd device

1. Press “fn” + “W” to channel 2 and press “fn” + “Z” to Bluetooth pairing mode, and the Bluetooth indicator will keep flashing.
2. On your Bluetooth device, find the Bluetooth name “iClever BK50 KB” and click to connect it.
3. The Bluetooth indicator will turn off once paired successfully.

Pairing with 3rd device

1. Press “fn” + “E” to channel 3 and press “fn” + “Z” to Bluetooth pairing mode, and the Bluetooth indicator will keep flashing.
2. On your Bluetooth device, find the Bluetooth name “iClever BK50 KB” and click to connect it.
3. The Bluetooth indicator will turn off once paired successfully.

Switch among connected channel













- Press “fn” + “Q/W/E” to switch among the connected devices.

Re-pairing connected channels





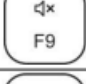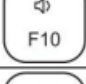


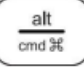



1. Press “fn” + “Q/W/E” to choose the channel 1/2/3 you want to repair.
2. Hold and press “fn” + “Z” to repair again.
3. On your Bluetooth device, find the Bluetooth name “iClever BK50 KB” and click to connect it.

Features

Functions Keys

Corresponding System	iOS & iPad OS	Mac OS	Android	Windows	Windows Mac OS
Way to use	Press directly	Press directly	Press directly	Press directly	Press Fn +
 F1	Brightness -	Brightness -	Brightness -	Brightness -	F1
 F2	Brightness +	Brightness +	Brightness +	Brightness +	F2
 F3	Home	Mission Control	Home	Web browser	F3
 F4	N/A for iOS	Switch apps	N/A	Switch apps	F4
 F5	Search	Search	Search or N/A	Search	F5
 F6	Previous track	Previous track	Previous track	Previous track	F6
 F7	Play/pause	Play/pause	Play/pause	Play/pause	F7
 F8	Next track	Next track	Next track	Next track	F8
 F9	Mute	Mute	Mute	Mute	F9
 F10	Volume -	Volume -	Volume -	Volume -	F10
 F11	Volume +	Volume +	Volume +	Volume +	F11
 F12	Screenshot	Screenshot	Screenshot	Screenshot	F12

Special Keys

Special Keys	Description
	Press “fn” + “esc” keys to turn on/off fn lock function. Your keyboard has by default access to the Media and Hotkeys such as Volume Up, Play/Pause, Mute and so on. If you prefer to have direct access to your F-keys simply press “fn” + “esc”.
	Press “fn” + “delete” to work as screen lock.
	Press “fn” + “Q” to Bluetooth Channel 1.
	Press “fn” + “W” to Bluetooth Channel 2.
	Press “fn” + “E” to Bluetooth Channel 3.
	Press “fn” + “Z” to Bluetooth pairing mode, and the Bluetooth indicator will flash.
	It works as “win” when your system is Windows or Android. It works as “option” when your system is iOS or Mac OS.
	It works as “alt” when your system is Windows or Android. It works as “command” when your system is iOS or Mac OS.
	It works as “ctrl” when your system is Windows or Android. It works as “option” when your system is iOS or Mac OS.
	Hidden function: fn + up arrow = Page Up, fn + down arrow = Page Down fn + left arrow = Home, fn + right arrow = End
	The “fn” key is used in combination with other keys to access special features.

FAQs

Bluetooth connectivity issues

Connection failed / Unable to connect

Please follow the troubleshooting steps below:

1. Please Please make sure that your iClever device and computer are within proximity of each other.
2. Try moving away at least 8 inches (20 cm) from metal and other sources of wireless signal.
3. Delete all Bluetooth connection records, turn Bluetooth off on the device, and turn it back on to refresh.
4. Connect again.
5. Try a different device to test.

Keystroke delay / Character repetition / Frequent disconnections

Please follow the troubleshooting steps below.

1. Restart your device and keyboard.
2. Charge the keyboard for 2 hours.
3. Check if any updates are running in the background that may cause the delay.
4. Make sure your operating system (OS) is up to date.
5. Try on a different device to test.
6. Try moving away from metal and other sources of wireless signal:
 - Bluetooth Speakers, TWS, headphones, WiFi routers, Computer power supplies, Strong WiFi signals, Metal or metal wiring in the wall, and any device that could emit wireless waves:
 - Microwave, cordless phones, baby monitors, wireless speakers, garage door openers.

Keyboards are not searched in the match list

Here are some troubleshooting tips to ensure that your iClever device is ready to connect.

1. Restart your Bluetooth device.
2. Make sure you are in Bluetooth pairing mode (the keyboard Bluetooth indicator will keep flashing when you are in Bluetooth pairing).
3. The pairing name may be shown as a keyboard icon (like 7B:08:22:19:27:B9).
4. Remove the iClever previous connection records and pair them again.

The output does not match the key symbols

- For Windows/iOS/Mac OS users
- Please ensure your input method corresponds to the keyboard layout. For example, if you are using an English(US) keyboard, please choose the English(US) input method.
- If you have it this way but the problem persists, please keep us updated.

For Android users

- Please ensure your input method corresponds to the keyboard layout by setting the Virtual Keyboard and the Physical Keyboard on your device.

Virtual Keyboard:

1. **Step:** Find the language-switching button which is usually represented by a globe icon on the virtual keyboard.
2. **Step:** Choose your language from the virtual keyboard. This will change the virtual keyboard layout to match your language.

Physical Keyboard:

1. **Step:** Go to the Settings menu on your device.

- 2. **Step:** Find and choose “Language and Input” on your Android device. You may need to follow a slightly different path depending on the brand of your device.
- 3. **Step:** Find the option related to the physical keyboard settings and choose your language layout for your physical keyboard.

Does not hold a charge

- 1. Try using another USB cable and connect it to a different power source to charge for 2 hours (e.g., a USB port on a computer or a different charging adapter).
 - 2. Make sure that the voltage of the charger you are using is not greater than 5V. Higher voltage can potentially cause the keyboard to shut down.
- **Note:** the charging indicator will turn green once the battery is fully charged and please unplug the cable.
 - Compatibility issues and scope of compatibility

Incompatible range at this stage:

- **Devices:** Steam deck, PlayStation (PS4, PS5), XBOX, Smart TV
- **System:** Linux all, Ubuntu all
- **Other:** 3rd party Bluetooth adapters 4.0 and below, remote desktop software


Range of compatibility at this stage:

- **System version:** Windows 8 or later, Mac OS 10.12 or later, iOS 9.0 or later, Android 6.0 or later, Chrome OS

Contact us at iClever support

- Your feedback is important to us.
- If you have any questions or ideas want to share, please contact our team at: support@iclever.com

Documents / Resources

	iClever IC-BK50 Multi Device Connection Wireless Keyboard [pdf] Instruction Manual IC-BK50 Multi Device Connection Wireless Keyboard, IC-BK50, Multi Device Connection Wirele ss Keyboard, Device Connection Wireless Keyboard, Connection Wireless Keyboard, Wireless Keyboard, Keyboard
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.