



Home » ICM CONTROLS » ICM CONTROLS ICM492 Single Phase Voltage and Surge Protected

Disconnect Installation Guide ₹

Contents [hide]

- 1 ICM CONTROLS ICM492 Single Phase Voltage and Surge Protected Disconnect
- 2 IMPORTANT SAFETY INFORMATION
- **3 GENERAL INSTALLATION**
- **4 INSTALLATION WIRING DIAGRAM**
- **5 GENERAL OPERATIONS**
- 6 SENTRY 3N1 PRODUCT SPECIFICATIONS
- 7 TROUBLESHOOTING TIPS
- 8 REPLACEMENTS
- 9 SYSTEM WIRING DIAGRAM
- 10 Frequently Asked Questions
- 11 Documents / Resources
 - 11.1 References



ICM CONTROLS ICM492 Single Phase Voltage and Surge Protected Disconnect



Product Specifications

- Maximum Surge Capacity: 100,000 amps
- **Dimensions:** 6.5 inches Length x 4.75 inches Width x 1.09 inches Depth

Installation Instructions

- 1. Ensure the internal breaker is switched off before servicing connected equipment.
- 2. Disconnect all power at the main service panel.
- 3. Drill a hole for the waterproof whip and mount it to the enclosure.
- 4. Attach the four feet to the bottom of the enclosure.
- 5. Securely mount the Sentry 3N1 to the desired location using appropriate hardware.
- 6. Connect Line voltage 208/240VAC power wires to the breaker switch input and wire equipment load wires to the contactor output as per the wiring diagram.

General Operations

Ensure voltage setpoint of the ICM492 does not exceed 240VAC and is not more than 5% over voltage to prevent damage to the Sentry 3N1. The device monitors voltage surges and suppresses them within specified limits. Replace the ICM517A if surge suppression capability is compromised.

General Specifications

The ICM492 is a Single Phase Digital Line Voltage Monitor that constantly monitors and displays line voltage, protecting against over and under voltage, rapid short cycling, transient faults, and power interruptions. It has user-adjustable settings for customization.

Replacements

ICM492 Replacement:

Follow the safety instructions to replace the ICM492.

ICM517A Replacement:

The ICM517A is a NEMA Type 4X enclosed Type 2 Surge Protective Device designed to dissipate voltage spikes and transient surges. Replace it when necessary.

INSTALLATION, OPERATION & APPLICATION GUIDE

For more information on our complete range of American-made products – plus wiring diagrams, troubleshooting tips and more, visit us at www.icmcontrols.com

IMPORTANT SAFETY INFORMATION

ELECTRICAL SHOCK HAZARD – Before installing this unit, turn off power at the main service panel by removing the fuse or switching the appropriate circuit breaker to the OFF position.

Always shut off internal breaker before servicing connected equipment.

- This control should be installed by a trained professional
- Incorrect installation can cause personal injuries, property damage or even death.
- Follow all local & national codes while installing control.


GENERAL INSTALLATION

CAUTION: Remove all power at the main service panel before installing or servicing the Sentry 3N1 by switching off the appropriate breaker or removing the appropriate fuse. Also make sure the service disconnect breaker on the sentry 3N1 is in the OFF position.

- 1. With the Sentry 3N1 enclosure in a vertical position, drill an appropriately sized hole for the appropriate waterproof whip (NEMA rated waterproof wire raceway) you will be using.
- 2. Mount the appropriate NEMA rated waterproof wire raceway to the Sentry 3N1 enclosure.
- 3. Mount the four feet which come with the enclosure to the four corner holes in the bottom of the enclosure.
- 4. Lay the Sentry 3N1 against the desired mounting location and using appropriate hardware, fasten the Sentry 3N1 to the desired location through the holes in the feet.
- 5. Bring Line voltage 208/240VAC power wires to the breaker switch input and wire your equipment load wires to the contactor output as seen in the diagram below.

INSTALLATION WIRING DIAGRAM

(208/240 VAC)

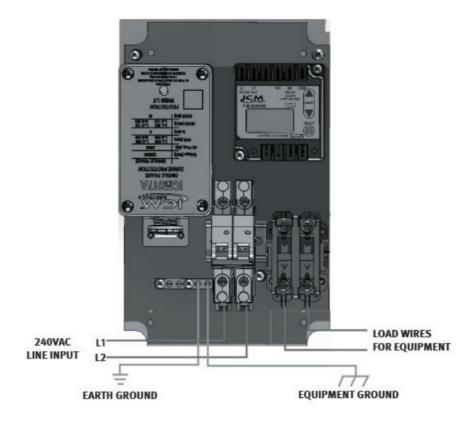

GENERAL OPERATIONS

Upon installation and application of power, the Sentry 3N1 from ICM controls will monitor the incoming line for voltage variation and surges. If the voltage is within the preset limits of the voltage monitor, the Sentry 3N1 will close the onboard contactor and power the

load. If there is an over or under voltage condition caused by incoming voltage varying outside the preset limits, the contactor will open and will not close again until the voltage is back within range. The parameters of the ICM492 voltage monitor can be customized for specific operation but it is recommended to leave them at the preset values.

CAUTION: Do not set the voltage setpoint of the ICM492 above 240VAC and no more than 5% over voltage or potential damage to Sentry 3N1 could occur.

The Sentry 3N1 will constantly monitor voltage surges and suppress surges within the limits of the ICM517A specifications. Once surge suppression capability is compromised, the LED on the ICM517A will stop illuminating and the ICM517A will require replacement.

SENTRY 3N1 PRODUCT SPECIFICATIONS

Input:

• Frequency: 50/60 Hz

Line voltage: 208/240 VAC

Surge Protection:

• Max Surge Protection: 100,000 amps

Output

• Type: Relay, SPDT

Contactor: 40A, 208/240VAC

Dimensions:

6.5"L x 4.75"W x 1.09"D

TROUBLESHOOTING TIPS

Problem	Trouble shooting tips	
Problem	Trouble shooting tips	

Contactor fails to close	1. Check to see if incoming voltage is out of range fro m the voltage settings on the ICM492.
	2. Check the control mode is turned off in the set-up menu of the ICM492.
	3. Make sure the control is not in a short cycle delay.
	4. Check your fault history to see if you are currently in a fault condition.
	5. Check contactor coil voltage and contactor operatio n and replace contactor if defective.
LED fails to illuminate on the ICM517A	Check wiring to make sure no wires are loose or broken
	2. Replace the ICM517A because the surge elements (TMOV'S) are spent

GENERAL SPECIFICATIONS

ICM492 Single Phase Digital Line Voltage Monitor

Constantly monitors and displays line voltage. Protects against over and under-voltage, and rapid short cycling caused by transient faults and power interruptions.



User Adjustable Settings:

• Voltage setpoint: 208-240VAC (default 240VAC; do not set above 240VAC or below

208VAC)

Anti-short cycle time delay: 10 seconds

• Over voltage setting: 5% (do not set above 5%)

• Under voltage setting: 5%

Control mode: Off

• Response time: 2 seconds

• Fault: 1 – 5 displays



REPLACEMENTS


CAUTION: Remove all power at the main service panel before installing or servicing the Sentry 3N1 by switching off the appropriate breaker or removing the appropriate fuse. Also make sure the service disconnect breaker on the sentry 3N1 is in the OFF position.

ICM492 Replacement:

- Please refer to the System Wiring Diagram for removal and replacement wiring of the ICM492.
- Disconnect all wiring to the ICM492 and remove the two fastening screws holding the ICM492 in place and set screws aside.
- Replace with new ICM492 and resecure and mount with the two fastening screws from previous step.

ICM517A Replacement:

- Please refer to the System Wiring Diagram for removal and wiring to replace the ICM517A.
- Loosen and remove locknut, bracket nut, and sealing ring (as seen in the diagram below).

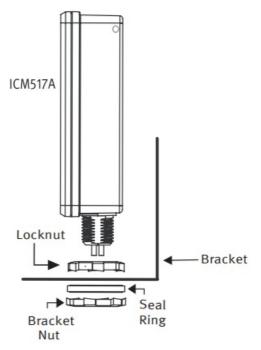

- Remove ICM517A from bracket. Replace ICM517A, reusing the locknut, bracket nut, and sealing ring form the previous step.
- Reassemble as shown. Be sure to tighten down locknut and bracket nut.

ICM517A Surge Protective Device

The ICM517A is a NEMA Type 4X enclosed Type 2 Surge Protective Device (SPD) designed to protect valuable single-phase equipment by dissipating momentary voltage spikes and transient power surges.



• Service Voltage: 240VAC, single phase

Maximum Surge Current: 100,000 amps

Maximum Energy Dissipation: 1,020 joules

• Diagnostics: Green light indicates surge suppression present

Enclosure: NEMA Type 4X waterproof metal enclosure

• AC Protection Modes: L-L, L-N, L-G, N-G

All wiring must conform to national, state and local electrical codes. 14AWG wire or larger required. Product contains no serviceable parts.


If the ICM517A has failed, the whole unit will need to be replaced. ATTENTION: No replaceable or repairable parts;

WARNING — SHOCK HAZARD — DO NOT OPEN;

ATTENTION - RISQUE DE CHOC - NE PAS OUVRIR



SYSTEM WIRING DIAGRAM

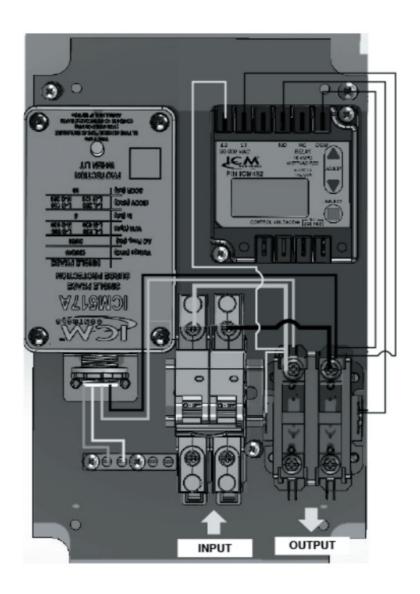

For warranty information and registration, please go to <u>www.icmcontrols.com</u> and click on Warranty Registration.

7313 William Barry Blvd., North Syracuse, NY 13212 www.icmcontrols.com



800.365.5525

Frequently Asked Questions

Q: What should I do if the contactor fails to close?

Troubleshooting Tips:

- 1. Check incoming voltage against ICM492 voltage settings.
- 2. Ensure control mode is turned off in ICM492 setup menu.
- 3. Verify control is not in a short cycle delay.
- 4. Review fault history for any ongoing issues.
- 5. Check contactor coil voltage and operation, replace if necessary.

Q: What if the LED fails to illuminate?

Troubleshooting Tips:

- 1. Check wiring for loose or broken connections on the ICM517A.
- 2. Replace the ICM517A if surge elements (TMOV's) are spent.

Documents / Resources



ICM CONTROLS ICM492 Single Phase Voltage and Surge Protected Dis

connect [pdf] Installation Guide

ICM492, ICM517A, ICM492 Single Phase Voltage and Surge Protected D isconnect, ICM492, Single Phase Voltage and Surge Protected Disconnect, Surge Protected Disconnect, Protected Disconnect

References

- User Manual
- ICM

CONTROLS

▶ ICM CONTROLS, ICM492, ICM492 Single Phase Voltage and Surge Protected Disconnect, ICM517A, Protected Disconnect, Single Phase Voltage and Surge Protected Disconnect

Leave a comment

Your email address will not be published. Required fields are marked				
omment *				
ame				
mail				
ebsite				
mail				

Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.