



ICP DAS PET-7000/ET-7000 Ethernet Remote I/O Module User Guide

[Home](#) » [ICP DAS](#) » ICP DAS PET-7000/ET-7000 Ethernet Remote I/O Module User Guide 

PET-7000/ET-7000
Quick Start
V1.4, March 2018



Contents

- [1 Supported Products](#)
- [2 Technical Support](#)
- [3 What's in the Box?](#)
- [4 Factory Default Settings](#)
- [5 Connecting to Network, Computer, and Power](#)
- [6 Assigning a Valid IP Address – Method 1](#)
- [7 3-2 Assigning a Valid IP Address – Method 2](#)
- [8 Logging in to the ET-7000 Module](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Supported Products

- ET-7000 Series
- ET-7000-UT Series
- PET-7000 Series

Technical Support

PET-7000 / ET-7000 User Manual http://ftp.icpdas.com/pub/cd/6000cd/napdos/et7000_et7200/document/

What's in the Box?



PET-7000/ET-7000 Module



Plastic Rail



 
Quick Start

Factory Default Settings


Network Connection	Default	Authentication	Default
IP Address:	192.168.255.1	User name:	Admin
Subnet Mask:	255.255.0.0	Password:	Admin
Gateway:	192.168.0.1		

Connecting to Network, Computer, and Power

Non-PoE

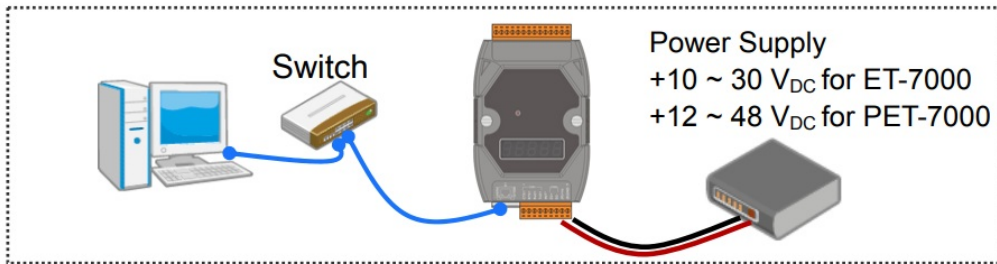


PoE

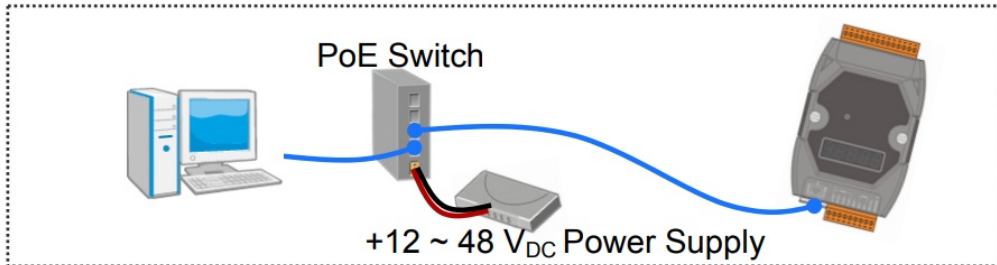 


Assigning a Valid IP Address – Method 1

 
1. Install eSearch from <http://ftp.icpdas.com/pub/cd/6000cd/napdos/software/esearch/>
2. Launch search and click “Search Server”

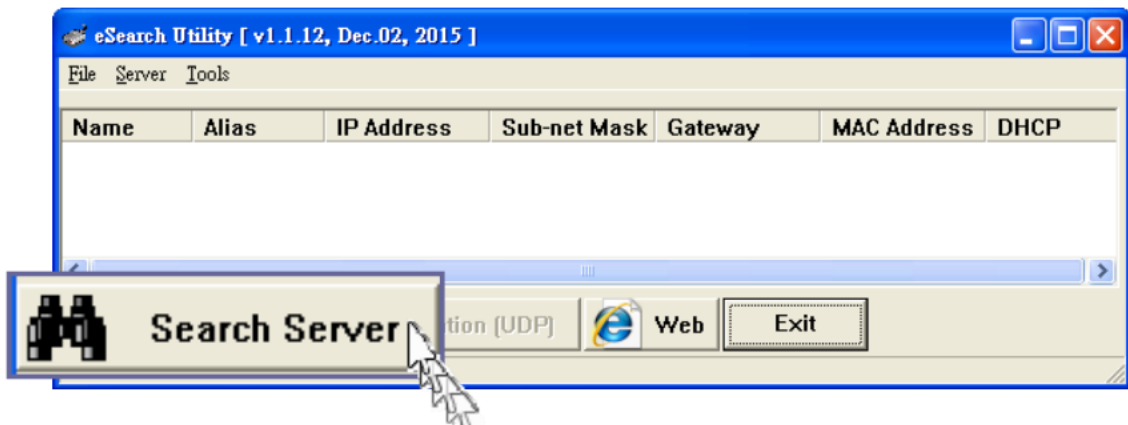

 3. Double-click the name for your module on the list

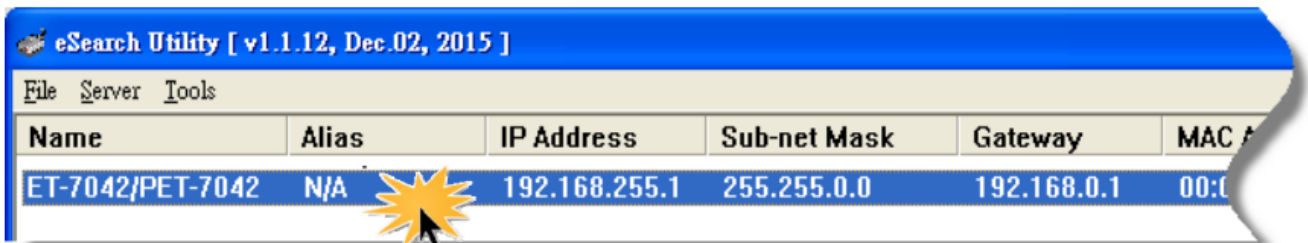

 4. Enter the network configuration and click “OK”

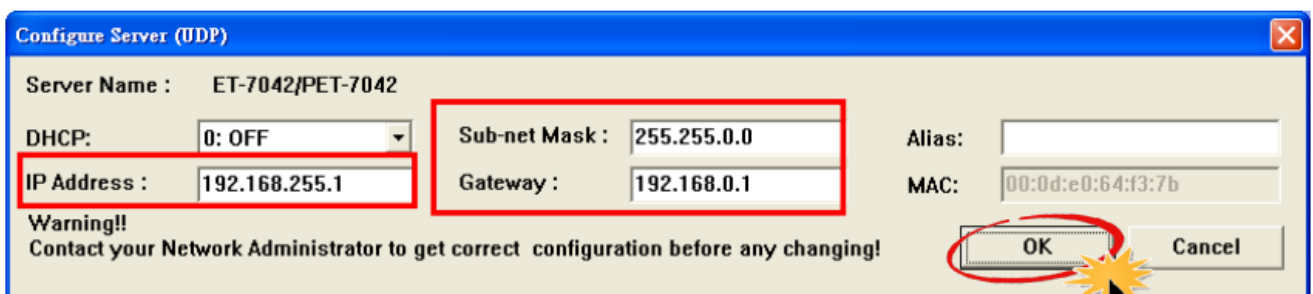

5. **Repeat Step 2. to search the module again**

To make sure your modifications take effect.

 
3-2 Assigning a Valid IP Address – Method 2

1. **Set the IP configuration on your computer**

The ET-7000 module comes with the default IP address of 192.168.255.1, you must choose an IP address for the computer in the range of 192.168.255.2 – 192.168.255.253 that is not in use.

2. **Launch your web browser to go to the ET-7000 web interface**

Enter the factory default IP address 192.168.255.1 for the ET-7000 as the URL in the browser and press Enter.

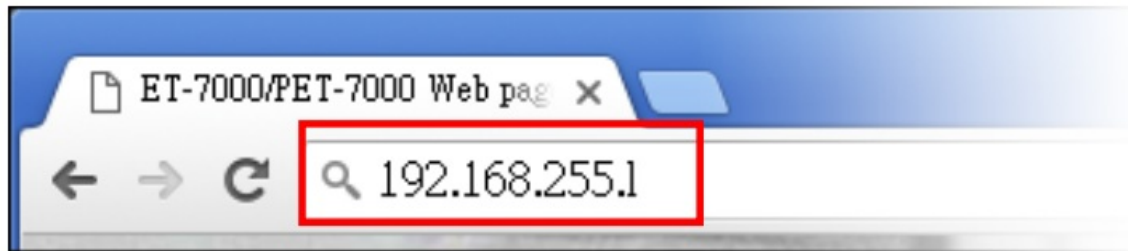


3. **Fill out the User name and Password**

Fill out the factory default user name and password “Admin” and then click “OK”.

4. **Assign a valid IP address for your ET-7000 module**

 1. Click “**Configuration**”
2. Click “**Network Settings**” in the sub-menu
3. Enter a valid IP address for your ET-7000 module.
4. Click the “**SUBMIT**” button.

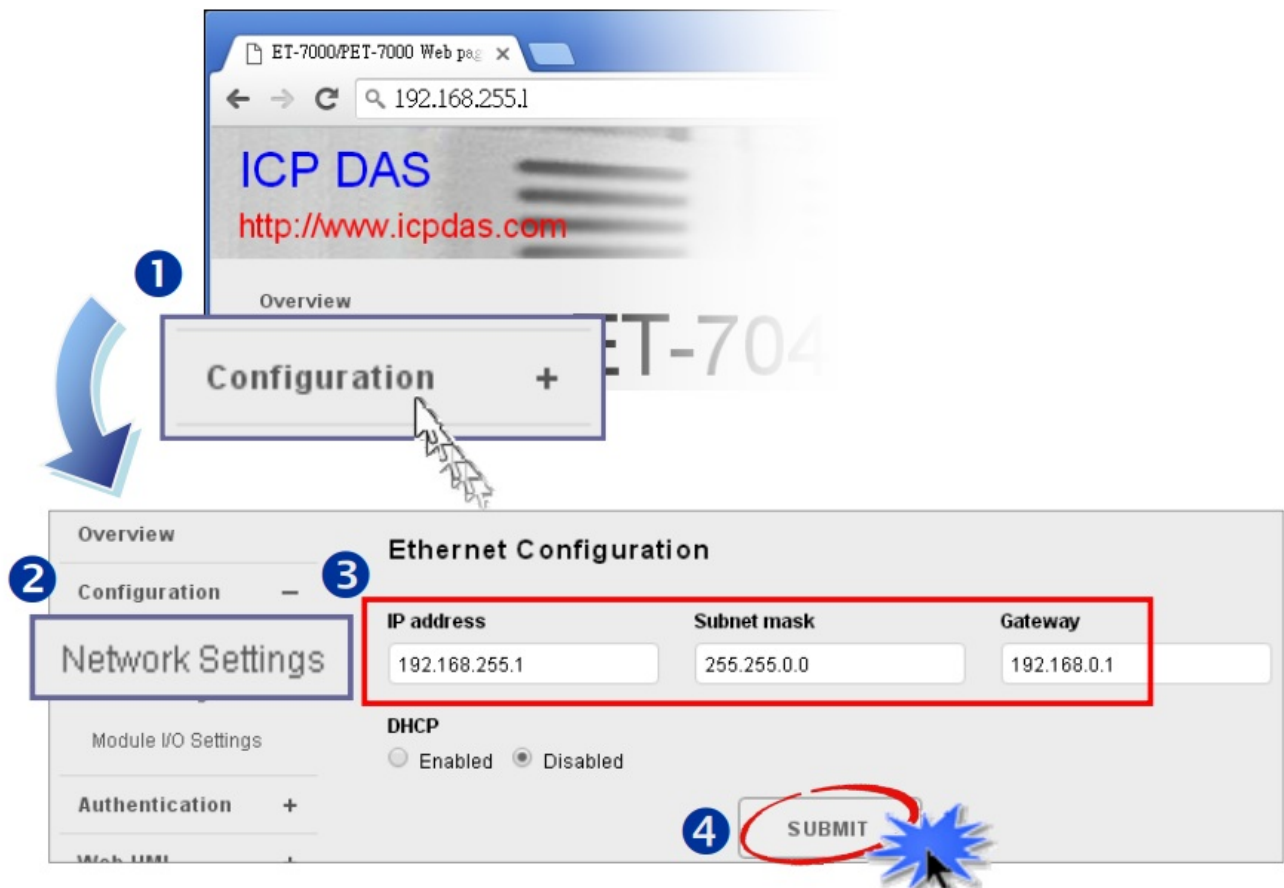


5. Restore the original IP address to your computer

Logging in to the ET-7000 Module

1. Enter the new IP for the ET-7000 as the URL in the browser
2. Fill out the User name and Password “Admin” again
3. Welcome to the ET-7000 website

Technical Support: service@icpdas.com

 Documents / Resources

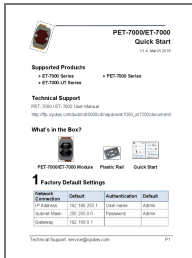

PET-7000/ET-7000
Quick Start
V1.0, November 2010

Supported Products

- ET-7000 Series
- ET-7000-UT Series
- PET-7000 Series

Technical Support

PET-7000-UT: Not applicable
For ICP DAS Company products, please contact ICP DAS Technical Support

What's in the Box?

PET-7000/ET-7000 Modules Power Rail Quick Start

1 Factory Default Settings

Category	Default	Authentication	Default
IP Address	192.168.255.1	User name	Admin
Default user	192.168.255.1	Password	Admin
Category	192.168.255.1		

Technical Support: service@icpdas.com

[ICP DAS PET-7000/ET-7000 Ethernet Remote I/O Module](#) [pdf] User Guide
ET-7000 Series, ET-7000-UT Series, PET-7000 Series, PET-7000, ET-7000, Ethernet Remote I
O Module, PET-7000 ET-7000 Ethernet Remote I O Module

References

- ftp://icpdas.com/pub/cd/6000cd/napdos/et7000_et7200/document/
- <ftp://icpdas.com/pub/cd/6000cd/napdos/software/esearch/>