

# iCT H6422G-R Interational Currency Techologies Installation Guide

Home » ICT » iCT H6422G-R Interational Currency Techologies Installation Guide 1

#### **Contents**

- 1 iCT H6422G-R Interational Currency
- **Techologies**
- **2 Limited Warranty**
- **3 Model Number Configuration**
- 4 Introduction
- **5 Specification**
- **6 Dimension**
- 7 Installation
- 8 Download
- 9 Software Download by IrDA Kit
- 10 DCM5 Connectors
- 11 MDB PCB Board Module
- 12 Harness
- 13 How to use DCM5
- 14 Maintenance
- 15 Accessory List
- 16 Contacts
- 17 Documents / Resources
  - 17.1 References



iCT H6422G-R Interational Currency Techologies



#### **Use of Materials Limitations**

International Currency Technologies Corporation (ICT) all rights reserved.

All materials contained are the copyrighted property of ICT.

All trademarks, service marks, and trade names are proprietary to ICT.

ICT reserves the right at all times to disclose or to modify any information as ICT deems necessary to satisfy any applicable law, regulation, legal process or governmental request, or to edit, refuse to post or to remove any information or materials, in whole or in part, in ICT's sole discretion.

### **Limited Warranty**

International Currency Technologies Corporation (ICT) warrants this product (including any accessories) against defects of material or workmanship as follows:

#### **LABOR**

• For a period of one(1) year from the date of purchase, if this Product is determined to be defective, ICT will repair or replace the Product, at its option, at no charge, or pay the labor charges to any ICT authorized service facility. After the Warranty Period, you must pay for all labor charges.

#### **PARTS**

• In addition, ICT will supply, at no charge, new or rebuilt replacements in exchange for defective parts for a period of one(1) year. After the warranty period, you must pay for all parts costs.

### **ACCESSORIES**

• Parts and labor for all accessories are for one (1) year.

To obtain warranty service, you must take the Product, or deliver the Product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to any authorized ICT service facility.

This warranty does not cover cosmetic damage or damage due to acts of accident, misuse, abuse, negligence, modification, or to any parts of the Product. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by ICT to service the Product.

This warranty does not cover Products sold AS IS or WITH ALL FAULT, or consumables (such as cleaning cards or bezel stickers). Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service. This warranty is invalid if the factory applied serial number has been altered or removed from the Product.


To locate the service or dealer nearest you, or for service assistance or resolution of a service problem, for product information, or operation, please call:

• Taiwan: 886-2-2793-1236

• Europe: +49-0-2102-123-775-0

• visit the ICT Web Site: www.ictgroup.com.tw

### **Model Number Configuration**

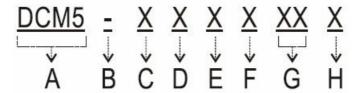

Example: DCM5-2TPM-CH6

A: Product Name

• B: Cover color

• C: Voltage

· D: Back Plate

• E: Cover

• F: Interface

· G: Country of Document

• H: Accept document type

• I: Customer

# • J: Special code

### A. Product name

2 TABLE 01

Product name	
DCM5	

## **B.** Cover Color

2 TABLE 02

Code	Cover Color	
s=	Silver Cover	
1	Black matte	
2	Black glossy	

# C. Voltage

2 TABLE 03

Code	Voltage
2	DC 12V

# D. Back plate

2 TABLE 04

Code	Back plate
Т	For TOB(Tabacoland)
R	Back Plate and Red Rubber(Deep 1mm swipe Slot type)
Υ	Back Plate and Yellow Rubber(Deep 1mm swipe Slot type)
0	Non- Back Plate

## E. Cover

### D. Interface

Code	Cover	
Р	Anti-dirt cover	
0	Non- cover	

### (G & H). Country of Document

2 TABLE 07

Code	Country	Document Type		
	Germany	ODL & OID & NIDL& NID		
	France	ID		
CH6	Swiss land	ODL & OID & NIDL& NID & Residence Permit		
	Austria	E-Card		
	Netherland	ODL & OID & NIDL& NID		
	Belgium	ID		
	Sielaff & Sandenvendo & Lekklerland	Neutral Card		

#### Introduction

DCMS is an outstanding product to provide the function of age verification. It is designed by ICT, which can be installed in equipments as an auxiliary device. DCMS checks the date of birth of customers' driver license, old identification card, or new identification card for the age 18. It is fully complied the privacy act. It checks the date of birth only.

This device can be used to perform age verification for restricted products or services such as alcohol, tobacco, erotic toys, movies, night clubs, or membership clubs to the people who are older than 18 years old for purchasing. This device is designed for both indoor and installation and outdoor environments. Power saving is available for outdoor machine (by battery or solar cell system) for longer batter lifetime.

#### **Features**

- Fast Recognition Speed with High Acceptance Rate.
- Strong & Water Proof Structure Design.
- Sleep Mode for Power Saving.
- Simple & Easy Installation.
- Build In IrDA Function for Software Upgrade.
- · High System Security.

### **Specification**

• Power Requirement: 9~45V DC

• Swipe Way: One Way

• Speed ignition: Approx. 2 seconds after swiping

• Interface: Pulse, MDB, RS232

• Power Consumption: 12V DC-Standby: 0.1A, 1.2W

Operation: 0.2A, 2.4WMaximum: 0.25A, 3W

• Sleep Mode: 80μA, 0.96mW

• Operation Environment


Operation Temperature: -20°C~60°C
 Storage Temperature: -30°C~70°C

Operating Humidity: 30%~95%RH(no condensation)
 Storage Humidity: 0%~95%RH(no condensation)

• Real Time Counter: Deviation: ±8 mins/year


Weight: Approx. 0.82 kgInstallation: Indoor/ Outdoor

### **Dimension**

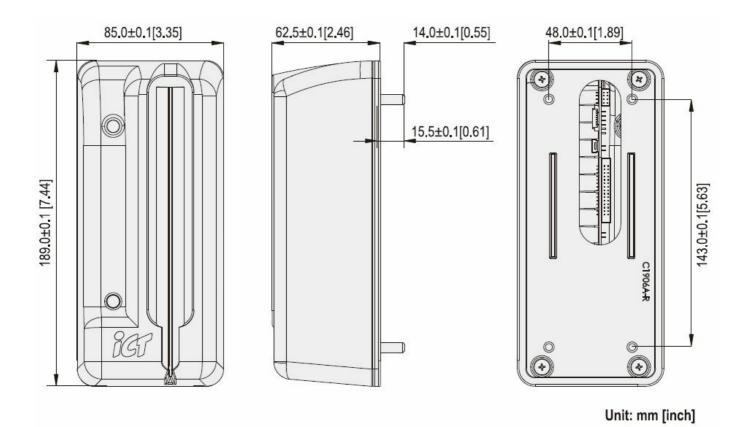


5 FIG.01


### Installation

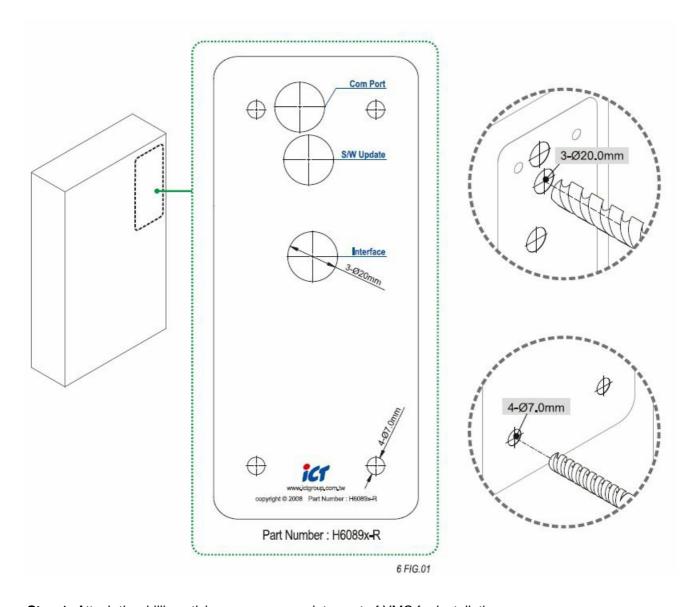


- Step 1: Attach the drilling sticker on an appropriate spot of VMC for installation.
- Step 2: Drill a small hole on every center of seven crosses by a 02mm drill, then switch the drill to diameter 07.0mm & 020.0mm to enlarge the holes.
  - Warning: After drilling, please smooth the holes' edges to make sure there is no deckle.

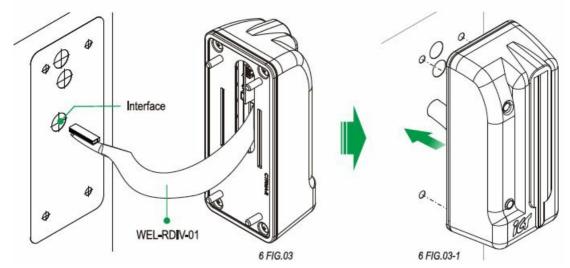


- Step 3: Put harnesses(#WEL-RDIV-01) into the hole from rear side and connect to DCMS (please refer to Step 5. Standard MDB Connection), install DCMS after connection.
  - Please roll the cable and then bore it through VMC to prevent cable damage. Change a new cable whenever a cable is broken.

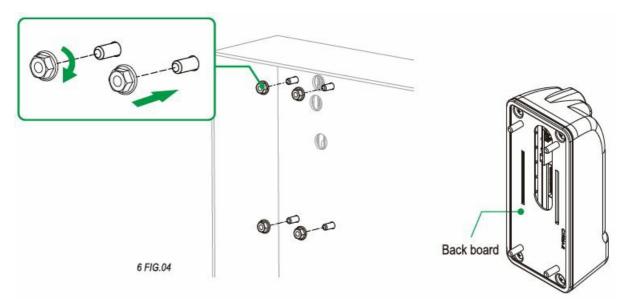


- Step 4: Open the front door of the vending machine and fasten the screw nuts.
  - Warning: The screw thread is able to abide by maximum 1/4 turn when it is tight already, over tighten screw nuts can cause screw thread abrasion. Please change DCMS back board when screw thread on it is abraded. Please replace the screw when it is broken.

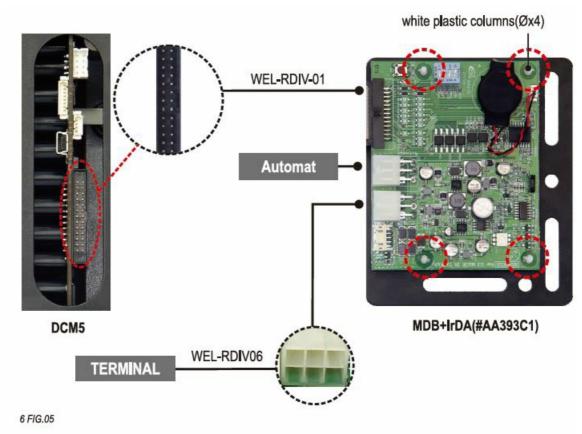

- Step 5: Standard MDB Connection.
  - Before connecting the harness (#WEL-RDIVO1) to IrDA MDB module (#AA393C1), please make sure the battery was installed on the board. The wire of battery was connected firmly to the board; and PCBA is firmly placed in white plastic columns.
  - Then connect the harness (#WEL-RDIVO1) to IrDA MDB module (#AA393C1)
  - Warning: Please turn the power off before connecting.

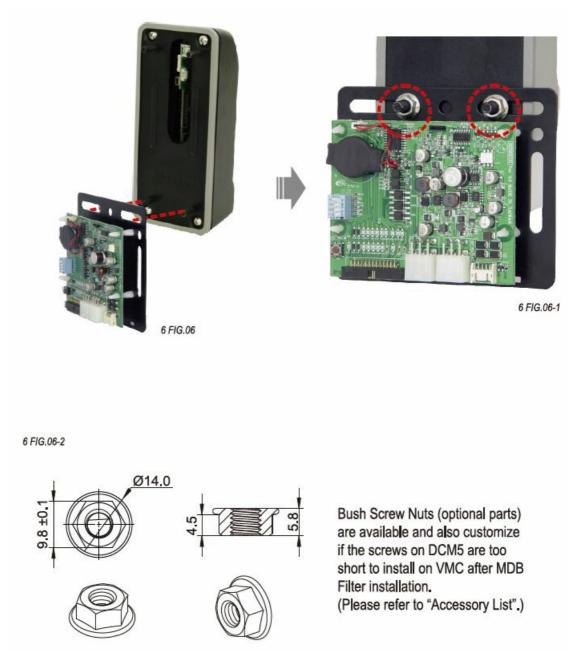

- Step 6: Installation MDB Filter on DCMS
  - 1. Please make IrDA MDB Module (#AA393C1) connector side to downward as shown in 6 FIG.06.
  - 2. Fit the holes on IrDA MDB module to the lowest two screws on DCMS as shown in 6 FIG.06-1.
  - 3. Move the module metal frame to right to appropriate location and fasten the screw nuts as shown in 6 FIG.06-2.
- Step 7

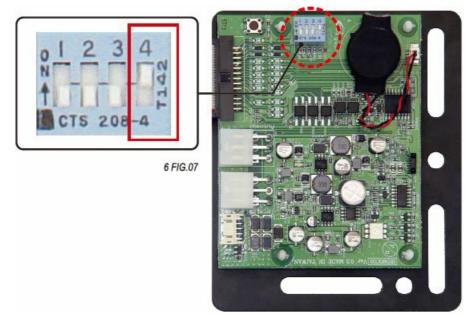

- After DCMS has been installed firmly completely, apply power to DCMS.
- All wires and parts of DCMS can be neither on-line plugged nor on-line unplugged.
- DCMS will flash green light when power is applied. And then you may test it by valid O1D, valid DL, or NID.

### Please refer to page 20 for further light message information


- After testing O1D/ DL/ NID, please test sleeping function.
- Set dip switch 4 to "ON".
- DCMS will not sleep when dip switch 4 is ON.
- Then set dip switch 4 to "OFF".
- When VMC does not send any signals to DCMS, DCMS will sleep in 5 seconds.
- Make sure DCMS has been well installed; and it will work well correctly after these tests successfully.

Warning: Please contact ICT-E for support when you have any questions about DCMS.

## **Download**

Software Download and Upgrade by FP-004


Download Directly:

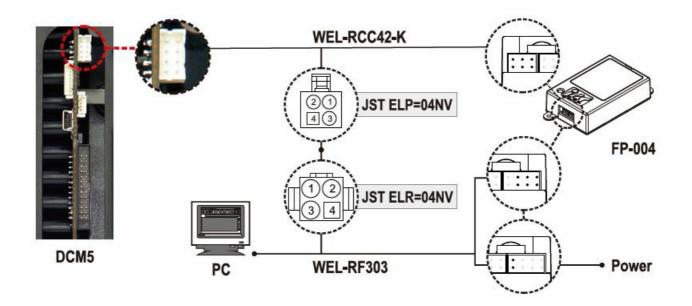

Warning: Please turn the power off before connecting.


### **Download Indirectly**

### • Step 1

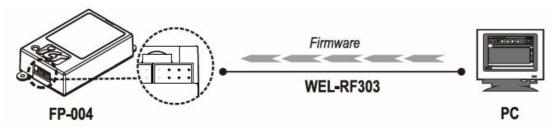

- Connect FP-004 to PC as FIG.02 and download firmware from PC to FP-004.
- When the firmware is saved completely in FP-004, you may disconnect it.

#### • Step 2

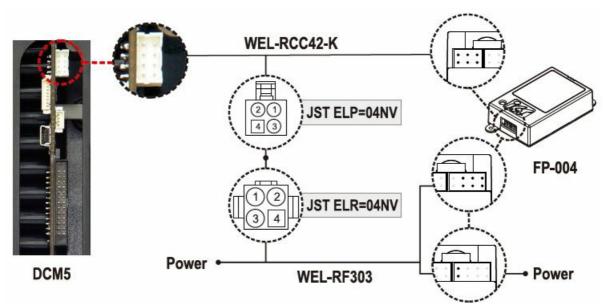


 Connect FP-004 to DCMS as FIG.03 and download the firmware which is saved in FP-004 from Step1 to PC.

**Warning:** Power must be applied to DCMS after connecting. Please contact ICT-E for support when you have any questions about DCM5.


## **Upgrade Power Saving MCU**

### • Step 1

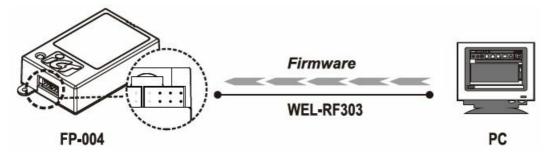

- Connect FP-004 to PC as shown in FIG.01 and download firmware from PC to FP-004.
- When the firmware is saved completely in FP-004, you may disconnect it.

### • Step 2

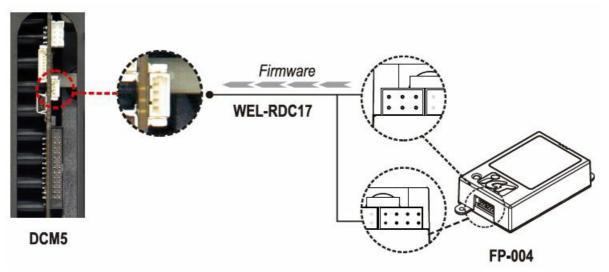


 Connect FP-004 to DCM5 as FIG.02 and download the firmware which is saved in FP-004 from Step1 to PC.

Warning: Power must be applied to DCM5 after connecting.


# Software Download by IrDA Kit

• Step 1

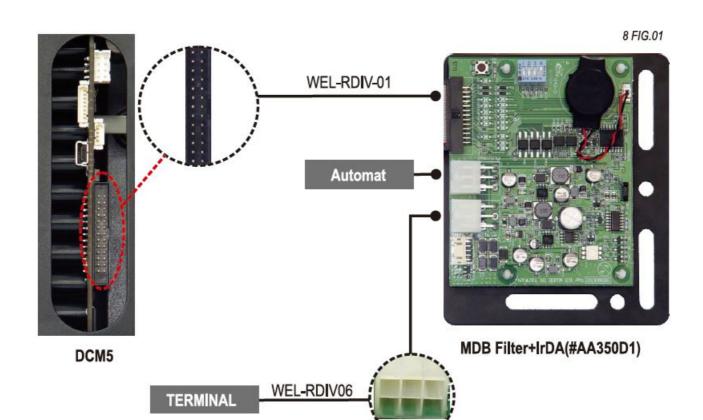


• Connect DCMS as followings.

## • Step 2

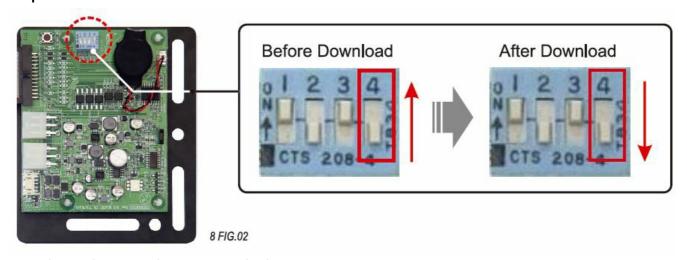

- Switch SW4 into "ON" to wake DCMS up and download.
- (Switch SW4 back to "OFF" after downloading.)
  - Warning: Before downloading software, please turn on the power of vending machine.

### • Step 3

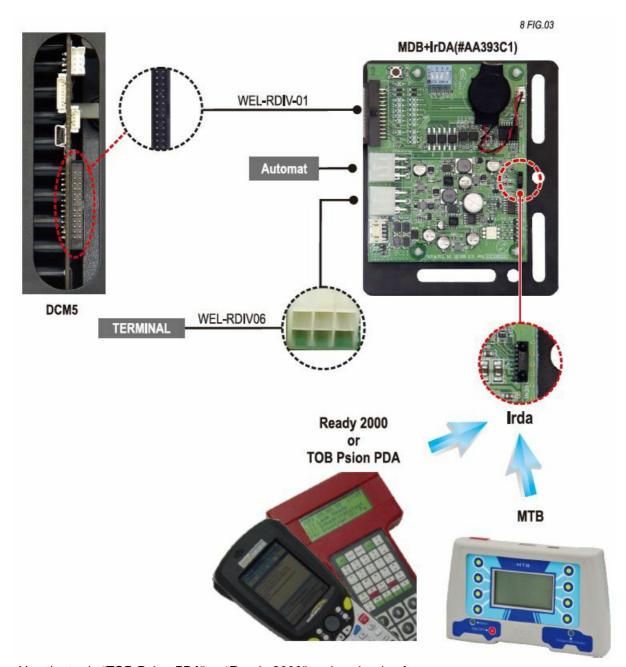

• Use the tools "TOB Psion PDA" or "Ready 2000" to download software.


# **LED Status**



8 TABLE 01

Color	Status	Definition
Blue	Flash	Download Successfully
Green	Flash	Receive Software from Tools
Red	Flash	Download Failed

# **DCM5 Connectors**

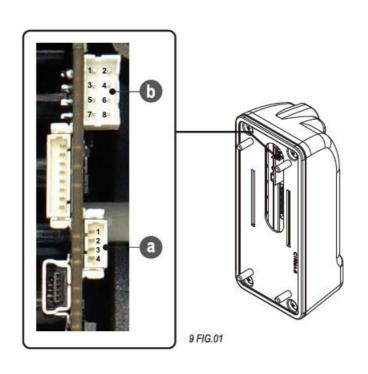





Software Update Connector		
Pin No.	Define	Input/Output
1	SSS1	Input
2	GND	Input
3	/Reset	Input/Output
4	Test	Input

9 TABLE 01

b.




Com Port Connector		
Pin No.	Define	Input/Output
1	GND	Common
2	TX1(Debug)	Output
3	RX1(Debug)	Input
4	Reserved	Reserved
5	/Reset	Input
6	+5V DC	Output
7	RX2(Device)	Input
8	TX2(Device)	Output

9 TABLE 02

# MOB+ IrDA:

Burglarproof System & Build-in IrDA Function.

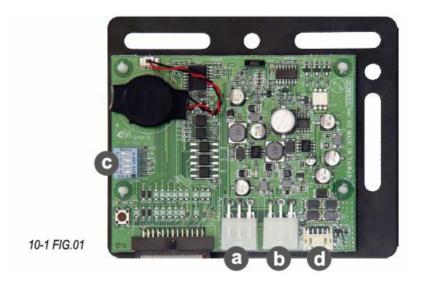

a.



To Automat Connector Pin Definition		
Pin No.	Pin Name/Function	Input/Output
1	9~45V DC	Input
2	GND	Input
3	Wakeup Trigger	Input/Output
4	Master Receive	Output
5	Master Transmit	Input
6	Communication Common	Common

10-1 TABLE 01

b.



To Terminal Connector Pin Definition			
Pin No.	Pin No. Pin Name/Function Inp		
1	9~45V DC	Output	
2	GND	Output	
3	Wakeup Trigger	Input/Output	
4	Terminal Transmit	Input	
5	Terminal Receive	Output	
6	Communication Common	Common	

10-1 TABLE 02

C.



DIP SW				
Function	SW1	SW2	SW3	SW4
MDB	OFF	OFF		
Pulse(Age Limit 16 years)	ON	OFF		
Pulse(Age Limit 18 years)	OFF	ON		
RS232	ON	ON		
Communication after Swiping Card: (under MDB protocol)			OFF	
keep Communication			ON	
Sleep Mode (Outdoor)				OFF
Normal Mode (Indoor)				ON

10-1 TABLE 03




Pulse Interface Define				
Pin No.	Pin Name/Function	Input/Output		
1	+9V~+45VDC	Input		
2	GND	Input		
8	INHIBIT	Input		
10	CREDIT(O.D.)	Output		


10-1 TABLE 04

#### **Harness**


### **WEL-RDIV06**

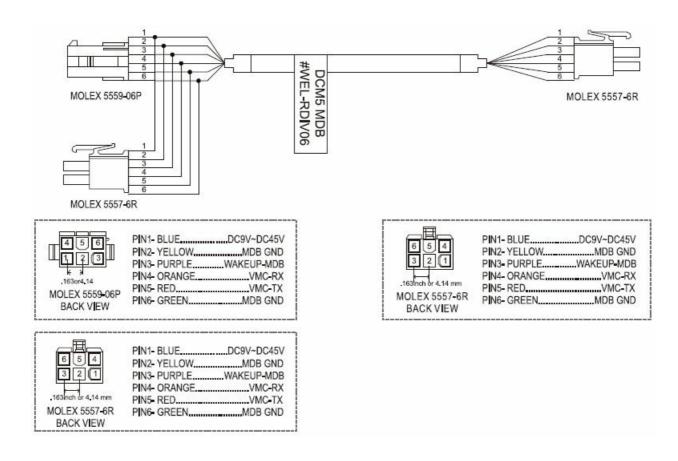


WEL-R7U06 (RS232 Interface)

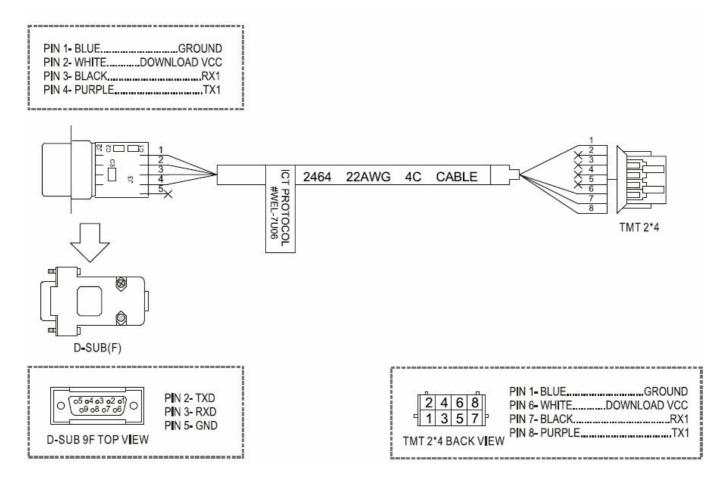


### **WEL-RDCOB** (Pulse Interface)

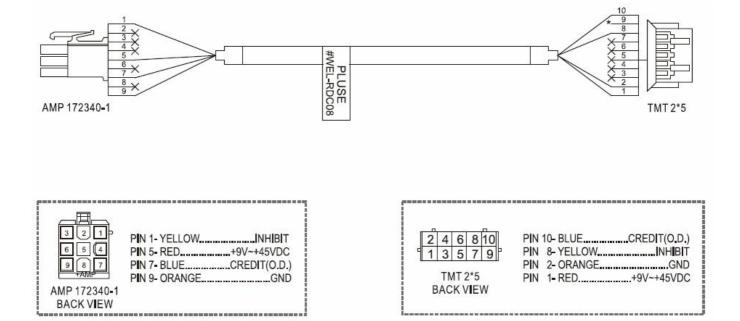

How to use DCM5

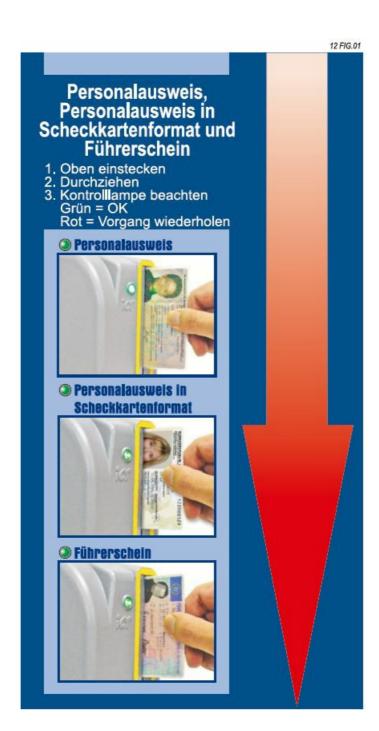

1. Hold driving license, old ID, or new ID (one of these three) and swipe it as following figure.

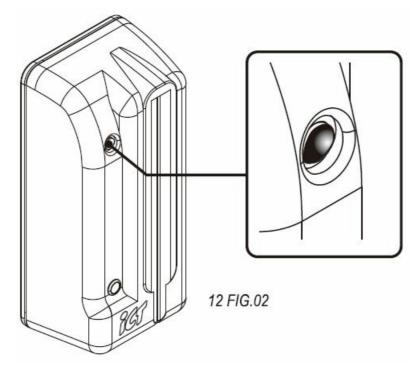

2. One second after swiping it, for a valid card, there will be a sound as "beep" for a counterfeit card, there will be two sounds as "beep beep"; in the meantime, LED light will light up to indicate the status of the DCMS. Please refer to TABLE 01-LED flashes to check the status of the document.

LED Light				
RED	GREEN	Status		
	*Flashes	Standby (Normal Mode ON)		
*Flashes		Standby (Sleep Mode ON & Dip SW3 ON)		
Blink By Turns		Card Inserted		
	ON	Card PASS		
ON		Card NG		


Warning: If LED lights red constantly, please contact ICT-E for technical support.

### Maintenance

### Cleaning

If DCM5 shows error massages when the document is normal, please use the cleaning card to clean internal part without disassembling, and then test DCMS by inserting the document again. Please follow steps below to clean DCMS.

• Step 1.

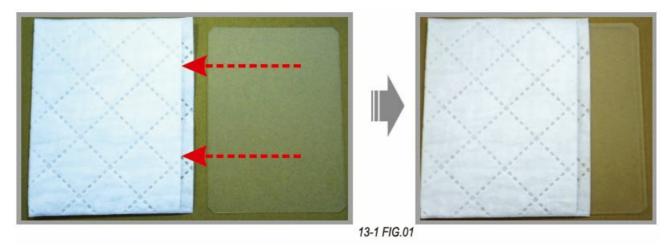

• Put the card in cloth as shown in FIG.01.



13-1 FIG.02



13-1 FIG.03


- Step 2.
  - Wet the cloth by water. Care should be taken that the liquid should not drop from the card.
- Step 3.
  - Hold the cleaning card, slightly insert into the top of DCM5, and swipe the card back, and forth for several times.
  - (Change the cloth and dean again if it necessary.)

## Warning

1. Do not pour any volatile liquid (such as Methanol, Ethanol, thinner, and Acetone ... etc.) On the cloth.

- 2. After cleaning, please throw the cloth away and keep the card.
- 3. If the situation can not be solved after cleaning process, please try to disassemble and clean the internal part.

### **Battery Replacement**

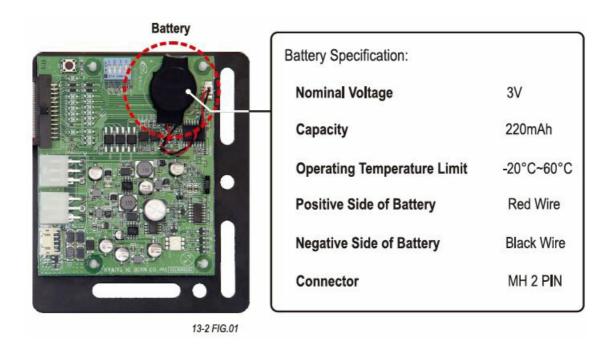

Normally, battery replacement should be replaced yearly, to purchase new batteries, please contact ICT (Part Number: #BAT-R0017) or follow the battery specifications as followings to purchase appropriate batteries for preventing PCB damage.

### **Accessory List**

**DCM5 Standard Package** 

DCM5 Standard Package						
Part Name	Part Number	Quantity	Picture			
Bezel Sticker (German)	H60840-R	1 pcs	Personal discrete in a fine of the control of the c			
MDB Cable	WEL-RDIV06	1 pcs				
MDB Interface Cable	WEL-RDIV01	1 pcs				
Rear Drilling Sticker	H60890-R	1 pcs	DESCRIPTION OF THE PROPERTY OF			
M6 Bush Screw Nut Kit	\$6007000	1 set (4pcs)				

DCM5 Optional Parts				
Part Name	Part Number	Quantity	Picture	
FP <b>-</b> 004 Kit	5RTM-53P00DC3-01	1 set		
Test Card	H67450 <b>-</b> R	1pcs	12345 A PRIVADE 12345 C 67890 D 12345 E 67890 D 12345 C 67890 D 12345 C 67890 D 12345 C 67890 F 12345 C 67890 H	
Calibration card	H64080 <b>-</b> R	1pcs	DCMS White Card	

## **Contacts**

## **International Currency Technologies Corporation**

### **ICT Taiwan**

• No.28, Ln. 15, Sec. 6, Minquan E. Rd., Neihu Dist., Taipei City 114, Taiwan

Tel: 886-2-2793-1236Fax: 886-2-2793-6125

• E-mail: <a href="mailto:sales@ictgroup.com.tw">sales@ictgroup.com.tw</a> ( For Sales)

• E-mail: fae@ictgroup.com.tw ( For Customer service )

• Website: www.ictgroup.com.tw

### **ICT Europe GmbH**

• Hubert-Wollenberg-Str.1, D-40878 Ratingen, Germany

Tel: +49-0-2102-123-775-0
Fax: +49-0-2102-123-775-775
E-mail: sales@icteurope.de

©2012 International Currency Technologies Corporation

### **Documents / Resources**



<u>iCT H6422G-R Interational Currency Techologies</u> [pdf] Installation Guide H6422G-R Interational Currency Techologies, H6422G-R, Interational Currency Techologies, C urrency Techologies

### References

• User Manual

Manuals+, Privacy Policy