

# idatalink BLADE-AL Network Programmable Data Immobilizer Integration Cartridge Installation Guide

<u>Home</u> » <u>idataLink</u> » idatalink BLADE-AL Network Programmable Data Immobilizer Integration Cartridge Installation Guide



Automotive Data Solutions Inc.

SERIES

HK10

INSTALL GUIDE

COM-BLADE-AL(DL)-HK10-EN

AVAILABLE FOR: COM-BLADE AL Rev. Date: May 28, 2021

Doc. No.: ##75784##

PATENT NO. US 8,856,780 CA 2759622

PLEASE VISIT WWW.IDATALINK.COM FOR COMPLETE PRODUCT DETAILS

The brand names and logos found in this guide are property of their respective owners. Automotive Data Solutions Inc. © 2021

#### **HYUNDAI**

**NOTICE:** The manufacturer will accept no responsibility for any electrical damage resulting from improper installation of this product, be that either damage to the vehicle itself or to the installed device. This device must be installed by a certified technician. This guide has been written for properly trained technicians; a certain level of skill & knowledge is therefore assumed. Please review the Installation Guide carefully before beginning any work.

**TERMS OF USE:** automotive data Solutions inc. ("ADS") products are strictly intended for installation by Certifi ed Technicians who are employed by a registered business specialized in the installation of automotive aftermarket

electronics products. Prior to beginning installation of an adS product in a vehicle, it is the Certifi ed Technician's responsibility to review the most current Product Guide, install Guide, and vehicle-specifi c notes available in Weblink®. ADS is not responsible for any damages whatsoever, including but not limited to any consequential damages, incidental damages, damages for loss of time, loss of earnings, loss of profi t, commercial loss, loss of economic opportunity, and the like that may or may not have resulted from the use, misuse, improper installation or operation of its products. Purchasers sole contractual remedy is refund of the purchase price of the adS product(s). adS reserves itself the right to suspend any Weblink® account without notice and decline to offer technical support to non-Certifi ed Technicians, non-compliant Certifi ed Technicians or end users.

Contents [ hide

1 INSTALL TYPE SELECTION

2 TYPE 1 – WIRE CROSS REFERENCE
CHART

3 TYPE 1 – WIRING DIAGRAM

4 CARTRIDGE INSTALLATION

5 MODULE PROGRAMMING PROCEDURE

6 IDENTIFY VEHICLE YEAR

7 MODULE DIAGNOSTICS

8 FACTORY RESET PROCEDURE

9 Documents / Resources

9.1 References

10 Related Posts

### **INSTALL TYPE SELECTION**

										FE	ATUI	RES						
MAKE	MODEL	YEAR	INSTALL TYPE	DATA IMMOBILIZER BYPASS	ARM DEM ALARM	DISARM OEM ALARM	A/M ALARM CTRL FROM OEM REMOTES	A/M RS CTRL FROM 0EM REMOTES	PRIORITY UNLOCK	DOOR LOCK	DOOR UNLOCK	TRUNK/HATCH RELEASE	DOOR STATUS OUTPUT	TRUNK STATUS OUTPUT	HOOD STATUS OUTPUT*	E-BRAKE OUTPUT	RAP SHUTDOWN CTRL	MUX PARKING LIGHT CTRL
HYUNDAI	Kona STD key AT	18-22	1		•			•	•			•	•		•	•	•	•


<sup>\*</sup>Available only if vehicle is equipped with factory hood switch.


## TYPE 1 – WIRE CROSS REFERENCE CHART

MAKE	MODEL	YEAR	DESCRIPTION	CONNECTOR	COLOR	CONNECTOR	POSITION	WIRE	POLARITY	MODULE	COMPONENT
-	0		12V	~	Black	06 pin	05	Red	(+)	Ignition switch	~
			Accessory	~	Black	06 pin	02	Black	(+)	Ignition switch	~
			Starter	~	Black	06 pin	03	White	(+)	Ignition switch	~
			Ignition	~	Black	06 pin	04	Pink	(+)	Ignition switch	~
	Kona STD key AT		Brake	EM11	Red	68 pin	47	Green	(+)	Driver kick panel	~
		18-21	CanH	~	White	16 pin	06	White	(DATA)	Dash fuse box, rear view	~
		18-21	CanL	~	White	16 pin	05	Black	(DATA)	Dash fuse box, rear view	~
			Immoblizer Data*	EM11	Red	68 pin	29	Brown/Orange	(DATA)	Driver kick panel	~
			Parking Light	~	Black	16 pin	14	Blue	(MUX)	Steering column	~
			Ignition 2**	~	White	24 pin	17	Pink	(+)	Dash fusebox, rear view	~
_			Accessory 2**	~	White	38 pin	32	Orange	(+)	Dash fusebox, rear view	~
HYUNDAI			Tach	~	~	~	~	~	(AC)	Injector	~
Y			12V	~	Black	06 pin	05	Red	(+)	Ignition switch	~
I			Accessory	~	Black	06 pin	02	Black	(+)	Ignition switch	~
			Starter	~	Black	06 pin	03	White	(+)	Ignition switch	~
			Ignition	~	Black	06 pin	04	Pink	(+)	Ignition switch	~
			Brake	EM11	Red	68 pin	47	Green	(+)	Driver kick panel	~
	Kona STD key AT	00	CanH	~	White	16 pin	06	Red	(DATA)	Dash fuse box, rear view	~
		22	CanL	~	White	16 pin	05	Blue	(DATA)	Dash fuse box, rear view	~
			Immoblizer Data*	EM11	Red	68 pin	29	Brown/Orange	(DATA)	Driver kick panel	~
			Parking Light	~	Black	16 pin	14	Blue	(MUX)	Steering column	~
			Ignition 2**	~	White	24 pin	17	Pink	(+)	Dash fusebox, rear view	~
			Accessory 2**	~	White	38 pin	32	Orange	(+)	Dash fusebox, rear view	~
			Tach	~	~	~	~	~	(AC)	Injector	~


 $<sup>^{\</sup>star}(\text{U.S. vehicles})$  connect only if vehicle is equipped with immobilizer.  $^{\star\star}\text{Optional connection}$ 

# **TYPE 1 – WIRING DIAGRAM**

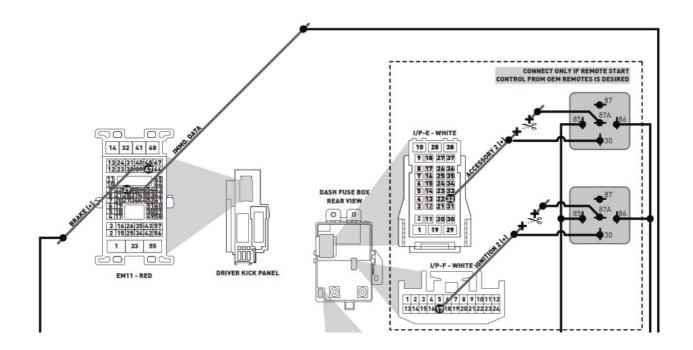

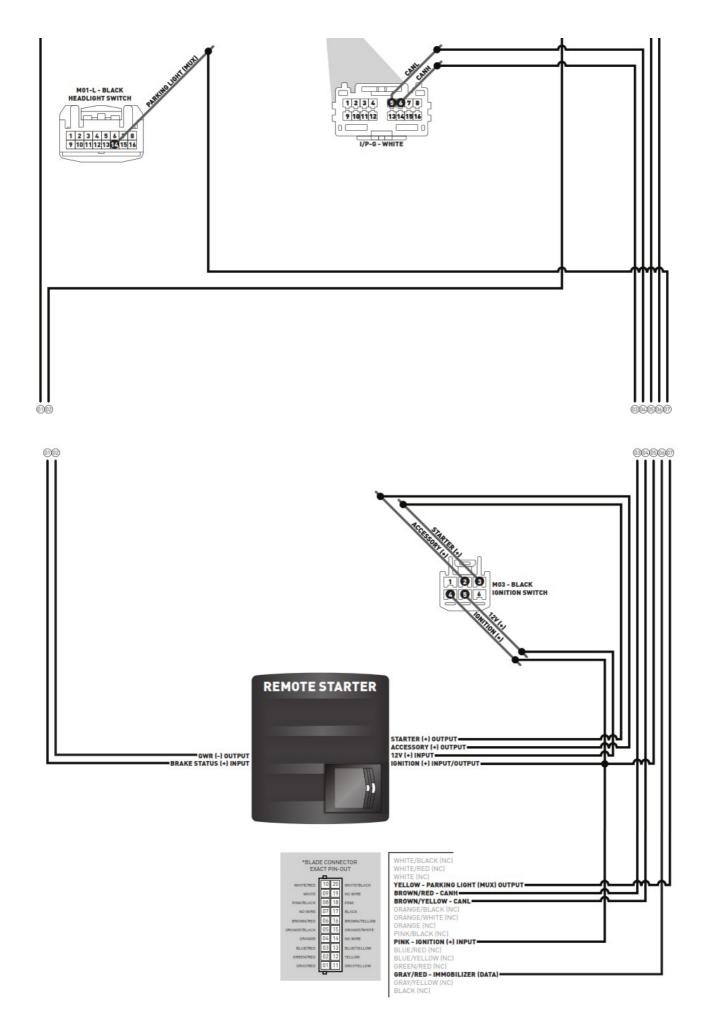


1. Slide cartridge into unit. Notice button under LED.

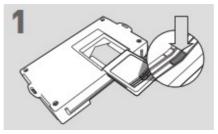


2. Ready for Module Programming Procedure.

### MODULE PROGRAMMING PROCEDURE

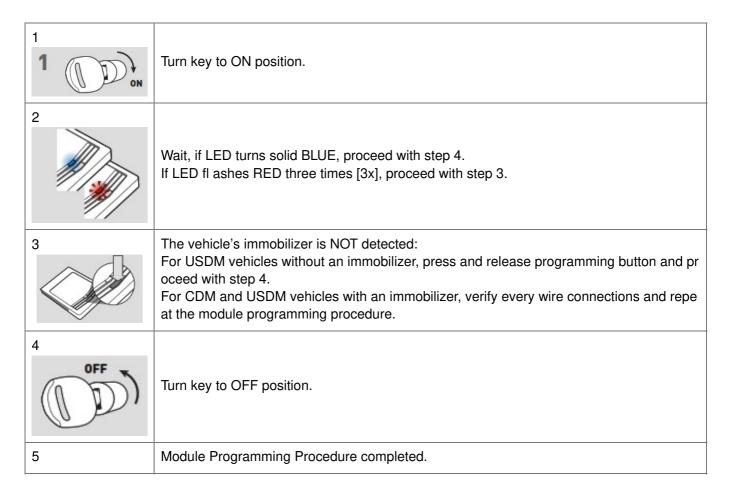

### **IDENTIFY VEHICLE YEAR**

1. Locate the Vehicle Identification Number (VIN), identify the 10th character then match it to its corresponding year.

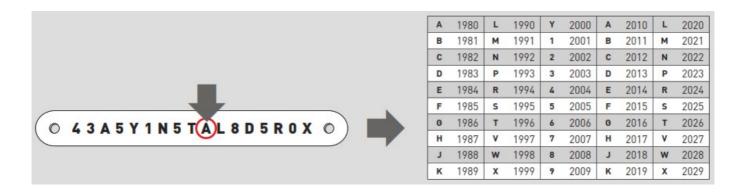

# **MODULE DIAGNOSTICS**

## DlaGnoStlcS

	leD StatUS	DUrInG ProGraMMInG	DUrInG reMote Sta rt	WItH IGnItIon off
***	Flashing RED	Missing/wrong information fr om fi rmware or vehicle	Incorrectly program med	Incorrectly programmed or connected
	Solid RED	Waiting for more vehicle information	Incorrectly program med	Not programmed waiting for m ore vehicle information
***	Flashing BLUE	Additional steps required to c omplete programming	Correctly program med and operation al	False ground when running st atus from remote starter
111	Solid BLUE then OFF	Correctly programmed	Reset in progress	Reset in progress
M	OFF	No activity or already progra mmed	Invalid ground whe n running status from remote starter	At rest and ready for a remote start sequence

# **FACTORY RESET PROCEDURE**

1	DISCONNECT cartridge from remote starter.
2	PRESS AND HOLD programming button while re-connecting cartridge to remote starter.
3	LED will fl ash red. Immediately RELEASE programming button.
4	LED will turn solid red for 2 seconds. RESET COMPLETED.
5	RECONNECT all connectors. Repeat programming procedure.

## WWW.IDATALINK.COM

Automotive Data Solutions Inc. © 2021

## **Documents / Resources**



<u>idatalink BLADE-AL Network Programmable Data Immobilizer Integration Cartridge</u> [pdf] I nstallation Guide

BLADE-AL, Network Programmable Data Immobilizer Integration Cartridge

## References

• <u>(i) iDatalink - Home</u>

Manuals+, home privacy