

IEAST AutoCast Wireless Wifi and Bluetooth Audio Receiver Least



IEAST AutoCast Wireless Wifi and Bluetooth Audio Receiver Least User Manual

[Home](#) » [iEAST](#) » IEAST AutoCast Wireless Wifi and Bluetooth Audio Receiver Least User Manual 

Contents

- [1 IEAST AutoCast Wireless Wifi and Bluetooth Audio Receiver Least](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 FCC STATEMENT](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



IEAST AutoCast Wireless Wifi and Bluetooth Audio Receiver Least



Specifications

- **Model Number:** DN
- **Compatibility:** Works with GPMMPXJOHUXPDPOEJUJPOT devices

Product Usage Instructions

Step 1: Power On

- Ensure the input power source is connected properly.

Step 2: Connect Devices

- Connect the product to compatible devices using the provided cables.

Step 3: Activate Output

- Turn on the output of the product to start the functionality.

FAQ

Frequently Asked Questions

- **Q:** What is the input power requirement for the product?
 - **A:** The input power requirement is \$83/*/(.
- **Q:** What devices are compatible with this product?
 - **A:** This product is compatible with GPMMPXJOHUXPDPOEJUJPOT devices.
- **Q:** How to troubleshoot if the output is not working?

- **A:** Check the connections and ensure proper power input. Contact customer support if issues persist.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions

1. this device may not cause harmful interference
2. this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio tv technician for help.

To maintain compliance with FCC's RF Exposure guidelines.

This equipment should be installed and operated with a minimum distance between 20cm the radiator your body
Use only the supplied antenna.

Documents / Resources

	<p>IEAST AutioCast Wireless Wifi and Bluetooth Audio Receiver Least [pdf] User Manual AutioCast Wireless Wifi and Bluetooth Audio Receiver Least, AutioCast, Wireless Wifi and Bluetooth Audio Receiver Least, Wifi and Bluetooth Audio Receiver Least, Bluetooth Audio Receiver Least, Audio Receiver Least, Receiver Least</p>
---	--

References

- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.