



iFetch Too Instruction Manual

[Home](#) » [iFetch Too](#) » iFetch Too Instruction Manual 

Contents

- 1 Instruction Manual
 - 1.1 iFetch Too
- 2 IMPORTANT SAFETY INFORMATION
- 3 PARTS LIST
- 4 SET UP
- 5 BEFORE PLAY
- 6 TO PLAY
- 7 AFTER PLAY
- 8 MAINTENANCE & CLEANING
- 9 FREQUENTLY ASKED QUESTIONS
- 10 WARRANTY
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

Instruction Manual





iFetch Too



ALWAYS read, understand and follow all warnings and instructions for your iFetch Too before use. Keep for future reference.

IMPORTANT SAFETY INFORMATION

The user must read and understand these Instructions Sheets and the Warranty before using the iFetch.

Set up is the end user's responsibility and beyond the control of iFetch, LLC. Therefore, iFetch exclusively limits its Warranty to the repair or replacement of a defective product. Damage to your home, your property, or any person or pet is excluded.

- Your iFetch must be inspected for signs of wear, damage and fatigue before each use. If damaged, do not use.
- This product is only intended for recreational use to throw tennis ball sized (diameter approximately 2.6") iFetch (or similar) balls for your pets. Your iFetch is NOT a child's toy.
- Do not attempt to modify your iFetch or any of the system components.

Review all Warnings, Instructions, and Warranty information carefully. Failure to follow these warnings and instructions will void the Warranty.

Call iFetch at (512) 219-3271 or visit goifetch.com, if you have any questions regarding the use of your iFetch.

PARTS LIST



A



B



C

Part	Description
A	One (1) iFetch Too
B	One (1) Battery Charger
C	Three (3) Balls (2.6" diameter)

NOTE:

Your iFetch Too will keep throwing balls for approximately 250 launches on a fully charged battery.

SET UP



WARNING

To prevent SERIOUS INJURY:

- INSPECT for signs of wear, corrosion, and fatigue BEFORE each use. DO NOT use if damaged.
- DO NOT operate when any part of the machine is wet or standing in water. DO NOT use when raining. An electric shock hazard may exist if the unit is plugged in while or after it has been exposed to water. If there are damp or wet conditions, ONLY use the internal rechargeable battery as a power source.
- DO NOT attempt to modify your iFetch or any of the system components

1. Check that the High– Low slider is set to the desired setting.
2. Plug in the battery charger or press the button once on your iFetch to check the battery charge level.
3. Make sure your iFetch is on a flat, level surface before each use.

BEFORE PLAY

WARNING

To prevent **SERIOUS INJURY** or **PROPERTY DAMAGE**:

- **INSPECT** for signs of wear, corrosion, and fatigue **BEFORE** each use. **DO NOT** use if damaged.
- **NEVER** stand or allow your pet to stand directly in front of the iFetch.
- **DO NOT** point toward breakable objects, including windows, light fixtures, and picture frames.

1. Slide the High–Low slider on the rear of your iFetch to the desired setting:

- Down (White)—Limits launching to only the low distance setting
- Up (Red)—Allows for any launch distance setting

2. Press the button on the rear of your iFetch to turn the unit ON. The button light will illuminate to indicate the battery charge level.

- Green—Fully charged
- Orange—Charge getting lower (or is recharging, if the battery charger is connected)
- Red—Battery is low and needs to be recharged
- Flashing Red—Battery is too low to function properly. Recharging is required prior to continued use.

One arrow light will turn on blue and the launch distance will be approximately 10 ft. (3 m).

3. To increase launch distance, first slide the High–Low slider up (if necessary), then press the button to cycle through settings:

- Two Blue Lights—Approximately 25 ft (7.5 m)
- Three Blue Lights—Approximately 40 ft (12 m)
- One Blue Light, Flashing Randomly—Random distance somewhere between 10 ft (3 m) and 40 ft (12 m)

Launch distance may be effected by the condition of the ball (e.g., wet or dirty). **DO NOT** use damaged balls with your iFetch.

NOTE:

The light(s) will turn off after about 30 seconds, but the iFetch will remain on (in standby mode) until you or your pet drops another ball into the funnel.

TO PLAY



WARNING

To prevent **SERIOUS INJURY** or **PROPERTY DAMAGE**:

- NEVER put hands or fingers inside the iFetch or look down the barrel when the unit is ON or in STAND-BY mode.
 - Make sure all persons and pets are clear of the iFetch and the path of the ball before powering on.
 - ONLY use iFetch balls or balls of the same diameter (approx. 2.6") with your iFetch. NEVER attempt to use your iFetch with any other type of ball or any foreign objects.
 - Make sure the iFetch is aimed and functioning properly before each use.
1. When the iFetch is powered ON, only insert one (1) ball into the iFetch funnel at a time. Your iFetch launch mechanism will quickly start spinning. Once the launch mechanism has reached its operating speed, the ball will drop into the chute and will continue spinning until the ball is ejected from the iFetch. After the ball is launched the launch mechanism will quickly slow and stop spinning.
 2. Readjust the position of your iFetch as needed.
 3. Use with supervision. Watch to ensure your iFetch is upright and functioning properly.



WARNING

To prevent **SERIOUS INJURY** to your pet:

- NEVER allow your pet to place any part of their body inside the iFetch or look down the barrel when the unit is ON or in STAND-BY mode.
- ALWAYS consider your pet's health during use.
- NEVER exercise your pet to the point of exhaustion. Turn the iFetch OFF when your pet needs to rest and recover.

AFTER PLAY

1. ALWAYS turn your iFetch OFF after use. Press button until no blue arrow lights are illuminated and the button light turns off.
2. Store your iFetch indoors at night and after play in a clean, dry location.

NOTE:

Your iFetch does have a drain in the event it is left outside in the rain. If it gets wet, all water must completely drain and your iFetch should be allowed to fully dry out prior to continued use. Water may corrode the internal components causing your iFetch to no longer function properly.

MAINTENANCE & CLEANING

Your iFetch requires no regular maintenance. If your iFetch needs to be cleaned, use a slightly damp cloth. DO NOT use chemicals or abrasive cleaners.



ALWAYS turn your iFetch OFF prior to cleaning.



DO NOT attempt to clean the launch mechanism.

FREQUENTLY ASKED QUESTIONS

Do I have to use only the iFetch balls?

The iFetch is optimized to launch the iFetch balls, however most other balls that are approximately the same size and weight (e.g. tennis balls) should launch.

What happens if I put other things into the funnel (e.g. coins, rocks, etc)?

NEVER put anything into the iFetch other than iFetch balls (or other tennis ball– sized balls) as that is not the intended use of the iFetch.

My dog slobbers a lot. Is that a problem?

Some dogs slobber more than others. If your dog is a heavy slobberer, you may need to wipe off the balls from time to time or swap over to a dry ball.

For more FAQs, visit goifetch.com.

WARRANTY

iFetch will not be liable under this limited warranty if its testing and examination disclose that the alleged defect or malfunction in the product does not exist or resulted from:

- Failure to follow iFetch's operation and maintenance instructions;
- Unauthorized product alteration;
- Weather conditions;
- Damage to the product caused by any animal;
- Abuse, misuse, negligent acts or omissions of Customer and/or persons under Customer's control; or
- Acts of third parties, acts of God, accident, fire, or other hazards.

CALIFORNIA PROPOSITION 65



WARNING: This product contains chemicals known to the state of California to cause cancer, birth

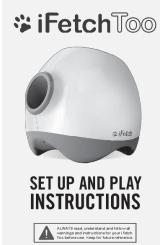
defects or other reproductive harm.

iFetch, LLC
Austin, TX
512-219-3271
goifetch.com



We'd love to hear from you.
support@goifetch.com
512.219.3271
www.goiFetch.com

Documents / Resources

 The image shows the iFetchToo product, a white, dome-shaped automatic ball launcher. Below the product image is a small graphic of the instruction manual cover, which features the text "iFetchToo" and "SET UP AND PLAY INSTRUCTIONS".	<p>iFetch Too iFetch Too [pdf] Instruction Manual iFetch Too</p>
--	--

References

- [iFetch](#)
- [Automatic Dog Ball Launcher - iFetch and iDig Dog Toys](#)