



IFYOO-V108-24G Vone 2.4GHz Wireless Controller User Manual

[Home](#) » [iFYOO](#) » IFYOO-V108-24G Vone 2.4GHz Wireless Controller User Manual

Contents [[hide](#)]

- 1 IFYOO-V108-24G Vone 2.4GHz Wireless Controller
- 2 SAFETY INSTRUCTIONS
- 3 WARRANTY & SUPPORT
- 4 INTRODUCTION
 - 4.1 PRODUCT SPECIFICATION
- 5 PRODUCT OVERVIEW
- 6 PRODUCT FEATURES
- 7 CONNECT TO WINDOWS PC
- 8 CONNECT TO ANDROID DEVICE
- 9 CONNECT TO PS 3
- 10 FAQ
- 11 Documents / Resources
- 12 Related Posts



IFYOO-V108-24G Vone 2.4GHz Wireless Controller



SAFETY INSTRUCTIONS

Warning: This product contains small parts. please do not swallow. Children must use this product under adult supervision.

Recommended age for user: over 12. A This product contains a lithium battery. Please do not leave the controller idle for a long time, otherwise it will easily cause damage

- Please use the accessories in the package for assembly, and do not tamper the power cords, adapter or other parts of the product.
- In case of overheating, unusual smell or smoke, please immediately disconnect the device physically from the mains supply and contact the vendor. When charging the device. ensure good ventilation and always place the unit on non-flammable surfaces.
- In order to avoid product damage, please do not expose it to rain, high humidity or any unspecified outdoor environment. Please use the device in a dry environment.
- Please keep this device clean and dry. and avoid water. dust or other foreign matter into it.
- Please do not place the device near an open flame like a candle or similar.
- Please do not expose the device direct sunshine or over 40 degree Celsius environment.
- Please do not use water, alcohol or chemicals to clean the device directly. When cleaning, please disconnect the device from any power source.
- Please avoid falling down from height level against damage the product. Please use right steps to operate this device correctly and safely.
- Please do not disassemble and repair this device by yourself. If you encounter any problem that cannot be solved, please contact the vendor.



WARRANTY & SUPPORT

[One-year Warranty]

We offer a 90 days free replacement and one-year warranty service from the date of purchase. If there are any problem with the product. please do not hesitate to contact us. This product has a 12 months warranty from the date of purchase. During this period if there is a defect due to faulty materials or workmanship, the retailer from whom you purchased it will replace it with the same or a similar model on presentation of your purchase receipt or proof of purchase. This guarantee does not cover defects arising from accidental damage, misuse or wear and tear, and is available only to the original purchaser of the product. This does not affect your statutory rights.



OFFICIAL WEBSITE

www.ifyoo.net



Customer Service: cs@ifyoo.net

9:00 - 18:00 Monday to Friday



Manuals, Drivers, Firmware Updates

www.ifyoo.net/support



Video Tutorials

www.youtube.com/IFY00



www.facebook.com/IFY00

Product features, appearance and the specifications may be subject to change without prior notice. Please retain this information for future reference.

INTRODUCTION

 
IFYOO VONE 2.4G Wireless Controller (Model No.: IFY00-V108-24G), it's compatible with PC Windows (XP/7/8/10/11), Android devices (Version 4.0 or above, need to fully support OTG) and PS 3.

This controller can automatically identify respective device, and no need to install any driver or root (Windows XP needs to install official Xbox360 driver. If there is a problem with the Windows system, the driver needs to be reinstalled), if the game does not support the controller, button mapping and third party software are required.

PRODUCT SPECIFICATION

- Product : IFY00 VONE 2.4G Wireless Controller
- Model No : IFY00-V108-24G
- Compatibility : Windows PC (XP/7/8/10/11), Android, PS 3
- Connection : 2.4GHz Wireless
- Battery : 600 mAh
- Charging Parameters : 5V / 1A
- Working Current : < 150mA
- Working Temperature : 0-45°C
- Working Humidity : 20-80%
- Product Net Weight : 222±10g
- Product Dimensions : 160 x 110 x 52 mm
- Package Size : 175 x 126 x 70 mm
- Package Contents : 1x VONE Wireless Controller, 1x User Manual 1x Micro-USB Cable, 1x 2.4G Receiver

PRODUCT OVERVIEW

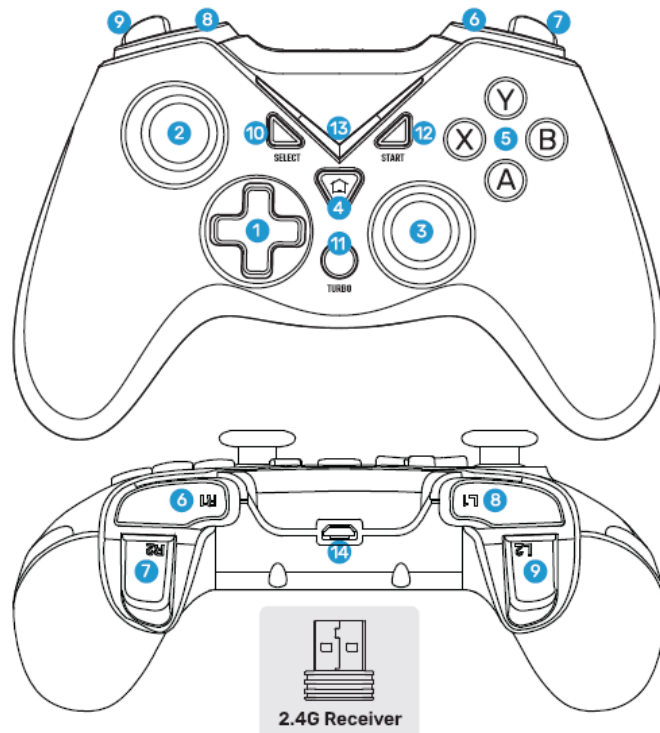

1. D-PAD
2. Left Stick
3. Right Stick
4. HOME
5. ABXY
6. R1
7. R2
8. L1
9. L2
10. SELECT
11. START
12. TURBO
13. Indicator Lights (LED-1/2/3/4)
14. Micro-USB Charging Port

PRODUCT FEATURES



• Indicator Lights

After the connection is completed, you can confirm the status of the controller through the Indicator Lights.

• Charging

If the controller is low on battery, please charge it immediately. Use a Micro-USB cable and 5V / 1A adapter or plug it into your console. PC to charge it. the LED-1-4 indicator lights will blink during charging and turn off

when fully charged.

- **Power off**

Hold down the “L3 + R3 + SELECT+ START” buttons for about 2 seconds to turn off the controller.

 
- **Automatic Sleeping**

- The controller will be shut down after about 30 seconds disconnection.
- The controller will be shut down after about 5 minutes without any action.


- **Reset**

When something goes wrong with the controller. you can reset the controller.

- Find a SIM eject tool or an unfolded paper clip.
- Insert it into the reset hole, hold the button for 3-5 seconds and release.

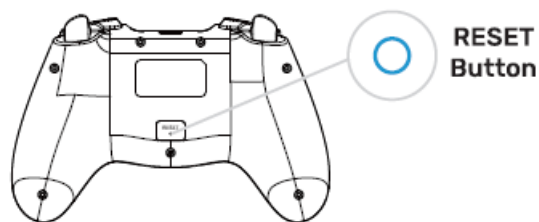

 Turn on / off the backlight effect of the ABXY button

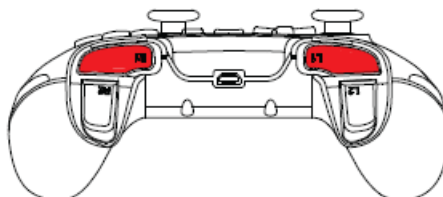

Hold down the “R1 + R2” button

Hold down the “R1 + R2” button for about 5 seconds

It will turn on or turn off the backlight effect of the ABXY button.

- **TURBO Function**

 
Hold down the “the button you want to set to turbo mode” and then press “TURBO” button, TURBO function will be activate for this button. It allows continuous rapid fire.

Notice: To deactivate the TURBO function, you just need to hold down the “the button have been activated the TURBO function” and press “TURBO” button, or you can reset the controller to cancel the TURBO function on all buttons.




- **JD-SWITCH Function**

Press “START+ L3 (press the Left Stick vertically)” key combinations to exchange the function of the O-pad and the Left Stick.

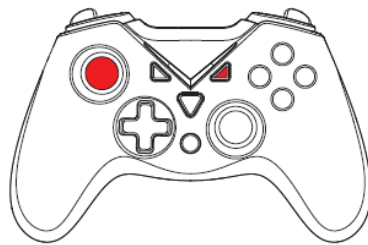

Press "START + L3"

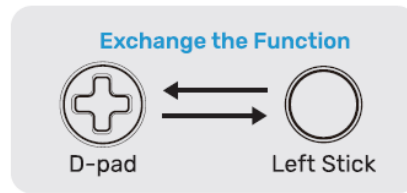 

CONNECT TO WINDOWS PC

Connecting to PC Wirelessly via 2.4G Receiver



 
Connect it to PC

- Plug the 2.4G Receiver into a USB port of the PC.
- Press HOME button to power on the controller. it will automatically connect to the PC.
- After successfully connected. the LE0-2 of the Indicator Lights will keep on.

Then you can use the controller on the Windows PC.

Switch between X-input/D-input

- Hold down the HOME button above 5 seconds, and then Indicator lights color will be changed: X-input(LED-2 on). D-input(LED-1&2 on).

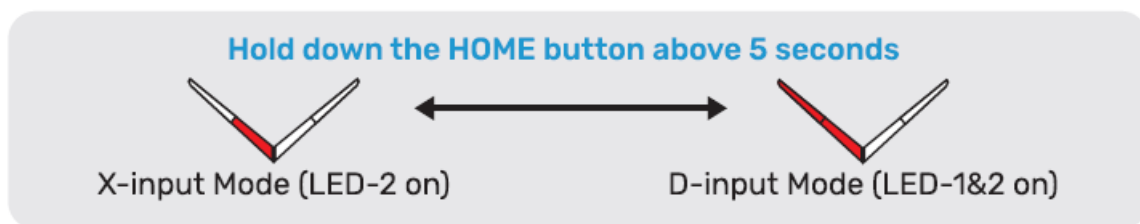

Note:

1. Open a compatible game. navigate to the in-game controller settings and enable the Gamepad option (name may varies from game to game). If the game supports remapping. feel free to do so from the in-game controller settings.
2. Recommended to use the X-input Mode on Windows PC • which supports Plug and Play for games like GTA5, Devil May Cry 4/5, Need for Speed Series. FIFA Series and other more PC 360 games. The PC 360 games refer to those which can be controlled by Microsoft Xbox 360 Controller without any additional settings.
3. Please use the □ -input Mode when you want to play the emulator or other games. you may need to bind the buttons in the game's controller settings.

CONNECT TO ANDROID DEVICE



Connect It to Android

 
- Plug the 2.4G Receiver Into the USB port of the Android device.
- Press HOME button to power on the controller. it will automatically connect to the Android devices.
- After successfully connected. the LED-2 or LED-3 of the indicator Lights will turn on. Then you can use the controller on the Android device.

The controller can identify the device automatically. no driver Installation needed.

Note:

- OTG Adapter with Type-C or Micro-USB port to USB-A was needed for it to work.
- If you want to play Android games. you need to confirm that the game has game controller support. Android version is above 4.0 and OTG function are fully supported by your devices. You may need to remap the buttons with third-party apps. Please contact the game's customer service or visit their official website for more details.
- Sometimes the controller may not work on Android. because the Android system or hardware doesn't support the controller.
- Please make sure that your mobile phone is fully charged, more than 80% is recommended.
- Please make sure that the OTG function of the mobile phone is turned on. or the USB debugging and related functions are turned on.


CONNECT TO PS 3

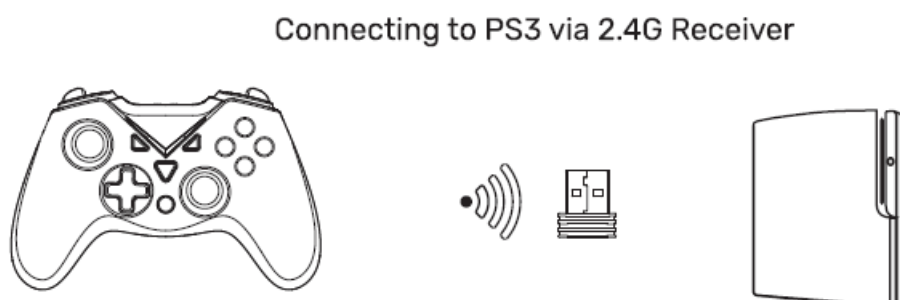

Connect it to PS 3

- Plug the 2.4G Receiver into the USB port of PS3 console.

 - Press HOME button to power on the controller. it will automatically connect to the device.
- After successfully connected. one of the Indicator Lights will turn on. Then you can use the controller on PS 3 console.

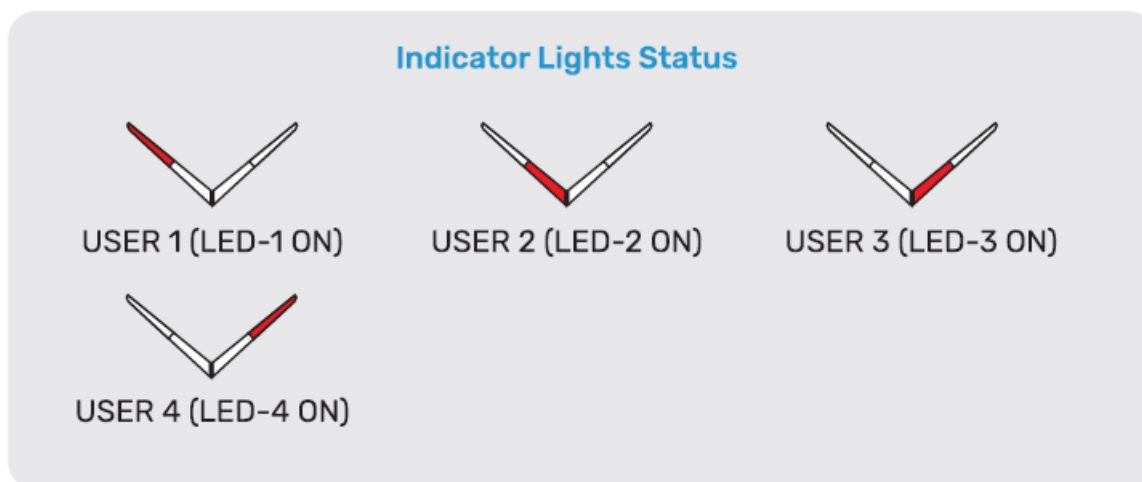

FAQ

Q: What devices can VONE Wireless Controller work with?

A: Windows PC(XP/7/8/10/11). PS 3. Android Smartphone / Android Tablet/ Android TV/ Android Box.

Q: What games will work with the VONE Wireless Controller on my device?

A: It supports most of gamepad enabled games for PC Windows(XP/7/8/10/11) • PS3.

For Android device. you can google the following keywords: “game name” + controller or “game name” + gamepad. maybe you can try to download the Happy Chick Emulator APP: www.happychick.hk

Q: Why are there delays and disconnections when using a wireless connection?

A: It may be caused by electromagnetic interference or other environmental factors. It is recommended to ensure that there are no obstacles between the 2.4GHz wireless receiver and the handle during use. such as computer desks and computer hosts. A USB extension cable is recommended to solve this problem.

Q: Oo I need to install driver when I connect to VONE Wireless Controller to Windows PC?

A: When you connect the VONE Wireless Controller to your windows PC. if your computer system can not recognize the Controller. we recommend that you follow these four steps to solve the problem:

- Connect your VONE Wireless Controller to your Windows PC.
- Download intelligent PC drivers manager “Drive the life” to your computer. this drivers manager will check and recommend the compatible driver needed to download for your Controller.
- Installing the driver recommended by “Drive the life”, when your VONE Controller is recognized by your computer successfully. you can start to play games.
- If the 3 steps above can not solve your problem. please try to install Xbox360 controller software for systems below Windows XP (including XP).

Q: Why the controller does not vibrate?

A: Check out whether the game support vibration function. if the game support vibration function. please check whether the vibration function is enabled in the game settings.

Documents / Resources



[iFYOO IFYOO-V108-24G Vone 2.4GHz Wireless Controller](#) [pdf] User Manual
PR2A, 2A7VG-PR2A, 2A7VGPR2A, IFYOO-V108-24G Vone 2.4GHz Wireless Controller, IFYO
O-V108-24G, Vone 2.4GHz Wireless Controller